



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI 26LD4550U. You'll find the answers to all your questions on the HITACHI 26LD4550U in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI 26LD4550U
User guide HITACHI 26LD4550U
Operating instructions HITACHI 26LD4550U
Instructions for use HITACHI 26LD4550U
Instruction manual HITACHI 26LD4550U

Colour LCD Television

Model Name

19LD4550C
19LD4550U
22LD4550C
22LD4550U
26LD4550C
26LD4550U
32LD4550C
32LD4550U

HITACHI Inspire the Next

USER'S MANUAL
MANUEL UTILISATEUR
BEDIENUNGSANLEITUNG
MANUAL DEL USUARIO
MANUALE D'USO
BRUKSANVISNING
BRUKERHÅNDBOK
BRUGERVEJLEDNING
KÄYTTÖOPAS
ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ
GEBRUIKSAANWIJZING



READ THE INSTRUCTIONS INSIDE CAREFULLY.
KEEP THIS USER'S MANUAL FOR FUTURE REFERENCE.
For future reference, record the serial number of your television:
SERIAL NO. _____
This serial number is located on the rear of the television.

Ver. 1



[You're reading an excerpt. Click here to read official HITACHI 26LD4550U user guide](http://yourpdfguides.com/dref/3940519)
<http://yourpdfguides.com/dref/3940519>

Manual abstract:

Please keep this user's manual for future reference. Contents IMPORTANT SAFETY INSTRUCTIONS

.....
.....
.....

.....
.....
.....
.....

... 1 INTRODUCTION

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

..... 2 About This Manual .

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.2 Trademark Credits

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...2 About Software ..

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
2 ENGLISH SAFETY PRECAUTIONS

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 3 SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

.....
.....
.....
.....

.....3 Important for United Kingdom.

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....4 About the Symbols.

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.13 EXTERNAL EQUIPMENT SETUP....

.....

.....

.....

.....

.....

.....

.....

.....

..... 14 HD Receiver Setup ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*.....
.14 Digital Audio Out Setup....*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

*.....
....16 DVD Setup.*

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.17 VCR or DVD Setup

.....
.....
.....
.....

.....
.....
.....
.....
.....22 *PC Setup*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....23 *Connecting with a HDMI to DVI cable*

.....
.....
.....
.....

.....
.....
.....
.....

.....24 *WATCHING TV / PROGRAMME CONTROL*

.....
.....
.....

.....
.....
.....
.....

.... 29 *ENGLISH Remote Control Key Functions*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....29 *Turning On The TV* .

.....
.....

..32 Menus Selection And Adjustment

.....
.....
.....

.....
.....
.....

.....
.....
.....

....33 Auto Programme Tuning.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

34 Audio Language Selection (In Digital Mode Only)

.....
.....
.....

.....
.....
.....

.....35 Manual Programme Tuning (In Digital Mode) ...

.....
.....
.....

.....
.....
.....

.36 Manual Programme Tuning (In Analog Mode)

.....
.....
.....

.....
.....
.....

....37 Programme Skip

.....
.....
.....

.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..38 Assigning Programme Fine Tune(In Analog Mode)

.....
.....
.....
.....

.....
.....

..39 Selecting The Channel List ...

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

....40 Input List .

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

....41 PICTURE CONTROL .

.....
.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....46 *Picture Mode-User option* .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....46 *Picture Improvement Technology...*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

47 *Picture Mode*.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

....48 *SOUND CONTROL*.

.....
.....
.....
.....

.....
.....
.....
.....

.....52 Selecting Digital Audio Out

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....53 TV Speakers On/ Off Setup ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....54 Audio Description on/off Setup .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....55 OPTION CONTROL

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 56 ENGLISH Menu Language Selection ..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

.....56 Time Zone Setup

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....57 Clock Setup ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

...58 Auto On/Off Timer Setting.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....59 Sleep Timer Setting ...

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

60 Diagnostics

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....61 Common Interface(CI)

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

62 PARENTAL CONTROL / RATINGS.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 63 Set Password & Lock System.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
..63 Block Programme

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....64 Parental Control (Program Block)..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

65 Key Lock

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

66 TELETEXT

.....
.....
.....

.....
.....

.....
.....

.....
.....
.....
.....

.....
.....
.....
.. 67 Switch On/Off..
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
67 Simple Text
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....67 Top Text...
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....67 Special Teletext Functions ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....68 APPENDIX

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 69 Initializing (Reset to original factory settings) ..

.....
.....
.....

.....
.....
.....

..69 Troubleshooting

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..70 WARRANTY.....

.....

Clean dust or metals on or around the blade of the power plug regularly. Do not place the unit on an unstable surface. Unstable places such as 5 SAFETY PRECAUTIONS (continued) CAUTION Do not place your fingers into the gap at the opened front door of the unit. ENGLISH Do not place the unit at a dusty place. It could cause malfunction.

Do not cover or block any ventilation holes on the product. The unit would overheat, and it could cause fire or damage the product which may shorten its service life. Be sure to ground the earth cable correctly. connection would cause fire or electrical shock. Supply connect the ground wire. Connection to a Cable Distribution System is to be provided through a galvanic isolator. Follow the Anti-tumble measures in this manual. seriously. Do not install this product near the medical devices. Do not place a CRT-based television near the speakers of the Colour LCD Television. from the speakers of the unit. Disconnect all of the external connection cables and detach the anti-tumble measures before moving the unit. Connect the power plug securely. Do not handle the Power Cord with wet hands. Do not pull the cord when you unplug the Power Cord.

Unplug the Power Cord when you do not intend to use the product for long periods of time. Handle the batteries properly. injury or damage to property. 6 SAFETY PRECAUTIONS (continued) CAUTION Adjust the headphone volume properly. ENGLISH PRECAUTIONS Do not install areas where it will be subjected to high temperatures. It could damage the cabinet or parts of the product. Viewing Advice protect your eyes against eyestrain. When transporting this product: product. Keep radio away from this unit whilst in use. This unit is designed to meet the European EMC standards due to prevent radio interference.

However, the unit may generate noise in the radio. Adjust the direction of the radio antenna in order not to receive the interference from the unit. About infrared communication devices: because of communication failure. Please note that this is not malfunction. When you dispose of this product at the end of its life, follow the regulations in your residential area.

SAFETY PRECAUTIONS (continued) Please make sure to unplug the power cord before cleaning the unit. How to clean the Colour LCD Television screen panel of the unit. damage to the coating. 7 OVERVIEW Large-screen and high-definition LCD panel. Improved Digital signal processor.

3 Scart terminals installed. Accept more digital input devices with 2 HDMI terminals located on front and rear. Photo Input function with Slide Show. SD Card Slot installed. Optical Audio Out installed. Easy-to-use On-Screen Display system operating with Remote control. Low power consumption with Power Saving feature. Motorized Power Swivel feature. Provided 2000 pages for Teletext. ENGLISH SUPPLIED ACCESSORIES Check the supplied accessories before installation.

In case of missing or damaged, please contact the dealer immediately. User's Manual Remote Control POWER INPUT i AAA size battery X2 Quick Guide SLEEP 1 4 7 GUIDE 2 5 8 0 3 6 9 CH LIST AD FAV ADD/ERASE MUTE P RETURN MENU EXIT OK SUBPAGE ? S i Stand Power Cord x3 Screws 4x20 (26 Only) x4 Screws 4x20 (32 Only) UK only PAN-EU * The type of power plug provided is different depending on the model 8 PREPARATION Front Panel

Controls Image shown may differ from your TV. TV with a soft cloth. ENGLISH + - 1 + P 2 3 OK 4 5 6 Volume Use these two buttons to adjust volume up/down. In OSD menu, use these two buttons to switch the selection left and right. Program Use these two buttons to select channels In OSD menu, use these two buttons to switch the selection up and down. OK This button accepts your selection or display the current mode. MENU Press this button to display the on-screen display (OSD) menu. POWER Press this button to switch the TV on/off. POWER LED/IR Remote Receiver The blue light indicates the TV power is on.

The red light indicates the TV is in standby mode. Receive the signal from the remote control. 9 Back Panel Information COMMON INTERFACE 2 3 1 VIDEO S-VIDEO AUDIO IN OPTICAL DIGITAL (RGB/DVI) AUDIO OUT AV 1 AV 2 RGB IN (PC) Pb AV IN 3 R AUDIO L HDMI IN 2 ENGLISH 10 4 11 1 2 Pr H/P HDMI IN 1 (DVI) RS-232C IN (SERVICE ONLY) COMPONENT IN 5 5 6 7 8 9 Power Cord Socket This TV operates on an AC power. The page.

Never attempt to operate the TV on DC power.

RGB/DVI Audio Input Connect the audio from a PC or DVI. DIGITAL AUDIO OUT OPTICAL Connect digital audio from various types of ports do not work. Euro Scart Socket (AV1/AV2) Connect scart socket input or output from an external device to these jacks. HDMI Input Connect a HDMI signal to HDMI IN or DVI (VIDEO)signal to HDMI/DVI port with DVI to HDMI cable. RGB Input Connect the output from a PC.

10 RS-232C IN (SERVICE ONLY) PORT Component Input Connect a component video/audio device to these jacks. Aerial Input Connect RF aerial to this jack. Common Interface (CI) Card Slot This is normally used to receive Pay services and is not available in all Countries. Audio/Video Input Connect audio/video output from an external device to these jacks. S-Video Input Connect S-Video out from an S-Video device. Headphone Socket Connect the headphone plug to this socket. Stand Installation When assembling the desk type stand, check whether the bolt is fully tightened. (If not tightened fully, the product can tilt forward after the product installation.) If you tighten the bolt with excessive force, the bolt can deviate from abrasion of the tightening part of the bolt. ENGLISH (Only 26/32) Carefully place the TV screen side down on a cushioned surface to protect the screen from scratches and damages.

Assemble the Base with the Stand as shown. Fix the bolts securely at the bottom of the Base. (3 bolts for 26" TV and 4 bolts for 32" TV). (Only 19/22) Carefully place the TV screen side down on a cushioned surface to protect the screen from scratches and damages. Assemble the Base with the Stand as shown. 11 Detaching Stand (Only 26/32) Image shown may differ from your TV. ENGLISH (Only 26/32) Carefully place the TV screen side down on a cushioned surface to protect the screen from scratches and damages. Loosen the bolts from the bottom of the Base. (3 bolts for 26" TV and 4 bolts for 32" TV). Separate the Base from the Stand as shown.

(Only 19/22) Carefully place the TV screen side down on a cushioned surface to protect the screen from scratches and damages. Pull out the Base while pressing the button on the Stand as shown. 12 Wall Mounting Before assembling the wall mounting, make sure the bolts are fully tightened on the wall mount bracket. If not, the TV may tilt after the installation ENGLISH (Only 26/32) Remove the bolts from the back of the Stand.



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/3940519)

[26LD4550U user guide](http://yourpdfguides.com/dref/3940519)

<http://yourpdfguides.com/dref/3940519>

(3 bolts for 26" TV and 4 bolts for 32" TV).

Remove the Stand Base as shown. Secure the wall mount bracket to the back of the TV. (Refer to the instructions for the wall mount bracket.) (Only 19/22)

Remove the 3 bolts from the back of the Base. Remove the Stand Base as shown.

Secure the wall mount bracket to the back of the TV. (Refer to the instructions for the wall mount bracket.) NOTE For 19"/22"/26": Secure the wall mount bracket to the back of the TV using four M4 screws(M4 x 10mm). For 32": Secure the wall mount bracket to the back of the TV using four M6 screws(M6 x 10mm). 13 EXTERNAL EQUIPMENT SETUP HD Receiver Setup Pb Pr ENGLISH Connecting with a component cable COMPONENT IN Connect the video outputs (Y, PB, PR) of the digital set-top box to the COMPONENT IN VIDEO jacks on the TV. Connect the audio output of the digital set-top box to the COMPONENT IN AUDIO jacks on the TV. Turn on the digital set-top box. (Refer to the user manual for the digital set-top box.) Select Component input source using the INPUT button on the remote control. Signal 480i 576i 480p/576p 720p/1080i 1080p Component Yes Yes Yes Yes No HDMI Yes Yes Yes Yes Yes 14 Connecting a set-top box with an HDMI ENGLISH Connect the HDMI output of the digital set-top box to the HDMI IN1(DVI) or HDMI IN 2 jack on the TV.

Turn on the digital set-top box. (Refer to the user manual for the digital set-top box.) Select HDMI1 or HDMI2 input source using the INPUT button on the remote control. HDMI IN 1 (DVI) Connecting with a HDMI to DVI cable AUDIO IN (RGB/DVI) Connect the digital set-top box to HDMI IN 1(DVI) jack on the TV. Connect the audio output of the digital set-top box to the AUDIO IN (RGB/DVI) jack on the TV. Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.) Select HDMI1 input source using the INPUT button on the remote control. HDMI IN 1 (DVI) 15 Digital Audio Out Setup Audio Output (Optical) port. ENGLISH Connect one end of an optical cable to the TV Digital Audio (Optical) Output port.

Connect the other end of the optical cable to the digital audio (optical) input Set the " TV Speaker option - Off " in the AUDIO manual for operation. DMI IN 1 (DVI) AUDIO IN OPTICAL DIGITAL (RGB/DVI) AUDIO OUT AV 1 1 RGB IN (PC) Pb Pr RS-232C IN (SERVICE ONLY) COMPONENT IN N CAUTION Do not look into the optical output port. Looking at the laser beam may damage your vision. 16 DVD Setup When connecting with a component cable Connect the video outputs (Y, Pb, Pr) of the DVD to the COMPONENT IN VIDEO jacks on the TV. Pb ENGLISH Connecting with a component cable.

Connect the audio outputs of the DVD to the COMPONENT IN AUDIO jacks on the TV. Turn on the DVD player, insert a DVD. Select Component input source using the INPUT button on the remote control. Refer to the DVD player's manual for operating instructions. Pr COMPONENT IN Component Input ports component input ports as shown below.

Component ports on the TV Y Y Video output ports on DVD player Y Y Pb Pb B-Y Cb Pb Pr R R-Y Cr Pr 17 Connecting with a Euro Scart cable Connect the Euro scart socket of the DVD to the AV1 Euro scart socket on the TV. Turn on the DVD player, insert a DVD. Select AV1 input source using the INPUT button on the remote control. If connected to AV2 Euro scart socket, select AV2 input source. Refer to the DVD player's manual for operating instructions. AV IN 3 Refer to the DVD player's manual for operating Instructions. 18 HDMI IN 2 Select AV3 (S-Video) input source using the INPUT button on the remote control. H/P R AUDIO L Turn on the DVD player, insert a DVD. VIDEO S-VIDEO Connect the audio outputs of the DVD to the AUDIO input jacks on the TV. COMMON INTERFACE ENGLISH AV 1 AV 2 NOTE Any Euro scart cable used must be signal shielded.

Connecting with a S-Video cable Connect the S-VIDEO output of the DVD to the S-VIDEO input on the TV. Connecting the HDMI cable Connect the HDMI output of the DVD to the HDMI IN 1(DVI) or HDMI IN 2 jack on the TV. Select HDMI1 or HDMI2 input source using the INPUT button on the remote control. Refer to the DVD player's manual for operating instructions. ENGLISH HDMI IN 1 (DVI) NOTE The TV can receive video and audio signals simultaneously when using a HDMI cable. If the DVD does not support Auto HDMI, you must set the output resolution appropriately. 19 VCR or DVD Setup VCR and TV. sides of the screen may remain visible. ENGLISH Connecting with a RF cable Wall Jack Antenna Connect the ANT OUT socket of the VCR to the ANT IN socket on the TV. Connect the aerial cable to the ANT IN socket of the VCR.

Press the PLAY button on the VCR and match the appropriate channel between the TV and VCR for viewing. 20 Connecting with a Euro Scart cable Connect the Euro scart socket of the VCR to the AV1 Euro scart socket on the TV. Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.) Select AV1 input source using the INPUT button on the remote control.

If connected to AV2 Euro scart socket, select AV2 input source. AV 1 AV 2 ENGLISH NOTE Any Euro scart cable used must be signal shielded. Connecting with a S-Video cable Connect the S-VIDEO output of the VCR to the S-VIDEO input on the TV. The picture composite (RCA cable) input. Connect the audio outputs of the VCR to the AUDIO input jacks on the TV.

Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.) Select AV3 (S-Video) input source using the INPUT button on the remote control. HDMI IN 2 COMMON INTERFACE AV IN 3 H/P 21 R AUDIO L VIDEO S-VIDEO Other A/V Source Setup Connect the AUDIO/VIDEO jacks COMMON INTERFACE Select AV3 (CVBS) input source using the INPUT button on the remote control. Operate the corresponding external AV IN 3 operating guide. HDMI IN 2 H/P Insertion Of CI Module - To view the encrypted (pay) services in digital TV mode. - This feature is not available in all countries. Insert the CI Card to the CI (Common Interface) CARD SLOT of the TV as shown. For further information, see p.60.

COMMON INTERFACE R AUDIO L VIDEO S-VIDEO ENGLISH Camcorder Video Game Set red) 1 22 PC Setup This TV provides Plug and Play capability, meaning that the PC adjusts automatically to the TV's settings. ENGLISH Connecting with a D-sub 15 pin cable AUDIO IN (RGB/DVI) the RGB IN (PC) jack on the TV. Connect the PC audio output to the AUDIO IN (RGB/DVI) jack on the TV. Turn on the PC and the TV Select RGB input source using the INPUT button on the remote control. RGB IN (PC) 23 Connecting with a HDMI to DVI cable Connect the DVI output of the PC to the HDMI IN 1(DVI) jack on the TV. HDMI IN 1 (DVI) AUDIO IN (RGB/DVI) ENGLISH Connect the PC audio output to the AUDIO IN (RGB/DVI) jack on the TV.



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/3940519)

[26LD4550U user guide](http://yourpdfguides.com/dref/3940519)

<http://yourpdfguides.com/dref/3940519>

Turn on the PC and the TV. Select HDMI1 input source using the INPUT button on the remote control. NOTE To enjoy vivid picture and sound, connect a PC to the TV. screen for prolonged periods of time.

The Connect the audio cable from the PC to the Audio input on the TV. (Audio cables are not included with the TV). If using a sound card, adjust PC sound as This TV uses a VESA Plug and Play Solution. The TV provides EDID data to the PC system with a DDC protocol. The PC adjusts automatically when using this TV.

when possible. the resolution. There may be interference relating to resolution, vertical pattern, contrast or brightness in PC mode. Change the PC mode to another resolution or change the refresh rate to another rate or until the picture is clear. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult the manufacturer of the PC graphic card.

The synchronization input waveform for separate. Connect the signal cable from the monitor of the TV or the signal cable from the HDMI output port of the PC to the HDMI IN (or HDMI/DVI IN) port on the TV. Play functionality. If the graphic card on the PC does not output (or HDMI/DVI IN) to display the PC output on the TV. If the graphic card on the PC does output (the other mode is set to Plug and Play automatically by the TV.) DOS mode may not work depending on the video card if you use a HDMI to DVI cable. cable under 5m is recommended. 24 Supported Display Resolution ENGLISH Resolution 720x400 640x480 Horizontal 31.468 31.469 37.

684 37.879 Vertical 70.08 59.94 75.00 60.31 75.00 74.55 60.00 70.00 75.
029 60.00 75.00 75.00 59.60 57.

887 59.94 59.988 Resolution 720x480 720x480 720x576 720x576 1280x720 Horizontal 31.469 / 31.5 15.
734 / 15.6 31.25 15.625 37.500 44.96 / 45 33.72 / 33.75 28.125 26.97 / 27 Vertical 59.

94 / 60 60 50 50 59.94 / 60 59.94 / 60 50.00 23.97 / 24 26.976 / 30.00 50 59.94 / 60 800x600 46.875 832x624 49.725 48.
363 1024x768 56.470 60.123 1280x720 1280x800 1152x864 1366x768 1440x900 1680x1050 1920x1080 45.00 62.795 67.
50 47.56 55.935 65.16 66.647 1920x1080 33.

716 / 33.75 56.250 67.43 / 67.5 NOTE . 25 ENGLISH Automatically adjusts picture position and minimizes image instability. After adjustment, if the image is still not correct, your TV is functioning properly but needs further adjustment. This function is for automatic adjustment of the screen position, size, and phase. The displayed image will be unstable for a few seconds while the auto OPTION OK Screen OK Move RETURN OK OK Move RETURN Menu Language Input List Screen Factory Reset Auto Config H.Position V.
Language Input List Screen Factory Reset Auto Config H.Position V.

Position Phase Size Resolution 61 49 16 127 1 MENU 2 3 4 Select OPTION is still not correct, try Auto OK or Select Screen. Select adjusted again after Auto can adjust the Position, Size or Phase manually. OK or OK or Make Appropriate Adjustments MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 26 Adjustment for screen Position, Size, Phase trembling, adjust the picture phase manually. ENGLISH OPTION OK OK Move RETURN Screen OK OK Move RETURN Menu Language Input List Screen Factory Reset Auto Config H.Position V.Position Phase Size Resolution 61 49 16 127 1 MENU 2 3 4 Select OPTION. OK or Select Screen. Select H.

Position, V. Position, Phase, Size or Resolution Make Appropriate Adjustments. OK or OK or MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 27 Selecting Resolution ENGLISH PC mode.

PC mode. Screen OK Resolution OK Move RETURN 1 61 49 16 127 2 3 1024 X 768 1280 X 768 1360 X 768 OK OK Move RETURN Auto Config H.Position V.Position Phase Size Resolution 1 MENU 2 3 4 Select OPTION. OK or Select Screen.

Select Resolution OK or OK or Select desired resolution. MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 28 WATCHING TV / PROGRAMME CONTROL Remote Control Key Functions When using the remote control, aim it at the remote control sensor on the TV POWER POWER ENGLISH Switches the TV on from standby or off to standby. or Display the Input List. INPUT SLEEP INPUT i INFO RATIO i Show the channel information. Select your desired picture format. Set the Sleep Timer Selects a programme. Show the programme guide with information. Return to the previous programme Select and set the Picture Mode.

Select and set the Sound Mode. 1 4 7 GUIDE 2 5 8 0 3 6 9 SLEEP 0~9 number GUIDE CH LIST AD FAV ADD/ERASE Q.VIEW PICTURE MODE SOUND MODE MUTE P RETURN AD Switch the Audio Description on/off. CH LIST Display the programme List. MENU EXIT FAV Display the selected favorite programme. ADD/ERASE Add/Erase programme to your Favorite List. OK I/II Select the Mono/Stereo sound. MUTE Switch the sound On/Off. RETURN Allows the user to move back one step in an interactive application, or other user interaction function. MENU Display the menu screen.

EXIT Clears all on-screen displays and returns to TV viewing from any menu. THUMBSTICK Allows you to navigate the on-screen menus and (Up/Down/Left adjust the system settings to your preference. Right) OK Accepts your selection or displays the current mode. SUBPAGE ? S i 29 ENGLISH 1 POWER TELETEXT These buttons are used for teletext. BUTTONS For further details, see the 'Teletext' section.

INPUT i SLEEP 1 4 7 GUIDE 2 5 8 0 3 6 9 Coloured buttons TEXT S These buttons are used for teletext (on TELETEXT models only). Show the TELETEXT screen.. Recalls your preferred Teletext subtitle page or display the channel subtitle. CH LIST SUBTITLE AD FAV ADD/ERASE MUTE P RETURN MENU EXIT Installing Batteries OK SUBPAGE 1 S ? i Open the battery compartment cover on the back and Install two 1.

5V AAA batteries. Do not mix old or used batteries with new ones. Close cover. 30 Turning On The TV - When your TV is turned on, you will be able to use its features. Firstly, connect the power cord correctly. At this stage, the TV switches to standby mode. In standby mode to turn TV on, press the / I, INPUT, P + - or + - button on the TV or press the POWER, INPUT, P + - or + - button on the remote control and the TV will switch on. ENGLISH Initializing setup If the OSD (On Screen Display) is displayed on the screen after turning on the TV, you can select the Language, Mode, Country, Time Zone, Auto tuning. Note: a. Press the RETURN button to change the current OSD to the previous OSD.

Programme Selection Press the P + - or NUMBER buttons to select a programme number. Volume Adjustment Press the + - button to adjust the volume. If you wish to switch the sound off, press the MUTE button. You can cancel this function by pressing the MUTE, + - , or I/II button.



[You're reading an excerpt. Click here to read official HITACHI 26LD4550U user guide](http://yourpdfguides.com/dref/3940519)
<http://yourpdfguides.com/dref/3940519>

31 Quick Setup There are few options you need to set up in order to let your TV work properly. follow the instructions below to complete the setup. Language Please select your Language: English Español Français Deutsch Italiano ENGLISH Mode Selecting the environment. Choose the setting mode you want. Home In Store Country Select the Country Austria Belgium Bulgaria Croatia Czech Finland Previous OK Next Previous OK Next Previous OK Next COMPLETED Congratulations !! Completed Initial Setup. Please press OK to exit.

Auto Tuning Before starting, be sure that TV antenna is connected. Press OK to continue. 0% OK Next Previous OK Next 1 2 3 4 5 6 OK Press OK for the next screen. OK Select the Language. OK Select Mode.

OK Select Country. OK Press OK to start Auto Tuning. OK Press OK to Complete the Auto Tuning. 32 Menus Selection And Adjustment Your TV's OSD (On Screen Display) may differ slightly from what is shown in this manual. SETUP OK ENGLISH PICTURE OK Move EXIT Aspect Ratio Picture Mode Brightness Contrast Colour Sharpness Colour Temperature Backlight Advanced Control Normal 80 OK OK 16:9 User Move EXIT Country 1st Audio Language 2nd Audio Language Auto Tuning Manual Tuning Programme Skip Programme Swap Programme Fine Tune 50 90 60 60 AUDIO OK OPTION OK Move EXIT Menu Language -3 -3 -3 -3 0 On Off PCM Input List Time Subtitle Teletext Language Diagnostics Common Interface Factory Reset OK OK Move EXIT Sound Mode Equalizer 120Hz Equalizer 500Hz Equalizer 1.5KHz Equalizer 5KHz Equalizer 10KHz Balance Virtual Surround Auto Volume Digital Audio Out Standard LOCK OK OK Move EXIT Password 1 MENU Select a Menu item. MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 33 Auto Programme Tuning analog and digital mode. When you start channel scan in digital mode, all previously stored service information will be deleted SETUP OK ENGLISH SETUP OK Move EXIT OK OK Move RETURN Country 1st Audio Language 2nd Audio Language Auto Tuning Manual Tuning Programme Skip Programme Swap Programme Fine Tune Country 1st Audio Language 2nd Audio Language Auto Tuning Manual Tuning Programme Skip Programme Swap Programme Fine Tune 1 MENU 2 3 Select SETUP. OK or Select Auto Tuning. OK or Start Tuning MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 34 Audio Language Selection (In Digital Mode Only) The Audio function allows selection of a preferred language. If audio data in a selected language is not broadcast, the default language audio will be played.

When the languages you selected as the primary for Audio Language are not supported, you can select language in secondary category. SETUP OK ENGLISH OK Move RETURN 1st Audio Language OK OK Move RETURN Country 1st Audio Language 2nd Audio Language Auto Tuning Manual Tuning Programme Skip Programme Swap Programme Fine Tune 1 2 3 4 5 6 7 8 9 10 Bulgarian Croatian Czech Danish Dutch English Finnish French German Greek I MENU 2 3 4 Select SETUP. Select 1st Audio Language or 2nd Audio Language Select your Desired Language. OK or OK or OK or Save. MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 35 Manual Programme Tuning (In Digital Mode) Manual Tuning lets you manually add a programme to your programme list. SETUP OK ENGLISH OK Move RETURN DTV OK OK Move RETURN Country 1st Audio Language 2nd Audio Language Auto Tuning Manual Tuning Programme Skip Programme Swap Programme Fine Tune Transmitter: Service Number: Service Name: VHF/UHF Channel Signal Strength Crystal Palace 11 BBC NEWS 24 21 60 1 2 3 4 MENU Select SETUP. OK or Select Manual Tuning. OK or Select DTV.

OK or Start Tuning. MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 36 Manual Programme Tuning (In Analog Mode) Manual Tuning lets you manually tune and arrange the stations in whatever ENGLISH order you desire SETUP OK TV OK Move RETURN Programme Number: Programme Name: Frequency Colour System Sound System Search Up Search Down 45.00 Auto B/G OK OK Move RETURN Country 1st Audio Language 2nd Audio Language Auto Tuning Manual Tuning Programme Skip Programme Swap Programme Fine Tune 1 2 3 4 MENU Select SETUP.

OK or Select Manual Tuning. OK or Select TV. OK or Select OK. MENU or EXIT button to return to normal TV viewing.

@@@ Select Picture Mode on User.

@@@ Select Advanced Control. Select Flesh Tone, Adaptive Luma Control, Noise Reduction or DCR. @@@@ image which you initially set will be selected. 48 SOUND CONTROL Sound Setting Adjustment -User Mode AUDIO Move Sound Mode Equalizer 120Hz Equalizer 500Hz Equalizer 1.5KHz Equalizer 5KHz Equalizer 10KHz Balance Virtual Surround Auto Volume Digital Audio Out On Off PCM User 0 0 0 0 0 RETURN ENGLISH AUDIO OK OK Move User RETURN Sound Mode Equalizer 120Hz Equalizer 500Hz Equalizer 1.5KHz Equalizer 5KHz Equalizer 10KHz Balance Virtual Surround Auto Volume Digital Audio Out 0 0 0 0 0 On Off PCM 1 MENU 2 OK or Select AUDIO. Select Sound Mode on User 3 Select a Frequency band. 4 OK Set the Desired Sound Level. MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen.

49 Preset Sound Settings-Sound Mode Clear Voice, Standard, Music, Cinema, Sport, Game or user. ENGLISH Sound Mode lets you enjoy the best sound without any special adjustment as the TV sets the appropriate sound options based on the programme content. AUDIO Move Sound Mode Equalizer 120Hz Equalizer 500Hz Equalizer 1.5KHz Equalizer 5KHz Equalizer 10KHz Balance Virtual Surround Auto Volume Digital Audio Out On Off PCM Clear Voice 4 1 0 5 -4 0 RETURN AUDIO Move Sound Mode Equalizer 120Hz Equalizer 500Hz Equalizer 1.5KHz Equalizer 5KHz Equalizer 10KHz Balance Virtual Surround Auto Volume Digital Audio Out On Off PCM Standard -3 -3 -3 -3 0 RETURN 1 2 MENU Select AUDIO. OK or Select Sound Mode. Select Clear Voice, Standard, Music, Cinema, Sport, Game or User. 3 MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 50 Balance You can adjust the sound balance of the speakers to preferred levels.

AUDIO OK ENGLISH OK Move User RETURN Sound Mode Equalizer 120Hz Equalizer 500Hz Equalizer 1.5KHz Equalizer 5KHz Equalizer 10KHz Balance Virtual Surround Auto Volume Digital Audio Out 0 0 0 0 0 On Off PCM 1 2 3 MENU Select AUDIO.



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/3940519)

[26LD4550U user guide](http://yourpdfguides.com/dref/3940519)

<http://yourpdfguides.com/dref/3940519>

OK or Select Balance. Make Desired Adjustment. OK MENU or EXIT button to return to normal TV viewing.

RETURN button to move to the previous menu screen. 51 Auto Volume Level AVL automatically remains on the same level of volume if you change programmes. AUDIO Move Sound Mode Equalizer 120Hz Equalizer 500Hz Equalizer 1.5KHz Equalizer 5KHz Equalizer 10KHz Balance Virtual Surround Auto Volume Digital Audio Out On On PCM User 0 0 0 0 0 0 RETURN ENGLISH 1 2 MENU Select AUDIO. Select Auto Volume OK or 3 Select On or Off MENU or EXIT button to return to normal TV viewing.

RETURN button to move to the previous menu screen. 52 Selecting Digital Audio Out This function allows you to select your preferred Digital Audio Output. The TV can only output DOLBY Digital if a channel is broadcast with Dolby Digital audio. When Dolby digital is available, selecting Dolby Digital in the Digital Audio Out menu will set SPDIF output to Dolby Digital. If Dolby Digital is selected in the digital audio out menu when dolby digital is not available, SPDIF output will be PCM. Even if both Dolby Digital and Audio language have been set in a channel which broadcast Dolby Digital Audio, only Dolby Digital will be played. AUDIO Move Sound Mode Equalizer 120Hz Equalizer 500Hz Equalizer 1.5KHz Equalizer 5KHz Equalizer 10KHz Balance Virtual Surround Auto Volume Digital Audio Out On On PCM User 0 0 0 0 0 0 RETURN ENGLISH AUDIO Move Sound Mode Equalizer 120Hz Equalizer 500Hz Equalizer 1.5KHz Equalizer 5KHz Equalizer 10KHz Balance Virtual Surround Auto Volume Digital Audio Out On On Dolby Digital User 0 0 0 0 0 0 RETURN 1 2 MENU Select AUDIO. Select Digital Audio Out.

OK or 3 Select Dolby Digital or PCM Manufactured under license from Dolby Laboratories. "Dolby "and the double-D symbol are trademarks of Dolby Laboratories. There is a possibility that when HDMI mode, some DVD players do not make SPDIF sound. At that time, set the output of the digital audio of the DVD player to PCM. MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen 53 TV Speakers On/Off Setup You can adjust the internal speaker status. If you wish to use an external Hi-Fi system, turn off the TV internal speakers. ENGLISH AUDIO Move TV Speaker Type Audio Description Volume Level On Audio Description RETURN 1 2 MENU Select AUDIO. OK or Select TV Speaker. Select On or Off. 3 MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 54 Audio Description on/off Setup You can switch the Audio Description on or off. ENGLISH AUDIO Move TV Speaker Type Audio Description Volume Level On Audio Description RETURN AUDIO OK OK Move On RETURN Audio Description Volum OK OK Move RETURN 20 TV Speaker Type Audio Description Volume Level TV Speaker Audio Description 1 2 MENU Select AUDIO. OK or Select Type.

Select Audio Description. 3 4 5 OK or Select Audio Description Volume Level Adjust the Volume. MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 55 OPTION CONTROL Menu Language Selection Use this function to select your desired language for displaying OSD(On Screen Display) and indications.

OPTION OK ENGLISH Menu Language OK Move RETURN OK OK RETURN Menu Language Input List Time Subtitle Teletext Language Diagnostics Common Interface Factory Reset 1 2 3 4 5 6 7 8 9 10 1 MENU 2 3 4 Select OPTION. OK or Select Menu Language. Select your Desired Language. OK or Select On or Off MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. NOTE the screen and some problems may occur during teletext operation. broadcasting circumstances. circumstances. may not work depending on digital broadcasting circumstances. 56 TIME SETTING Time Zone Setup When you select a Time Zone city, the TV time is set by the time offset received with the broadcast signal and the time is set automatically by a digital signal.

Time OK ENGLISH Time Zone OK Move RETURN 1 2 Canary GMT Lisbon GMT London GMT Amsterdam GMT+1 Beograd GMT+1 Berlin GMT+1 Bern GMT+1 Brussels GMT+1 Budapest GMT+1 Copenhagen GMT+1 OK OK Move RETURN Time Zone Clock Sleep Timer Off 3 4 5 6 7 8 9 10 1 MENU 2 3 4 5 Select OPTION OK or Select Time. Select Time Zone Select your viewing area Time Zone. OK or OK or OK MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 57 Clock Setup The clock is set automatically when receiving a digital signal. (You can set the clock manually only if the TV has no DTV signal.) You must set the time correctly before using on/off timer function. Time OK ENGLISH Clock OK Move RETURN Auto Synchronization Date Move On 2002/01/03 17:10:28 Off 00:00:00 0 00:00:00 RETURN Time Zone Clock Sleep Timer Off Time Timer On Timer On Volume On Programme Off Timer 1 2 MENU Select OPTION. OK or Select Time. Select Clock.

Select Timer. 3 4 5 OK or OK or Slcct On/Off. MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 58 Auto On/Off Timer Setting The Off timer function automatically switches the TV to standby at a preset time.

Two hours after the TV is switched on by the on time function it will automatically switch back to standby mode unless a button has been pressed. The Off timer function overrides the On timer function if both are set to the same time. The clock needs to be turned on and set at the real time before you set the Auto Timer. The Auto On/Off Timer only operates on real clock time is set and the TV is in standby mode. Clock Move Auto Synchronization Date Time Timer On Timer On Volume On Programme Off Timer 00:00:00 On 2002/01/03 17:10:28 On 00:00:00 0 RETURN ENGLISH On/Off Timer function, select Off. 1 MENU 2 3 4 Select OPTION OK or Select Time. Select Clock OK or Set the Hour. 5 Set the Minutes. MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 59 Sleep Timer Setting You do not have to remember to switch the TV off before you go to sleep. The sleep timer automatically switches the TV to standby after the preset time has elapsed. Time Move Time Zone Clock Sleep Timer Off RETURN ENGLISH Time Move Time Zone Clock Sleep Timer 10 Minutes RETURN 1 MENU 2 3 4 Select OPTION. OK or Select Time. Select Sleep Timer.

OK or Select Off, 10, 20, 30, 40, 50, 60, 90 or 120 Min SLEEP Set the Sleep Timer MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. remote control. 60 Diagnostics This function enables you to view information about Model name, software Version and Serial Number.



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/3940519)

[26LD4550U user guide](http://yourpdfguides.com/dref/3940519)

<http://yourpdfguides.com/dref/3940519>

OPTION OK ENGLISH Diagnostics RETURN OK Move RETURN Manufacturer: Menu Language Input List Time Subtitle Teletext Language Diagnostics Common Interface Factory Reset HITACHI, Ltd. H000001 XXXXXX_XXX_X XXXX_XXXXXX_X_XXX_XX Model/Type: App Verison: Software Version: 1 MENU 2 3 Select OPTION. OK or Select Diagnostics. Display Model Name, Serial Number and Software Version. OK or MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen.

61 Common Interface(CI) This function enables you to watch some encrypted services (pay services). If you remove the CI Module, you cannot watch pay services. When the module is inserted into the CI slot, you can access the module menu. To purchase a module and smart card, contact your dealer. Do not repeatedly insert or remove a CAM module from the TV.

This may cause a malfunction. When the TV is turned on after inserting a CI Module, you may not have any sound output. This may be incompatible with the CI module and smart card. CI (Common Interface) functions may not be possible depending upon the country broadcasting circumstances. OPTION OK ENGLISH Common Interface OK Move RETURN RETURN No CI card presented.

Menu Language Input List Time Subtitle Teletext Language Diagnostics Common Interface Factory Reset 1 MENU 2 3 Select OPTION. OK or Select Common Interface. OK or Disply CI card Information. MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 62 PARENTAL CONTROL / RATINGS Set Password & Lock System Enter the password, press '0', '0', '0', '0' on the remote control handset. LOCK OK ENGLISH LOCK OK Move EXIT RETURN Password Password *** 1 MENU 2 3 OK 1 2 5 8 0 3 6 9 4 7 Select LOCK. Input a 4-digit password or Select Set Password. 4 1 2 5 8 0 3 6 9 OK or 4 7 Input a 4-digit password. Be sure to remember this MENU or EXIT button to return to normal TV viewing.

RETURN button to move to the previous menu screen. 63 Block Programme Blocks any programmes that you do not want to watch or that you do not want your children to watch. It is available to use this function in Lock System "On". LOCK OK ENGLISH OK Move RETURN Block Programme OK OK Move RETURN Block Programme Parental Guidance Set Password Key Lock On 901 902 903 904 905 906 907 908 909 910 Analog Analog Analog Analog Analog Analog Analog Analog Analog 1 MENU 2 3 1 2 5 8 0 3 6 9 Select LOCK or 4 7 OK Input a 4-digit password Select Block Programme 4 5 OK or Select a Channel to be Locked OK Save MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 64

Parental Control (Program Block) This function operates according to information from the broadcasting station. Therefore if the signal has no this information, this function does not operate. ENGLISH This TV is programmed to remember which option it was last set to even if you switch the TV off. Prevents children from watching certain adult's TV programmes, according to the ratings limit set. LOCK OK OK Move RETURN Parental Guidance Move Age Rating None RETURN Block Programme Parental Guidance Set Password Key Lock On 1 MENU 2 3 4 1 2 5 8 0 3 6 9 Select LOCK.

4 7 OK or Input a 4-digit password OK or Please Input Age rating 4 ~ 18 or Off. MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 65 Key Lock The key on the front panel can be locked by this function. ENGLISH LOCK Move Block Programme Parental Guidance Set Password Key Lock On RETURN 1 2 3 MENU Select LOCK.

1 2 5 8 0 3 6 9 4 7 OK or Input a 4-digit password Select Key Lock. 4 Select Yes or No. MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. / I, INPUT, P + -, + - buttons on the TV or POWER, INPUT, P + -, + - buttons on the remote control to turn on the TV.

Key Lock On, the display Key Lock On' appears on the screen if any button on the front panel is pressed while viewing the TV. 66 TELETEXT This feature is not available in all countries. Teletext is a free service broadcast by most TV stations which gives up-to-the-minute information on news, weather, television programmes, share prices and many other topics. The teletext decoder of this TV can support the SIMPLE, TOP system. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the selection of teletext information. ENGLISH Switch On/Off Press the TEXT button to switch to teletext. The initial page or last page viewed appears on the screen. Two page numbers, TV station name, date and time are displayed on the screen current page displayed. Press the TEXT or EXIT button to switch off teletext. The previous mode reappears.

Simple Text Page selection Enter the desired page number as a three digit number with the NUMBER buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number. The P + - button can be used to select the preceding or following page. Top Text block. Block / group / page selection With the blue button you can progress from block to block. block. With the green button you can proceed to the next existing page with automatic P The red button returns to the previous selection. Alternatively the P - button can be used. Direct page selection As with SIMPLE teletext mode, you can select a page by entering it as a three digit number using the NUMBER buttons in TOP mode. 67 Special Teletext Functions ENGLISH ? REVEAL Select this menu to display concealed information, such as solutions to riddles or puzzles.

HOLD Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages. The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this menu is selected the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inactive. 68 APPENDIX Initializing (Reset to original factory settings) Reset all the system settings to factory default values OPTION OK ENGLISH Factory Reset OK Move EXIT RETURN Password Menu Language Input List Time Subtitle Teletext Language Diagnostics Common Interface Factory Reset 1 MENU 2 3 4 Select OPTION. OK or Select Factory Reset.

1 2 5 8 0 3 6 9 OK 4 or 7 Input Password. OK Reset MENU or EXIT button to return to normal TV viewing. RETURN button to move to the previous menu screen. 69 Troubleshooting The TV does not operate properly. The remote control does not work Check to see if there is any object between the TV and the remote control causing an obstruction.



[You're reading an excerpt. Click here to read official HITACHI](#)

[26LD4550U user guide](#)

<http://yourpdfguides.com/dref/3940519>

Ensure you are pointing the remote control directly at the TV. Ensure that the correct remote operating mode is set: TV, STB etc. Install new batteries. Power is suddenly turned off Is the sleep timer set? Check the power control settings. Has the Power supply been interrupted? Is Auto sleep activated on this station? ENGLISH The video function does not work. Check whether the TV is switched on. Try another channel. The problem may be with the broadcast. Is the power cord inserted correctly into the mains? Check your antenna direction and/or location. Test the mains outlet by plugging another TV into the same outlet.

This is normal, the image is muted during the TV startup process. Please contact your service centre, if the picture has Adjust Colour in menu option. No or poor colour or poor picture Try another channel. The problem may be with the broadcast. Are the video cables installed properly? Activate any function to restore the brightness of the picture. Check for local interference such as an electrical appliance or power tool. Station or cable channel experiencing problems, tune to another station. Station signal is weak, reposition the antenna to receive weaker stations. Check for sources of possible interference. Check antenna (Change the position of the antenna).

No picture & No sound Picture appears slowly after switching on Horizontal/vertical bars or picture shaking Poor reception on some channels Lines or streaks in pictures 70 ENGLISH The audio function does not work. Picture OK & No sound Press the button. Sound muted? Press MUTE button. Try another channel. The problem may be with the broadcast.

Are the audio cables installed properly? No output from one of the speakers Adjust Balance in menu option. Unusual sound from inside the TV A change in ambient humidity or temperature may result in an unusual noise when the TV is switched on or off and does not indicate a fault with the TV. There is a problem in PC mode. (Only PC mode applied) The signal is out of range (Invalid format) Check the input source. Vertical bar or stripe on background & Horizontal Noise & Incorrect position Screen colour is unstable or single colour Check the signal cable.

Reinstall the PC video card. 71 WARRANTY ENGLISH Thank you for purchasing this Hitachi Television. In the unlikely event that this product should develop a fault, we undertake to repair or replace any part of the product which fails due to a manufacturing defect within 12 months of the date of purchase provided that ... 1. the product has been installed and used only in accordance with the instructions supplied with the product. 2. the product has not been repaired, maintained, or modified by any person other than a Hitachi authorized dealer. 3.

the product serial number has not been removed or altered. commercial or communal use. adjustment of user controls, or aerial alignment. Europe Ltd. service under this guarantee is carried out. Use the boxes provided below to record your TV's Model and Serial Number - these are found on the rating plate located on the rear of the Plasma Television. Also, record where and when you purchased this TV. This information will help any future queries you may have and should be used in all correspondence with Hitachi service centres. MODEL SERIAL NUMBER DEALER/STORE DATE PURCHASED This guarantee does not affect your statutory rights. In all cases of difficulty, please consult your Hitachi dealer.

www.hitachidigitalmedia.com 72 QUICK GUIDE EN For more information on connecting and using your TV, please refer to the full user manual. QUICK GUIDE FR For more information on connecting and using your TV, please refer to the full user manual. GE For more information on connecting and using your TV, please refer to the full user manual.

IT For more information on connecting and using your TV, please refer to the full user manual. SP For more information on connecting and using your TV, please refer to the full user manual. 1 A Connect the aerial to the TV You have alternatives to connect the aerial as below Connecting the aerial straight to the TV. 1 B Connecting the aerial through VCR/DVD. Connect the aerial to the TV You have alternatives to connect the aerial as below Connecting the aerial straight to the TV.

C Connecting the aerial through VCR/DVD and DIGIBOX (STB). A B Connecting the aerial through VCR/DVD. C Connecting the aerial through VCR/DVD and DIGIBOX (STB). Monitor rear Panel AERIAL* AERIAL* Monitor rear Panel AERIAL* AERIAL* RF LEADS Wall Socket RF LEADS Wall Socket AERIAL* RF LEADS Wall Socket RF LEADS Wall Socket RF LEADS SCART LEADS (optional) IN RF LEADS SCART LEADS (optional) SCART LEADS (optional) IN AV2/ DECODER AV1/TV AV2/ DECODER AV1/TV OUT OUT VCR/DVD Recorder VCR/DVD Recorder RF LEADS SCART LEADS (optional) IN AV2/ DECODER AV1/TV RF LEADS RF LEADS IN AV2/ DECODER AV1/TV OUT OUT RF LEADS VCR/DVD Recorder DIGIBOX (STB) IN VCR/DVD Recorder IN AUX OUT VCR TV HDMI AUX OUT VCR TV HDMI DIGIBOX (STB) EN IMPORTANT : Failure to observe the following guidelines could result in serious overheating of your TV, or even, in extreme cases, fire. Ensure there is at least a 100mm (10cm) gap to the sides, rear and top of the television if placing into a cabinet or mounting in a wall. This is to allow for adequate ventilation. Do not allow soft furnishings, such as curtains to be draped over the TV whilst in operation. Never place the TV onto a carpet during normal operation this could obstruct ventilation slots on the base of the TV. Always place the TV on a flat surface, or if supplied, the stand accessory. GE IMPORTANT : Failure to observe the following guidelines could result in serious overheating of your TV, or even, in extreme cases, fire.

Ensure there is at least a 100mm (10cm) gap to the sides, rear and top of the television if placing into a cabinet or mounting in a wall. This is to allow for adequate ventilation. Do not allow soft furnishings, such as curtains to be draped over the TV whilst in operation. Never place the TV onto a carpet during normal operation this could obstruct ventilation slots on the base of the TV. Always place the TV on a flat surface, or if supplied, the stand accessory. FR IMPORTANT : Failure to observe the following guidelines could result in serious overheating of your TV, or even, in extreme cases, fire. Ensure there is at least a 100mm (10cm) gap to the sides, rear and top of the television if placing into a cabinet or mounting in a wall. This is to allow for adequate ventilation. Do not allow soft furnishings, such as curtains to be draped over the TV whilst in operation. Never place the TV onto a carpet during normal operation this could obstruct ventilation slots on the base of the TV.



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/3940519)

[26LD4550U user guide](http://yourpdfguides.com/dref/3940519)

<http://yourpdfguides.com/dref/3940519>

Always place the TV on a flat surface, or if supplied, the stand accessory. **IT IMPORTANT** : Failure to observe the following guidelines could result in serious overheating of your TV, or even, in extreme cases, fire. Ensure there is at least a 100mm (10cm) gap to the sides, rear and top of the television if placing into a cabinet or mounting in a wall. This is to allow for adequate ventilation. Do not allow soft furnishings, such as curtains to be draped over the TV whilst in operation.

Never place the TV onto a carpet during normal operation - this could obstruct ventilation slots on the base of the TV. Always place the TV on a flat surface, or if supplied, the stand accessory. **SP IMPORTANT** : Failure to observe the following guidelines could result in serious overheating of your TV, or even, in extreme cases, fire. Ensure there is at least a 100mm (10cm) gap to the sides, rear and top of the television if placing into a cabinet or mounting in a wall.

This is to allow for adequate ventilation.

Do not allow soft furnishings, such as curtains to be draped over the TV whilst in operation. Never place the TV onto a carpet during normal operation - this could obstruct ventilation slots on the base of the TV. Always place the TV on a flat surface, or if supplied, the stand accessory. 2 Insert the batteries into your handset 2 Insert the batteries into your handset 2 Insert the batteries into your handset 2 Insert the batteries into your handset 2 Insert the batteries into your handset 3 Connect the TV plug to the mains socket 4 Switch your TV on, ready to start autotune procedure... + + P 3 Connect the TV plug to the mains socket 4 Switch your TV on, ready to start autotune procedure... + + P 3 Connect the TV plug to the mains socket 4 Switch your TV on, ready to start autotune procedure.

.. + + P 3 Connect the TV plug to the mains socket 4 Switch your TV on, ready to start autotune procedure... + + P 3 Connect the TV plug to the mains socket 4 Switch your TV on, ready to start autotune procedure... + + P OK OK OK OK OK insert plug..

...and switch on Main Power switch (located on the front panel) insert plug.

.. Main Power switch (located on the front panel) insert plug..

Main Power switch (located on the front panel) insert plug... Main Power switch (located on the front panel) insert plug... Main Power switch (located on the front panel) **IMPORTANT NOTE** : Do not switch your TV on until all external equipment is connected. If you have a Video Cassette Recorder or a Satellite receiver connected to this TV, please ensure that they are switched on before automatic tuning begins. In the case of a VCR, insert a prerecorded tape and begin playback of your equipment. With a Satellite receiver, select Sky News.

These measures ensure that all your external equipment is tuned in during the autotune procedure. **IMPORTANT NOTE** : Do not switch your TV on until all external equipment is connected. If you have a Video Cassette Recorder or a Satellite receiver connected to this TV, please ensure that they are switched on before automatic tuning begins. In the case of a VCR, insert a prerecorded tape and begin playback of your equipment. With a Satellite receiver, select Sky News. These measures ensure that all your external equipment is tuned in during the autotune procedure. **IMPORTANT NOTE** : Do not switch your TV on until all external equipment is connected. If you have a Video Cassette Recorder or a Satellite receiver connected to this TV, please ensure that they are switched on before automatic tuning begins. In the case of a VCR, insert a prerecorded tape and begin playback of your equipment. With a Satellite receiver, select Sky News.

These measures ensure that all your external equipment is tuned in during the autotune procedure. **IMPORTANT NOTE** : Do not switch your TV on until all external equipment is connected. If you have a Video Cassette Recorder or a Satellite receiver connected to this TV, please ensure that they are switched on before automatic tuning begins. In the case of a VCR, insert a prerecorded tape and begin playback of your equipment. With a Satellite receiver, select Sky News.

These measures ensure that all your external equipment is tuned in during the autotune procedure. **IMPORTANT NOTE** : Do not switch your TV on until all external equipment is connected. If you have a Video Cassette Recorder or a Satellite receiver connected to this TV, please ensure that they are switched on before automatic tuning begins. In the case of a VCR, insert a prerecorded tape and begin playback of your equipment. With a Satellite receiver, select Sky News.

These measures ensure that all your external equipment is tuned in during the autotune procedure. EN / GE/ FR EN GE FR IT / SP IT SP Handset Controls used for Television Autotune Handset Controls used for Television Autotune Handset Controls used for Television Autotune Handset Controls used for Television Autotune Handset Controls used for Television Autotune EN 5 A B C Quick Setup OK GE 5 Language Please select your Language: English Español Français Deutsch Italiano Cesky Hrvatski Quick Setup OK After turning your TV on, the WELCOME screen appears. Press the OK for the next page. A B Next After turning your TV on, the WELCOME screen appears. Press the OK for the next page. Language Please select your Language: English Español Français Deutsch Italiano Cesky Hrvatski Select your desired language for displaying OSD(On Screen Display) and indications. Select the environment mode from "Home" or "In Store". Previous Select your desired language for displaying OSD(On Screen Display) and indications. Select the environment mode from "Home" or "In Store". Previous OK C D E OK Next menu Use this button to display the main menu.

EN EN OK Use this button to set a highlighted selection menu Use this button to display the main menu. IT IT OK Use this button to set a highlighted selection Mode Mode Home In Store D E F Select the Country. Selecting the environment. Choose the setting mode you want. Select the Country. Selecting the environment. Choose the setting mode you want. Home In Store menu Use this button to display the main menu. GE INPUT i POWER SLEEP GE 3 6 9 OK Use this button to set a highlighted selection menu SP INPUT i POWER SLEEP Use this button to display the main menu. MENU SP 3 6 9 OK Use this button to set a highlighted selection The Auto Tuning screen display.

Press OK to Start Auto Tuning. When the Auto Tuning is completed, press OK to exit the display. OK The Auto Tuning screen display. Press OK to Start Auto Tuning. When the Auto Tuning is completed, press OK to exit the display.

OK Previous OK Next Previous OK Next MENU 1 4 7 GUIDE 2 5 8 0 1 4 7 GUIDE 2 5 8 0 OK Country Select the Country Austria Belgium Bulgaria Croatia Czech Denmark Finland menu Use this button to display the main menu.



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/3940519)

[26LD4550U user guide](http://yourpdfguides.com/dref/3940519)

<http://yourpdfguides.com/dref/3940519>