




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI AX-M131U. You'll find the answers to all your questions on the HITACHI AX-M131U in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI AX-M131U
User guide HITACHI AX-M131U
Operating instructions HITACHI AX-M131U
Instructions for use HITACHI AX-M131U
Instruction manual HITACHI AX-M131U

HITACHI **AX-M131U** **Operating Instructions**

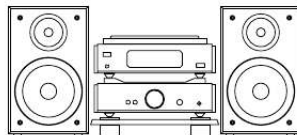

HI-FI COMPONENT SYSTEM



[You're reading an excerpt. Click here to read official HITACHI AX-M131U user guide](http://yourpdfguides.com/dref/2815039)

<http://yourpdfguides.com/dref/2815039>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... Connecting the Speakers

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... Connecting Auxiliary Equipment (AUX IN) .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.. Connecting Auxiliary Equipment (LINE OUT) ...

.....

.....
.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 6 Installation of Batteries .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 7 Turning the Power On and Off ..

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 7 Sound Quality

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.. 7 Adjusting the Volume ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... Adjusting the super bass ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. Control the Loudness

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 10 RDS (Radio Data System) Reception ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 11 CD Operation ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 12 CD Playing .

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... Direct Select track

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... To Skip Search and Play

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... To Search ..

.....
.....
.....

.....
.....

.....
.....
.....
.....

.....
.....
Playing Repeatedly

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *12 12 12 12 12 12 12 12 13 MP3 Disc Playing*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. *13 Playing Repeatedly*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....

.....
... 13 Setting the Clock Automatically ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
..... 13 Use the USB ...

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
14 Setting the Clock Manually

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 14 Clock Dimmer

.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

14 Setting the Sleep Timer

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.. 14 Setting the Daily on Timer ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

15 Disc Handling

.....

.....

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 15 Troubleshooting

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

16 Specifications

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

*. 17 -1- Important Cautions Thank you for purchasing this system. Please read these operating instructions before operating the unit. The operating instructions should be retained for future reference. For your safety CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER.
NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. @@@@ @@@@....*

.....
.....
.....
.....

.....
.....
.....
.....

@@@@ @@@@@ Overheating will cause damage and shorten the life of the equipment. -2- DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the equipment and don't handle the power cord with wet hands. DON'T

place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires. DON'T use makeshift stands and NEVER fix legs with wood screws - to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions. DON'T listen to headphones at high volume, as such use can permanently damage your hearing. DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off using the switch on the equipment and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people. DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

.....
.....
.....
.....

.... ABOVE ALL, NEVER let anyone especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electrical shock. NEVER guess or take chances with electrical equipment of any kind...it is better to be safe than sorry! Connections Caution: Make all connections before plugging the system into an AC power outlet. Connecting the Antenna Using the supplied wire Antenna A antenna connector should be connected to the antenna socket, tighten the antenna by hand or tool.

Adjust the antenna length and direction to optimise reception. -3- Connecting the Speakers Connect the speaker cords between the terminals as shown below. Connect the cords with a silver line to the (-) (G) terminals and cords with a gold line to the (+) (L) (R) terminals. Connecting Auxiliary Equipment (AUX IN) This unit also has one group of audio input terminals, you can use signal line to connect this unit's audio input terminals and assistance equipment's audio output terminals respectively, then you can hear the sound sources. Connecting Auxiliary Equipment (LINE OUT) This unit also has one group of audio output terminals, you can use signal line to connect this unit's audio output terminal and assistance equipment's audio input terminal respectively, then you can output the outer sound sauces to other assistance equipment.

Connecting Control Cable Connect the control cable between the CD player and the amplifier. Connecting the AC Power Cord Insert the AC power cord into a wall outlet, and your system is at your command! Caution: Be sure to unplug the power cord from the outlet when going out or when the system is not in use for an extended period of time. Connecting the Headphones Connect a pair of headphones to the phones jack. No sound comes out of the speakers. Note: Be sure to turn down the volume before connecting or putting on headphones.

-4- Control Locations The CD/DAB 1. 2. 3. 4. Remote Sensor Standby Button VFD Display Lens USB Port 5. 6. 7. 8. 9. 10.

11. 12. 13. Disc Door Clock Button Program Button Memory Button Stop Button Cancel Button Channel Select Backward Play/Pause Button Select Button Channel Select Forward Previous/Search Backward Button Select Down Button Tuning Backward Button Next/Search Forward Button Select Up Button Tuning Forward Button OSD Button Information Button RDS Display Open/Close Button 14. Control Cable Connector 15. FM/e SCAN button is pressed and held for 2 seconds, the receiver shall display the following for 2 seconds. FULL SCAN After this time, a scan operation of all Band III channels shall be performed. When the SCAN button is pressed but not held, the receiver shall display the following for 2 seconds: QUICK SCAN After this time, a scan operation of UK Band III channels shall be performed. 2. The service database during the scan operation shall be updates and the preset be cleared. 3. If Cancel button is pressed during scan, the scan shall be aborted and go back to the previous frequency before scan. Other button shall be locked. 4. During scanning, the receiver shall initially display Press the previous button (H/D) once or more to skip previous one or more tracks of the disc. Press the next button (G/C) once or more to skip forward one or more tracks of the disc. To Search Press and hold the search backward button (H/D) or search forward button (G/C) to search for the position that you intend to start playing. Program Play You can programme a maximum of 99 tracks into the player. 1. Insert a disc and press STOP when it starts playing. 2. Press the program button (PRG.), "MEM" appears and the display changes to "0". 3. @@(Please note: The track number is not displayed.) 4. Press the play/pause button (BF) to start programme play. 5. Press the stop button (L) to stop the programme play. @@@@The playing time of each track is 10 seconds.

@@First press : To repeat the same track. Second press : To repeat all tracks on a disc. @@For example: track number 21 may be from directory 3, track 7. 1. @@@. @@@@3. @@@4. @@@@5. Press the album up button (ALB+) or album down button (ALB-) on the remote control to select the next/previous directory, and play the first track of this directory. If playing is stoped, press the album up button (ALB+) or album down button (ALB-) on the remote control to select the next/previous directory.



[You're reading an excerpt. Click here to read official HITACHI AX-](#)

[M131U user guide](#)

<http://yourpdfguides.com/dref/2815039>

Then choose the track with the next/search forward button (G/C) or previous/search backward button (H/D). 6. Press the play/pause button (BF) to start play the disc. 7. Press the stop button (L) to stop playing.

Note: Play will continue to the final track when the selected tracks have been played. The first 2 digits of the display is the directory number, the next 3 digits. Is the track number and the remaining digits display the minutes and seconds. Playing Repeatedly ONE, DIR and ALL repeat play can be set by pressing the repeat button (REPEAT). First press : To repeat the same track.

Second press : To repeat ALB (Album). Third press : To repeat ALL (All directories and tracks). Fourth press : To cancel the repeat playing. Setting the Clock Automatically Tune into a RDS station and wait for a few minutes. To confirm, press the clock button. - 13 - Use the USB You can connect the USB flash to the USB jack at the front panel of unit. The unit will play MP3 music from the flash directly 1. Plug the USB flash into the USB jack 2. Press the USB button on remote control or press the FUNCTION button on front panel to select the USB function 3. Display shows the word "USB" 4.

MP3 music will be played automatically. Setting the Clock Manually The built-in clock shows the time on the display. 1. Press the clock button (CLOCK), hour indicator will blink. 2. Set the hour with the volume down button (VOL-) or volume up button (VOL+). 3. Press the clock button (CLOCK), minute indicator will blink. 4. Set the minute with the volume down button (VOL-) or volume up button (VOL+).

5. Press the clock button (CLOCK), the built-in clock starts operating and the seconds start counting from 0. Caution: * The operating time of every step shouldn't be longer than 3 seconds or it will return to the time display. @@@@@1. Play a CD or tune in to the desired station.

2. @@80 90 00 After setting the number of minutes for the sleep timer, the display will return to the display as before setting the sleep timer. The system is now set to turn off after the number of minutes you set. To confirm the sleep time When the sleep button (SLEEP) on the remote control is pressed once, the remaining sleep time is displayed. Wait for a second until the display returns to the original display.

- 14 - To cancel the sleep timer setting Repeatedly press the sleep button (SLEEP) on the remote control until the "00" is displayed. @@@@@1. @@2. Set the hour with the volume down button (VOL-) or volume up button (VOL+). 3. Press the timer button (TIMER) on the remote control, the minute indicator will blink. 4. Set the minute with the volume down button (VOL-) or volume up button (VOL+). 5. Press the timer button (TIMER) on the remote control, the selected time is set.

Then set the daily timer to "ON" (daily timer set is in effect) or "OFF" (daily timer set is to cancel) by pressing the volume down button (VOL-) or volume up button (VOL+). Caution: * You can set the daily timer only in standby mode. * The operating time of every step shouldn't be longer than 3 seconds or it will return to time display. * The sound source on the automatic on mode is the same as the sound source the last time, the unit was turned off by the standby switch. * The volume automatically comes on at level 8. To confirm the daily time When you press the timer button (TIMER) on the remote control in standby mode, the daily time is displayed. Wait for a few seconds until the display returns to the time display. To cancel the daily timer setting Repeat the previous steps for setting the daily timer until "OFF" is displayed. Turning off the system also cancels the daily timer. Disc Handling 1.

To keep the disc clean, please don't touch the disc's surface when you are holding it. You should hold the edge. (See fig. 1) 2. If the disc is dirty, it will affect the sound quality.

Please use a clean and soft cloth to wipe the disc from inside to outside. Don't wipe the disc in a circular direction. (See fig. 2) Fig.1 Fig.

2 3. 4. 5. 6. Don't stick paper on the disc. Don't put the disc in a place with direct sunshine or hot sources. Do not play any damaged discs in this player. When you have finished playing a CD, remove it from the CD player and store in its protector cover. - 15 - Troubleshooting If you are having a problem with your system, check this list for a possible solution before calling for service. If you cannot solve the problem from the hints given here, or the system has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom No sound is heard Poor radio reception Possible Cause Connections are incorrect, or loose The antenna is disconnected The antenna is not properly extended and positioned The disc is dirty or scratched The disc is upside down The disc is dirty The path between the remote control and the sensor on the player is blocked The batteries have lost their charge The built-in microprocessor has malfunctioned due to external electrical interference Action Check all connections and make corrections Reconnect the antenna securely Extend antenna to the best reception position Clean or replace the disc Put the disc in with the label side up Remove disc from player, wipe with a clean cloth and re-insert. Remove the obstruction Replace the batteries Unplug the system then plug it back in The disc skips The disc does not play Unable to operate the remote control Operations are disabled - 16 - Specifications System

Specification Power Requirements DAB Frequency Range (band III) Usable Sens. FM Frequency Range Power Consumption Rated Output Power THD Dimensions Speaker Specifications Impedance Output Power Dimensions : : : : : ~ 230V/50Hz 174.928 - 239.200 MHz 95 dBm 87.5 - 108 MHz 100W 25W x 2 0.7% (15W x 2) (CD) 192(W) x 67(H) x 235(D) mm (Amplifier) 192(W) x 62(H) x 242(D) mm 8 30W 128(W) x 205(H) x 205(D) mm : : : Accessories

AM Loop Antenna
.....
.....
.....
.....
.....
.....
.. 1 Remote control

.....
.....
.....
.....
.....
.....
.....
.. 1 Speaker Cords ...
.....
.....
.....

