




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI AX-M138. You'll find the answers to all your questions on the HITACHI AX-M138 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI AX-M138
User guide HITACHI AX-M138
Operating instructions HITACHI AX-M138
Instructions for use HITACHI AX-M138
Instruction manual HITACHI AX-M138

HITACHI AX-M138 Instruction Manual

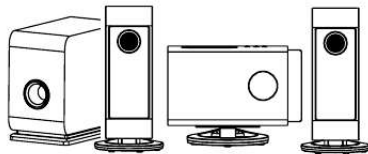

Mini Hi-Fi Component System



[You're reading an excerpt. Click here to read official HITACHI AX-M138 user guide](http://yourpdfguides.com/dref/2815041)

<http://yourpdfguides.com/dref/2815041>

Manual abstract:

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 5 Remote Control

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 5 Wall Mounting Instructions ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.... 6 Main Set .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

@@@@@@@9 Connecting Sub-Woofers

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 9 Connecting AUX

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

9 Connecting the Speakers

.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *10 Connecting the Video-Box ...*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. *10 Connect to an Amplifier With Digital Signal Input Terminal*

.....
.....
.....

.....
.....
.....

.. *11 Connecting the AC Power Cord*

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *11 Installation of Batteries in the Remote Control .*

.....
.....
.....

.....
.....
.....
.....

12 Turning the Power On and Off

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

... 12 Normal playing ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

12 Use the discs

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 12 Playing picture CD disc

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.... 22 Setting the Clock .

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 22 Setting the Daily Timer

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 23 Setting the Sleep Timer

.....

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.... 23 Function Menu Setting List

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 24 Menu function setup

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 24 System Setup ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....
.....
..... 26 Troubleshooting ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 26 Specification

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 27 Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. -1- Before Connection For your safety **CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.** This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit. This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit. Caution: To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

Power Requirement Because the power requirement of electrical products is different in various places, before you use this product, make sure that the power requirement of the product matches your household power. *Laser Product* This product is equipped with low power laser equipment inside. For your safety, don't take apart any covers or try to take apart the product inside. Please contact an authorized service person for repairing. Caution: This product is equipped with low power laser equipment inside, for your safety, don't open the laser radiation protective equipment. Don't look at the laser radiation when the equipment is operating. **CLASS 1 LASER PRODUCT SOME DOS AND DON'TS ON THE SAFE OF EQUIPMENT** This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured. ...

.....
.....
.....

.....

. DO read the operating instructions before you attempt to use the equipment. DO ensure that all electrical connections (including the mains plug, extension leads and interconnections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections. DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DO be careful with glass panels or doors on equipment

.....

.....

.....

.... DON'T remove any fixed cover as this may expose dangerous voltages.

-2- DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment. DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the equipment and don't handle the power cord with wet hands. DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires. DON'T use makeshift stands and NEVER fix legs with wood screws - to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions. DON'T listen to headphones at high volume, as such use can permanently damage your hearing. DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off using the switch on the equipment and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

.....

.....

.....

.... ABOVE ALL, NEVER let anyone especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electrical shock; NEVER guess or take chances with electrical equipment of any kind...it is better to be safe than sorry! ..

.....

.....

.....

.....

.. * Before operating this system, check the voltage of this system to see if it is identical with the voltage of your local power supply. * Unplug the system from the wall outlet if it is not used for a long time. To disconnect the cord, pull it out by grasping the plug * To avoid electric shock, do not open the cabinet.

* There are no user serviceable parts inside. In case of system failure, unplug the power cord and consult your dealer * Do not place this unit on an unstable or sloping surface. Ensure good ventilation surrounding the product. To prevent fire, do not cover the ventilation of the apparatus with news papers, tablecloths, curtains, etc. * Do not place this unit close to strong magnetic field.

* Don't place this unit close to dampness, or the moisture will affect the life of the laser head. * If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the player. Should this occur, the system will not operate properly. Remove the disc and leave the system turned on for about an hour until the moisture evaporates. * Should any solid object or liquid fall into the system, unplug the system and have it checked by qualified personnel before operating it again. * Do not use attachments not recommended by the product manufacturer as they may cause hazards. -3- Control Section Main Set 1. 2. 3. 4.

5. 6. 7. 8. 9. Play/Pause /Select Stop/Auto Scan Next /Search Forward Select Up Previous/Search Backward Select Down Repeat Information S-Bass Volume Up Volume Down VFD Display Lens 10. 11. 12. 13. Disc Tray Eject Function Standby 14.

15. 16. 17. USB Jack A / V Out Connect to Sub-Woofer Connect To Video Box Sub-Woofer 1. 2.

3. 4. 5. AC Power Cord DAB/FM Antenna Power Control Cable Socket AUX Input Terminal L&R Speaker Output Terminals -4- Video-Box 1. 2.

3. 4. Coaxial Output Terminal Component Video Output Terminal Scart Socket Connect To The Main Set Remote Control Volume Up Button Tuner Function Button Mute Button Preset Equalizer Button Super Bass Button Sleep Button Timer Button 7. Loudness Button 8. Clock Button 9. USB Function Button 10. Clock Dim Button 11. Slow Display Button 12. Next Button Select Up Button 13. Angle Button 14.

Repeat Button Information Button 1. 2. 3. 4. 5. 6. 15. OSD Button 16. Time Search Button 17.



[You're reading an excerpt. Click here to read official HITACHI AX-M138 user guide](http://yourpdfguides.com/dref/2815041)

<http://yourpdfguides.com/dref/2815041>

Wait for a few seconds until the display returns to the original display. (You can also operate the key "CLOCK" on the unit.

) Setting the Daily Timer In standby mode, you can use the daily timer setting to turn the unit on automatically at a certain time everyday under standby mode. When the setting timer is on, the timer indicator " " will display on the VFD, however the clock must be set correctly for the timer function to work. - In standby mode, press the timer button (TIMER) , the hour indicator will blink. - Set the hour with the VOL- button or VOL+ button. - Press the timer button (TIMER), the minute indicator will blink.

- Set the minute with the VOL- button or VOL+ button. - Press the timer button (TIMER), the selected time is set. Then set the daily timer to "ON" (daily timer set is in effect) or "OFF" (daily timer set is to cancel) by pressing the VOLbutton or VOL+ button. Note: * You can only set the daily timer only in standby mode. * The operating time of every step shouldn't be longer than10 seconds or it will return to time display. * The sound source of the "timer on" mode is the same as the sound source when the unit was turned off by the standby switch. To confirm the daily time Press the timer button (TIMER) in standby mode, the daily time is displayed. Wait for a second until the display returns to the time display. To cancel the daily timer setting In standby mode, repeatedly press the timer button (TIMER) until the "ON" will display on the VFD, then you can set the daily timer to "OFF" by pressing the VOL- button or VOL+ button (the daily timer will be cancelled). Turning off the system also cancels the daily timer.

Setting the Sleep Timer Use the sleep timer to turn the system off after a selected time. By setting the sleep timer, you can fall asleep and know that your system will turn off by itself rather than playing all night. - Play a disc or tune in to the desired station. - If you set the sleep timer first ,each time you press the sleep button (SLEEP), it changes the number of minutes shown on the VFD in this sequence: - 23 - If you change the sleep timer, each time you press the sleep button (SLEEP), it changes the number of minutes shown on the VFD in this sequence: After setting the number of minutes for the sleep timer, the display will return to the display as before setting the sleep timer. The system is now set to turn off after the number of minutes you set. To confirm the sleep time When pressing the sleep button (SLEEP), the remaining sleep time is displayed. After a few seconds the display returns to the original display. To cancel the sleep timer setting Repeatedly press the sleep button (SLEEP) until the "00" displays on the VFD. You can also cancel the sleep timer turning off the system. Function Menu Setting List Caution: The content of this chart is for reference only.

If something has changed, please take the actual display for standard. Menu function setup * If you want to set the function of this unit, please press the function setting button to display the DVD function setting main menu, then use the , , buttons and OK button. Press the function setting button (SETUP) again to exit the function setting main menu. (Note: If the item displays in gray, that means that it can't be setup and there isn't this function in the disc.) System Setup Screen Saver Set the screen saver to activate or cancel.

TV Type - 4 : 3 PS.....

.When selecting this mode, wide picture displayed on the screen will be cut automatically. - 4 : 3 LB.....When selecting this mode, wide picture displayed on the screen will have black top and bottom area. - 16 : 9 .

.....If this system connects wide screen TV, selecting this mode. Password Select this item to set new password for this unit, follow the screen's indication and enter a password. The original password is 0000. Rating Setup this system when playing disc which had age control. Default Restore to factory setting.

- 24 - Language Setup OSD Language This menu allows the user to select the language for the on-screen. Audio, Subtitle, Disc Menu This function is only available if the disc has the relevant options. Video Setup TV Mode You can setup this according to TV video output type. Brightness, Contrast, Hue, Saturation Setting You can adjust the brightness of the picture. Audio Setup DIGITAL OUT DIGITAL/OFF DIGITAL/RAW DIGITAL/PCM DOWNMIX AUDIO SETUP Digital Out For optical and coaxial output, this system is only used for simulation mode.

Downmix When the disc has Dodly Pro Logic stereo, you can choose LT/RT or STEREO or VSS mode to play this disc. LPCM It is according to setup the audio signal between 48kHz to 192kHz Night Mode Set the night mode state to on or off. LT/RT STEREO VSS OFF CONCERT CHURCH PASSIVE WIDE LIVE 48K 96K 192K ON OFF 3D PROCESSING LPCM NIGHT MODE - 25 - Protect the Disc 1. To keep the disc clean, please don't touch the disc's surface when you are holding it. You should hold the edge.

2. If the disc is dirty, it will affect the sound quality. Please use the clean and soft cloth to wipe the disc from inside to outside. Don't wipe the disc in circular motion. 3. Don't stick paper on the disc. 4. Don't place discs in direct sunlight or near or on heat sources. 5. After you have finished with the disc, please place it back in its original case.

To avoid warping or damage, do not stack discs. 6. Don't play the disc which has flaw or deformation, in case of damaging this player. 7. Clean your discs using only a soft dry cloth. @@@@ @@@@ @20Hz-20kHz (±3dB) Video output

.....

.....

.....

.....

.....

.....

.....

..... 1 VP-P Horizontal definition ..

.....

.....

.....

.....

.....

.....

..... 500 (TV) Dimensions .

.....

.....

.....

.....

.....

.....

.....

.....

.. 184(W) x 222(H) x 304(D) mm Tuner FM Frequency range

.....

.....

.....

.....

.....

.....

.. @@@@ 46dB DAB Frequency Range (band III)

.....

.....

.....

... 174 - 240 MHz Usable Sens.

.....

.....

.....

.....

.....

.....

.....

..... @@@@20Wx 2 Dimensions

.....

.....

.....

.....

.....

.....

.....

..... 140(W) x 140(H) x 293(D) mm Sub-Woofers Power supply ..

.....

.....

.....

.....

.....

.....

.....

..... ~230V / 50 Hz Input power .

.....

.....

.....

.....

.....

.....

.....

... 38W Dimensions

.....

.....

.....

.....
.....
.....
.....

..... 330(W) x 284(H) x 175(D) mm Remote Distance

.....
.....
.....

.....
.....
.....
.....

..... 6 m Angle .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... ± 300 Accessories DAB/FM antenna ..

.....
.....
.....
.....

.....
.....
.....

... 1 Speaker connect line

.....
.....
.....
.....

.. 2 Power control line ...

.....
.....

.....
.....
.....
.....

..... 1 Wall bracket

.....
.....
.....

.....
.....
.....
.....

..... 2 Remote control .

.....

..... 1 Instruction manual ...

..... 1 Video-Box.

1 Video signal line.....

...2 Stand .

..1 Note: Design and specifications are subject to change without prior notice. - 27 - This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product. Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 50,000 products in stock we can deliver direct to your door the very next day.

Visit www.partmaster.co.uk or call 0870 6001 338 (UK customers only) Calls charged at National Rate. For product help or out -of-guarantee support: Dixons customers please call:08701 54 55 60 Currys customers please call:08701 54 55 70 (UK customers only).



[You're reading an excerpt. Click here to read official HITACHI AX-M138 user guide](http://yourpdfguides.com/dref/2815041)

<http://yourpdfguides.com/dref/2815041>

All calls charged at national rates.) To buy additional or replacement parts for this products Please contact Partmaster.co.uk at the web address or telephone number shown above. For remote control, quote part number 06-RE9-01A101 For power control line, quote part number 26000036 For speaker connect line, quote part number 27000177 For video signal line, quote part number 27000075,27000076 .



[You're reading an excerpt. Click here to read official HITACHI AX-M138 user guide](#)

<http://yourpdfguides.com/dref/2815041>