




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI AX-M83. You'll find the answers to all your questions on the HITACHI AX-M83 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI AX-M83
User guide HITACHI AX-M83
Operating instructions HITACHI AX-M83
Instructions for use HITACHI AX-M83
Instruction manual HITACHI AX-M83

HITACHI AX-M83

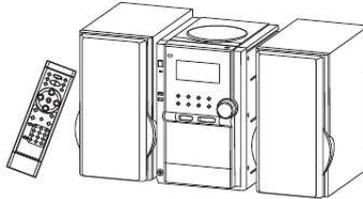

STEREO CD RADIO CASSETTE RECORDER

For product help or out-of-guarantee support:
Dixons customers please call: 08701 54 55 60
Currys customers please call: 08701 54 55 70
(UK customers only. All calls charged at national rates.)



INSTRUCTIONS MANUAL



[You're reading an excerpt. Click here to read official HITACHI AX-M83 user guide](http://yourpdfguides.com/dref/2815047)

<http://yourpdfguides.com/dref/2815047>

Manual abstract:

-----DO read the operating instructions before you attempt to use the equipment. DO ensure that all electrical connections (including the mains plug, extension leads and interconnections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections. DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment. -----DON'T remove any fixed cover as this may expose dangerous voltages. DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment. DON'T allow electrical equipment to be exposed to dripping, or splashing. Objects filled with liquids, such as vases, must NOT be placed on the equipment.

DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires. DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. @@@@Make sure that your family knows how to do this. @@@@ABOVE ALL NEVER let anyone especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electric shock.

NEVER guess or take chances with electrical equipment of any kind...it is better to be safe than sorry! UK-1 This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product. Please read this manual carefully before attempting to operate the unit in order to become familiar with its features. Important Notes ** Keep the safety and operating instructions for future reference. Avoid installing the unit in locations described below: Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters. On top of other stereo equipment that radiates heat. Places lacking ventilation or dusty places. Places subject to constant vibration. Humid or moist places. Make sure not to obstruct the ventilation openings. Operate turning controls and switches as instructed in the manual.

Before turning on the power for the first time, make certain the power cord is properly installed. Store your tapes or CD 's in a cool area to avoid damage from heat. To disconnect the product switch off and remove the plug from the mains supply. When the unit is disconnected from the mains supply the LED will not light up. Minimum distances around the apparatus for sufficient ventilation is 5cm. Attention should be drawn to the environmental aspects of battery disposal. The use of apparatus in moderate climates. * * * * * For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) , NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. ATTENTION The owners manual contains important operating and maintenance instructions, for your safety, it is necessary to refer to the manual.

WARNING : TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING. DISCONNECT FROM THE MAINS SUPPLY WHEN NOT IN USE. Note: This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit. The CD player includes micro-processors which may malfunction as a result of external electrical interference or noise.

If the CD player is not working properly, disconnect the power source and then reconnect it. UK-2 FEATURES AND CONTROLS 1 1 21 22 8 9 10 11 12 6 7 4 5 23 24 25 26 28 27 34 31 32 35 33 29 13 20 14 16 18 15 17 19 30 UK-3 FEATURES AND CONTROLS 1. SPEAKERS 2. CD DOOR 3. CD DOOR OPEN/CLOSE BUTTON 4.

STANDBY BUTTON 5. STANDBY/POWER INDICATOR 6. REPEAT/M-UP BUTTON 7. FUNCTION BUTTON 8. ENCODE BUTTON 9. MENU BUTTON 10. PROG/MEMORY/ERASE BUTTON 11. USB IN JACK 12. RANDOM/M-DOWN BUTTON 13. PHONES JACK 14.

CASSETTE RECORD BUTTON 15. CASSETTE PLAY BUTTON 16. CASSETTE REWIND BUTTON 17. CASSETTE F.FWD BUTTON 18. CASSETTE STOP/EJECT BUTTON 19. CASSETTE PAUSE BUTTON 20. CASSETTE BUTTON DOOR 21. IR SENSOR 22. LCD DISPLAY 23. NAME SEARCH/SKIP/TUNING UP BUTTON 24. PLAY/PAUSE BUTTON 25. VOLUME UP/DOWN KNOB 26. STOP/BAND BUTTON 27. MEMORY CARD JACK 28.

NAME SEARCH/SKIP/TUNING DOWN BUTTON 29. CASSETTE DOOR 30. AC CORD 31. FM ANTENNA 32. AM ANTENNA JACK 33. SPEAKER TERMINALS 34. BEAT-CUT SWITCH 35. AUX IN PHONO'S REMOTE CONTROL 1. 2. 3. 4. 5. 6. 7. 8.

STANDBY BUTTON MUTE BUTTON VOLUME DOWN BUTTON SLEEP BUTTON TIMER BUTTON CD PLAY/PAUSE BUTTON PROGRAM/MEMORY/ERASE BUTTON SKIP/TUNING/NAME SEARCH DN BUTTON 9. CD STOP BUTTON 10. REPEAT/M-UP BUTTON 11. RANDOM/M-DN BUTTON 12. ID3 BUTTON 13. CD DOOR OPEN/CLOSE 14. VOLUME UP BUTTON 15. FUNCTION BUTTON 16. MENU BUTTON 17. SKIP/TUNING/NAME SEARCH UP BUTTON 18.

EQ BUTTON 19. ENCODING BUTTON 20. CLOCK BUTTON 21. NUMBER SEARCH BUTTON 22. INTRO/MONO/ST. BUTTON 1 3 5 6 2 4 13 14 15 16 7 8 9 10 11 12 21 22 18 19 20 17 UK-4 STANDBY 1. 2. Press STANDBY button on the unit (or remote) to switch the unit on. Select the sound source (CD, TAPE, AUX IN, or TUNER) by pressing FUNCTION button. The corresponding display will light up.

3. Adjust the volume with the VOLUME (UP or DOWN) button. 4. Press STANDBY button again to turn unit to standby mode. Note: To turn the unit off disconnect from the mains supply. CLOCK SETTING To set the CLOCK setting in power or standby mode: In Standby mode: 1. Press and hold the CLOCK button on the remote until the hour digits flash in the display. 2. Press or buttons to set to the correct hour and press the CLOCK button on the remote again, the minute digits will flash. Press the or to set to the correct minute.

Then press the clock button again to confirm. In Power on mode: 1. Press the MENU button on the remote the display will show "CLOCK". 2. Press the PLAY/PAUSE button the hour digits flash in the display. Press the or button to set to the correct hour and press the PLAY/PAUSE button again the minute digits will flash. Press the or button to set to the correct minute. Then press the PLAY/PAUSE button again to confirm. 3. Press the STOP/BAND button to perform the clock setting.

NOTE: Each menu option above will be cleared, if the button is not pressed within 10 seconds. RADIO OPERATION Press the FUNCTION button to select the TUNER mode on the unit (or remote). 1. Press the STOP/BAND button to select wave band range on the display. or 2. Select the desired frequency with the buttons. BAND SELECT To tune for weak stations, use manual tuning by pressing the correct frequency or the reception is at its best.

[You're reading an excerpt. Click here to read official HITACHI AX-](#)



[M83 user guide](#)

<http://yourpdfguides.com/dref/2815047>

or buttons continuously until you read MONO/STEREO SELECT You can use this function only in FM mode. 1. When you want to select FM stereo station, press the INTRO/MONO/STEREO button.

When you receive a FM stereo station the " " indicator will appear on the display, you can receive FM stereo transmission . 2. When you press the INTRO/MONO/STEREO button again, the FM STEREO indicator will turn off & switch to MONO FM status. Automatic Tuning 1. 2. or Press the buttons for a second or more, then release. The tuner will automatically search the first station of sufficient signal strength. Repeat above procedure if you wish to select another station. UK-5 Programming preset stations You can preset stations of your choice and store up to 10 AM and 20 FM stations in its memory. To store your selected broadcasting stations: 1.

Press the STOP/BAND button on the unit (or remote) to select between AM and FM. 2. Tune to the required station. 3. Press the PROG/MEMORY/ERASE button. 4. @ @5. Press the PROG/MEMORY/ERASE again to confirm your selection. 6. To program more stations into memory, repeat the above steps 2 to 5. 7. @ @2. 3. Press the STOP/BAND button to select the desired band. @ @ @ @2.

Power off or power failure will erase the previously stored stations. This is not a fault and is common in similar products. @ @ @ @ ON TIMER SETTING When the display shows "ON TIMER". A. @ @ Press set to your desired hour. or B. Press the PLAY/PAUSE button again, the minute digits will flash. Press your desired minute. C. @ @ OFF TIMER SETTING When the display shows "OFF TIMER". or A. @ @ Press button to set to your desired hour. or B. Press the PLAY/PAUSE button, the minute digits will flash. Press buttons to set your desired minute.

C. Press the PLAY/PAUSE button again to confirm. 3. SOURCE SETTING When the display shows "SOURCE". A. Press the PLAY/PAUSE button to enter source setting. B. Press the buttons to set your desired source. or C. @ @ @ @2.

Press the or buttons to set to your desired station number. 3. Press the PLAY/PAUSE button but again to confirm. NOTE: When the desired timer settings have been selected. 1. @ @2. @ @ @ @ @ @ Press the CASS. STOP/EJECT button to open the cassette door. @ @ Push the cassette well down and close the door. Be sure not to touch the tape surface.

@ @ To stop playback, press the CASS. STOP/EJECT button once. To release the cassette, press the CASS. STOP/ EJECT button again. @ @ Insert a cassette into the deck and press the RECORD button. Press the CASS. STOP/EJECT button to stop recording. The CASS. @ @ Select the required tracks to be recorded. Insert a cassette into the cassette deck and press the CASS.

RECORD button. Press the CASS. STOP/ EJECT button to stop recording. Auto Stop The AUTO STOP system operates while recording from the built-in RADIO or CD I show the track number . @ @2. Insert the USB device or SD/MMC CARD. @ @ @ @ The unit can only MP3 or WMA tracks in this mode . 2. The memory size of the card is not limited.(please note: the unit can't support some brands of flash disc, USB harddisk and ipod 40GB.) 3. It can support USB version 1.1 and 2.0. UK-9 F5 REPEAT PLAY - CD/MP3/USB/CARD 1.

Press the REPEAT/MEM-UP button once on the remote, " " is displayed. CD will play the current track repeatedly. 2. Press the REPEAT/MEM-UP button twice, " " ALL is displayed. CD will play all tracks repeatedly. 3. Press the REPEAT/MEM-UP button third to cancel repeat play and the , " " will disappear from the display. RANDOM PLAY 1. Press the RANDOM/MEM-DN button on the remote, then RANDOM is displayed. 2. Press the RANDOM/MEM-DN button again, then resume to normally play. INTRO PLAY(on the remote) 1. Press the INTRO/MONO/ST. button on the remote, INTRO is displayed. INTRO will play the first 10 seconds of each track.

2. Press the INTRO/MONO/ST. button twice, to resume normal play. PROGRAM OPERATION Please note: Program function in CD stop mode only. Opening the CD door will cancel the programmed tracks. 1. How to program - CD/MP3 1) Press the PROG/MEMORY button, PROGRAM will be displayed.(F6) 2) Press the or buttons, to select your chosen track.(F7) 3) Press the PROG/MEMORY button to confirm the track number. 4) Repeat the above steps to program a maximum number of 32 tracks.

Please note: When a track has been confirmed the unit will automatically go to the next program number. F6 CD PROGRAM F7 CD PROGRAM 2. PROGRAM PLAY After programming tracks, press the PLAY/PAUSE button to playback tracks in the order they were programmed. TIMERSTOP/BAND button in stop mode, switch the unit OFF, or open the CD door to cancel Press the SETTING programs. 3.

CANCEL PROGRAM UK-10 EQ CONTROL(on the remote) Press the EQ button to select different preset EQ mode. The display will show: POP JAZZ CLASSIC ROCK FLAT TO SET SLEEP FUNCTION 1. 2. If you want to fall asleep to music, press SLEEP button on the remote. You may adjust the Radio or CD player's sleep function to play from 120, 90, 60,45,15,5 minutes of music before shutting itself off automatically.

120 90 60 45 NORMAL 15 5 ENCODING OPERATION 1. Press the MENU button, then press the or buttons to select RECORD. 2. Press the PLAY/PAUSE button to enter the RECORD menu, the display will show the "REC USB" . 3. Press the or buttons to select "REC USB" or "REC CARD", then press the PLAY/PAUSE button to confirm. NOTE : The encode bit rates: Radio: 112 kbps. Aux: 128 k bp s. CD : 128 k bp s. ENCODING AND STORING FROM RADIO You can encode your favorite radio program into MP3 format and store then it to your memory device through the USB port or SD/MMC card slot.

1. Press the function button to select tuner function. 2. Press the or buttons to select the station to be encoded. (F8) 3. Press the ENCODING button to start encoding. The display will show "REC" "CARD/USB" 4. Press the encoding button or STOP/BAND button to stop encoding. ENCODING AND STORING FROM A NORMAL CD. You can encode you favorite CD songs into MP3 format and store them to your memory device through the USB port or SD/MMC card slot.

1. Press the function button to select CD function. 2. Press the or buttons to select the track to be encoded. 3. Press the encoding button to start sync encoding and the display will show "REC" "CARD/USB" flash.(F9) 4. Press the encoding button or STOP/BAND button to stop encoding. COPYING FROM MP3 DISC You can copy the files from an MP3 disc and store into your memory device through the USB port or SD/MMC cord slot. 1.

Insert the MP3 disc and press the function button to select the CD function . 2. Press the or buttons to select the track that you want to copy. 3. Press the encoding button to start copying the files and the display will show "REC" "CARD/USB" and flash.(F10) ERASING FILES FROM THE SD/MMC CARD You can use this function to erase unwanted files. 1. Press the function button to select USB/CARD . 2. Press the or buttons to select the file you want to erase.

[You're reading an excerpt. Click here to read official HITACHI AX-](#)



[M83 user guide](#)

<http://yourpdfguides.com/dref/2815047>

The track will start playing automatically . 3. Press the EASER/MEMORY button twice to delete the file. The display will show "DEL FILE".(F11) UK-11 F8 REC F9 CARD TUNER REC CD CARD F10 REC CD F11 CARD MP3 CARD MP3 AUX PLAY 1. Press the FUNCTION button to select "AUX IN". External equipment can be played through your AX-M83 unit. 2. Use a cable with RCA phono plugs to connect equipment. MUTE SETTING(on the remote) 1. Press the MUTE button on the remote to pause the volume. The display will show MUTE. 2. Press MUTE button again, to return to normal playback. LISTEN

TO THE MUSIC BY USING HEADPHONE To listen to the unit with headphones (not included) insert the 3.

5mm mini-stereo plug from the headphones into the PHONES jack on the front panel. The external speakers will not function when headphones are used.

UK-12 COMPACT DISC 1. Always use a compact discs bearing the mark as shown. 2.

Notes on handling discs * Do not touch the reflective recorded surface. * Do not stick paper or write anything on the surface. * Do not bend the disc. 3.

Storage * Store the disc in its case. * Do not expose discs to direct sunlight or high temperatures, high humidity or dusty places. Cleaning a disc * Should the disc become soiled, wipe off dust, dirt and fingerprints with a soft cloth. @@@@REPEAT INDICATOR B. ENCODING INDICATOR C.

TRACK/NUMBER/TIME INDICATOR D.

STEREO INDICATOR E. @@W. : RADIO SECTION FREQUENCY RANGE : 230V~50Hz 20 Watts x 2 160(W) x 230 (D) x 260 (H) mm 145 (W) x 230 (D) x 259.5 (H) mm 7.5kg FM 87.5 - 108 MHz AM 522 - 1620 kHz CASSETTE SECTION TAPE SPEED : FREQUENCY RESPONSE : COMPACT DISC SECTION OPTICAL PICKUP : FREQUENCY RESPONSE : 4.75 CM/SEC 125Hz-8KHz 3 - BEAM LASER 100Hz - 16kHz SPECIFICATION SUBJECT TO CHANGE

WITHOUT FURTHER NOTICE. 3 Visit www.partmaster.co.

uk or call 0870 6001 338 (UK customers only) Calls charged at National Rate. Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 50.

000 products in stock we can deliver direct to your door the very next day. Note: This product is exclusively available through Dixons Stores Group. In the unlikely event of a problem with your product please return to the store where the purchase was made. UK-14 .



[You're reading an excerpt. Click here to read official HITACHI AX-M83 user guide](#)

<http://yourpdfguides.com/dref/2815047>