



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI AXM89MP3. You'll find the answers to all your questions on the HITACHI AXM89MP3 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual HITACHI AXM89MP3
User guide HITACHI AXM89MP3
Operating instructions HITACHI AXM89MP3
Instructions for use HITACHI AXM89MP3
Instruction manual HITACHI AXM89MP3

HITACHI

MP3/USB SLOT-IN CD MICRO SYSTEM
MICRO-CHAINE COMPATIBLE MP3 AVEC PORT USB
MP3/USB SLOT-IN CD MICRO SYSTEEM
MICRO-HIFISYSTEM MIT USB SLOT EINGANG
MICRO HI-FI COMPATIBILE CON MP3 CON PORTA USB E SLOT-IN PER CD
CD MIKROSYSTÉM S MP3/USB
MP3/USB CD MIKRO SYSTÉM SE ŠTĚRBINOVÝM VKLÁDÁNÍM

AXM89MP3 / AXM89MP3UK

OPERATING INSTRUCTIONS
MANUEL D'UTILISATION
HANDLEIDING
ISTRUZIONI OPERATIVE
BETRIEBSANLEITUNG
POKYNY K OBSLUZE
NÁVOD K OBSLUZE

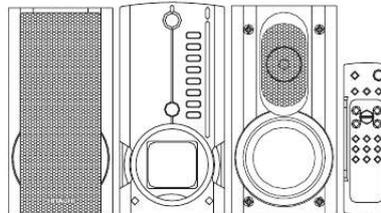

Before operating please read these instructions thoroughly.
Avant de faire fonctionner l'appareil, lisez bien toutes les instructions de ce manuel.
Deze instructies aandachtig doorlezen alvorens het toestel te gebruiken.
Leggere attentamente le istruzioni prima di usare l'apparecchio.
Lesen Sie bitte vor Inbetriebnahme diese Gebrauchsanweisung aufmerksam durch.
Pred použitím si prosím pečlivě prostudujte tyto pokyny.
Pred použitím si dôkladne prečítajte tieto pokyny.



[You're reading an excerpt. Click here to read official HITACHI AXM89MP3 user guide](http://yourpdfguides.com/dref/2815051)
<http://yourpdfguides.com/dref/2815051>

Manual abstract:

@@Pred použitím si prosím peclive prostudujte tyto pokyny. Pred použitím si dôkladone precitajte tieto pokyny. SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured. DO read the operating instructions before you attempt to use the equipment. DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections. DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment. DO be careful with glass panels or doors on equipment. DO route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat. DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment. DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the equipment. DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires.

DON'T use makeshift stands and NEVER fix legs with wood screws - to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions. DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving. DON'T listen to headphones at high volume, as such use can permanently damage your hearing. @@@@ABOVE ALL --- NEVER let anyone especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electrical shock; --- NEVER guess or take chances with electrical equipment of any kind --- it is better to be safe than sorry! 1 IMPORTANT (FOR UK ONLY) The mains lead on this equipment may be supplied with a moulded plug incorporating a fuse, the value of which is indicated on the pin face of the plug.

Should the fuse need to be replaced, an ASTA or BSI approved BS1362 fuse must be used of the same rating. If the fuse cover is detachable never use the plug with the cover omitted. If a replacement fuse cover is required, ensure it is of the same colour as that visible on the pin face of the plug. Fuse covers are available from your dealer. DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer. Should it be necessary to change the mains plug, this must be carried out by a competent person, preferably a qualified electrician. If there is no alternative to cutting off the mains plug, ensure that you dispose of it immediately, having first removed the fuse, to avoid a possible shock hazard by inadvertent connection to the mains supply. IMPORTANT The wires in this mains lead are coloured in accordance with the following code: Blue : NEUTRAL Brown : LIVE As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows: The wire coloured BLUE must be connected to the terminal marked with the Letter N or coloured BLUE or BLACK. The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

On no account connect either of these wires to the terminal marked E or by the earth symbol or coloured green or green and yellow. Alternatively, this equipment may be supplied with a rewirable plug already fitted, which may be removed if not suitable and an alternative fitted in accordance with the preceding instructions 2 Warning: to prevent fire or shock hazard, don't expose this appliance to rain or moisture. These markings are located on the bottom, side or back of the unit. Caution: to prevent the risk of electric shock, do not remove cover (or back), no user-serviceable parts inside, refer servicing to qualified service personnel. @@@@Mains plug is used as the disconnect device. @@@@Only a qualified service person should remove the cover or attempt to service this device, due to possible eye injury. "Caution: Use of controls or adjustments or performance of procedure other than specified herein may result in hazardous radiation exposure." Danger: Invisible laser radiation when open and interlock failed or defeated avoid direct exposure to beam. Caution: Hazardous laser radiation when open and interlock defeated. 3 SAFETY INSTRUCTION 1.

READ INSTRUCTIONS - All the safety and operating instructions should be read before the appliance is operated. 2. RETAIN INSTRUCTIONS - The safety and operating instruction should be retained for future reference. 3. HEED WARNINGS - All warnings on the appliance and in the operating instructions should be adhered to.

4. FOLLOW INSTRUCTIONS - All operating and use instructions should be followed. 5. WATER AND MOISTURE - The appliance should not be used near water, for example, near a bathtub, kitchen sink, laundry tub, swimming pool or in a wet basement. 6.

VENTILATION - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings. 7. HEAT - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat. 8. POWER SOURCES - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. 9. GROUNDING AND POLARIZATION - Precautions should be taken to insure that the grounding or polarization means of an appliance is not defeated. 10. POWER CORD PROTECTION - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point at which they exit from the appliance.

11. @@@12. @@@13. @@@14. @@@15. @@@An appliance and cart combination should be moved with care. @@@16. @@@17. @@@The power-supply cord or plug has been damaged.



[You're reading an excerpt. Click here to read official HITACHI AXM89MP3 user guide](http://yourpdfguides.com/dref/2815051)
<http://yourpdfguides.com/dref/2815051>

B.

@@C. The appliance has been exposed to rain. D. The appliance has been dropped, or the enclosure damaged. E.

@@18. @@19. @@Section 810 of the National Electrical Code, ANS/NFPA No. @@20. @@This is a safety feature.

@@@21. Mains plug is used as the disconnect device. @@@@No other discs can be played. 1. Open a disc case by holding the bottom left and right sides with the right hand, and then lighting the top cover+ Key 13.FIND/ST. @@Terminals for 2 loudspeakers (minimum speaker impedance 8 ohm). Attach loudspeaker cables to the unit. Left speaker: connect the wire to terminal "L". Right speaker: connect the wire to terminal "R".

B. Terminal for FM antenna. The antenna wire supplied with the unit can be connected to terminal. Adjust the position of FM antenna for optimum reception.

@@C. AUX input. For connection of other sound sources. (e.g. @@The display will show the time.

1. You can press POWER to switch on the unit. 2. The standby function of the unit remains on until the unit is switched on. 3.

@@@2. @@3. @@4. @@5. @@Press ON/OFF switch on the unit or remote.

2. Press FUNCTION to select the tuner mode. 3. Select the tuning range with the BAND button. 4. Press REW/DN B or FF/UP F for few seconds, then release the button. @@ · Repeat this procedure if you wish to select another station. 5. @@6. @@PROGRAMMING OF PRESET STATIONS (For remote control only) 1.

Select the tuning range with the BAND button. 2. Tune to the desired station as described under Tuning. 3. Press MEMORY key. "01" will start to flash and "MEMORY" will display. 4. Press ALBUM/PRESET - or ALBUM/PRESET + to assign a number (FM 1-30/ AM 1-10) to the preset station. 5. Press MEMORY key again.

The frequency, preset number and stereo setting are now entered in the memory. 6. Repeat this procedure to store other frequencies and preset in the memory.

TUNING TO PRESET STATIONS (For remote control only) Select a number between 1 and 30 (FM 1-30 / AM 1-10) by pressing: ALBUM/PRESET - or ALBUM/PRESET + button. 10 OPERATION/COMPACT DISC/MP3 Press FUNCTION key to select the MP3-CD/CD function.

INSERTING THE MP3-CD/CD DISC 1. Press OPEN/CLOSE to open the CD door. 2. Insert a MP3-CD/CD in the tray. 3.

Press OPEN/CLOSE again to close the CD door. · The MP3-CD/CD-player starts and scans the contents list of the MP3-CD/CD. FOR CD After a few seconds, the total playing time and number of tracks appear on the display. FOR MP3 After a few seconds, the total number of tracks, albums and MP3 appear on the display. PLAYING THE ENTIRE DISC 1. Press PLAY/PAUSE RP. · Play starts with the first track. · The display shows the current track number and its elapsed playing time. · When all the tracksind function Press FIND/ST. to access the search function.

FIND BY ALBUM NAME 1. Press FIND/ST. to access this search mode. The display will show " ", "ALBUM" and the name of the folder. @@2. Press PLAY/PAUSE RP key to start playing. TEXT DISPLAY (ID3 DISPLAY) During MP3 playing, press FIND/ST. @@Press FIND/ST. key for 2 seconds again to return to the track playing time. @@@@For TUNER 1.

If you select BAND, press REW/DN B or FF/UP F to select a preset station. 2. The display will show the selected preset station and frequency. 3. Press TIMER to confirm your selection.

4. " H" Icon and "ON" will appear on the display. 5. The digit of hour segment will flash more than 2 seconds. 6.

Press REW/DN B or FF/UP F to set the hour. 7. Press TIMER again, the digit of minutes segment will flash on the display. 8. Press REW/DN B or FF/UP F to set the minutes. 9. Press TIMER again to store the start time. 10. Repeat steps 6~8 to set the timer off. 11.

The display will show TUNER segment. 12. Press TIMER to store the sound source. 13. The volume level will appear on the display. 14. Press REW/DN B or FF/UP F to set the desired sound level. 15. Press TIMER again to store the timer setting. For CD 1.

Insert a disc into the CD tray. 2. Press TIMER. 3. Repeat steps 4-11 under For tuner for Timer setting.

4. Press REW/DN B or FF/UP F to set the sound source to CD. 5. The volume level will appear on the display. 6.

Press REW/DN B or FF/UP F to set the desired sound level. 7. Press TIMER again to store the timer setting. 8. CD will be played. TIMER OFF SETTING 1. Press the TIMER. 2. The " H" icon will disappear. If you want to change the auto play time, redo the steps above.

OPERATION/SLEEP (FOR REMOTE ONLY) 1. 2. 3. Press SLEEP, "SLEEP" appear on the display. Keep pressing SLEEP to adjust the sleep time in the order of 90>80>70...10 minutes. To cancel the sleep mode, press SLEEP again. OPERATION/PRESET EQUALIZER Press EQ key to select the digital sound performance in the order of PASS, CLASSIC, ROCK, POP & JAZZ.

14 OPERATION/MUTE (FOR REMOTE ONLY) Press MUTE to terminate the sound output. Press again to cancel this mode. GENERAL Set not reacting when any function button is pressed. The normal function of the product may be disturbed by external interference, just reset the product (reconnect of power source may be required) to resume normal operation. SPECIFICATIONS Power Supply Output Power (Per Channel) Power Consumption Radio Section Frequency Range Compact Disc Section Frequency Response (-6dB) Signal-to-noise Ratio Harmonic Distortion Channel Separation AC 230V ~ 50 Hz 12. 5 watts RMS into 8 ohm 40 W MW 522 - 1620 KHz, FM 87.5 - 108 MHz 60-15,000 Hz 40 dB 1% 35 dB Continuous improvements are being made to our equipment both in quality and performance, thus we reserve the right to alter specifications without notice. ESD Remark: This symbol on the product or on its packaging means that your electrical and electronic equipment should be disposed at the end of life separately from your household wastes. There are separate collection systems for recycling in EU. For more information, please contact the local authority or the dealer where you purchased the product.



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/2815051)

[AXM89MP3 user guide](http://yourpdfguides.com/dref/2815051)

<http://yourpdfguides.com/dref/2815051>