



Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI CX77MP3C. You'll find the answers to all your questions on the HITACHI CX77MP3C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI CX77MP3C
User guide HITACHI CX77MP3C
Operating instructions HITACHI CX77MP3C
Instructions for use HITACHI CX77MP3C
Instruction manual HITACHI CX77MP3C

HITACHI
Inspire the Next

INSTRUCTION MANUAL
MANUEL D'UTILISATION
HANDLEIDING
ISTRUZIONI OPERATIVE

Model No: CX77MP3C
Portable CD Player with MP3 and USB Slot
Lecteur CD Portable Compatible MP3 Avec Port USB
DRAAGBARE CD SPELER MET USB & MP3
LETTORE CD PORTATILE CON PORTA USB & MP3

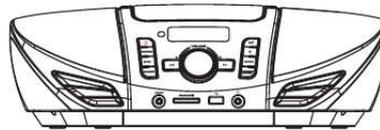

Before operating please read these instructions thoroughly
Avant de faire fonctionner l'appareil, lisez bien toutes les instructions de ce manuel
Deze instructies aandachtig doorlezen alvorens het toestel te gebruiken
leggere attentamente le istruzioni prima di usare l'apparecchio



[You're reading an excerpt. Click here to read official HITACHI CX77MP3C user guide](http://yourpdfguides.com/dref/3961821)
<http://yourpdfguides.com/dref/3961821>

Manual abstract:

This product is fitted with a 13A plug complying with BS1363. If this plug is unsuitable or needs to be replaced, please note the following : **IMPORTANT** The mains lead on this equipment may be supplied with a moulded plug incorporating a fuse, the value of which is indicated on the pin face of the plug. Should the fuse need to be replaced, an ASTA or BSI approved BS 1362 fuse must be used of the same rating. If the fuse cover is detachable never use the plug with the cover omitted. If a replacement fuse cover is required, ensure it is of the same colour as that visible on the pin face of the plug. Fuse covers are available from your dealer. **DO NOT** cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer. @@@@The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED. @@@@Switch off and withdraw the mains plug before making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment. DO be careful with glass panels or doors on equipment. DO route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat. *****

DON'T remove any fixed cover as this may expose dangerous voltages. DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc.

Overheating will cause damage and shorten the life of the equipment. DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the equipment. DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires. @@@@It is illegal to watch television whilst driving.

@@@@@ABOVE ALL --- NEVER let anyone especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electrical shock; --- NEVER guess or take chances with electrical equipment of any kind --- it is better to be safe than sorry! ***** 5

Used correctly, domestic batteries are a safe and dependable source of portable power. Problems can occur if they are misused or abused -- resulting in leakage or, in extreme cases, fire or explosion. Here are some simple guidelines to safe battery use designed to eliminate any such problems. ALWAYS ALWAYS BATTERY SAFETY GUIDELINES ALWAYS Take care to fit your batteries correctly, observing the plus and minus marks on the battery and appliance. Incorrect fitting can cause leakage or, in extreme cases, fire or even an explosion. Replace the whole set of batteries at one time, taking care not to mix old and new batteries or batteries of different types, since this can result in leakage or, in extreme cases, fire or even an explosion. ALWAYS NEVER Store unused batteries in their packaging and away from metal objects which may cause a short-circuit resulting in leakage or, in extreme cases, fire or even an explosion. Remove dead batteries from equipment and all batteries from equipment you know you are not going to use for a long time. Otherwise the batteries may leak and cause damage. Never dispose of batteries in fire as this can cause them to explode.

Please recycle dead batteries; do not put with the normal household waste. NEVER ALWAYS ALWAYS Never attempt to recharge ordinary batteries, either in a charger or by applying heat to them. They may leak, cause fire or even explode. There are special rechargeable batteries which are clearly marked as such. Supervise children if they are replacing batteries themselves in order to ensure these guidelines are followed. Remember that small button cell batteries such as used in some hearing aids, toys, games and other appliances, are easily swallowed by young children and this can be dangerous. ALWAYS ALWAYS ALWAYS Keep loose button cells away from young children. Make sure battery compartments are secure. Seek medical advice if you believe a cell has been swallowed. Safety Sound Levels Your hearing is important to you and to us so please take care when operating this equipment.

It is strongly recommended that you follow the guidelines in order to prevent possible damage to, or loss of hearing. Over time your hearing will adapt to continuous load sounds and will give the impression that the volume has in fact been reduced. What seems normal to you may in fact be harmful. To guard against this, set the initial volume of the equipment to a low level. Follow the steps below to ensure that the product can be enjoyed at a comfortable listening level: 10.

6. 7 Clean only with a dry cloth. Do not block any ventilation openings. Keep a minimum of 50mm space all around the Micro HiFi. Keep away from heat sources, such as radiators, heaters, stoves etc.

@@Refer all servicing to qualified service personnel. @b. c. d. e. @@Damage to your hearing is accumulative and irreversible. @@@@2. Read these instructions carefully. Save these instructions in a safe place for future reference. Heed all warnings.

Do not use this apparatus near water. @@Do not place flame sources, such as candles on the Micro HiFi. @@Do not repair damaged mains cord. It must be replaced by a qualified person. 12. 3. 4. 13. 5. 14.

7 Basic setup 1. Extend the FM antenna · Pull out the telescopic antenna. Incline and turn the antenna. @@2. @@The remote control range is approximately 5 metres.

Keep within about 30 degrees of the remote sensor. 3. @@@@4. @@· Do not mix battery types:e.g. alkaline with carbon zinc. Only use batteries of the same type for the set. @@@@2. 3. 8. 9. 10. 11. 4. 5.

6. 7. 12. 13. 14. 15. 9 16. 17. 16 18 21 20 17 19 22 21. 23 26 24 25 22.
23. 24. 25. 27 29 28 31 30 33 32 26. 27.
28. 29. 30. 31. 34 32.

35 36 33. 34. 35. 36. 18. 19. @@@@The current returning to the previous display. @@The selected EQ mode icon shows at the bottom of the display. Press DBBS to turn bass boost on or off. When selected, DBBS icon shows at the bottom of the display.

Press MUTE to temporarily cut the audio output. @@Press To set the time: 1. When the unit is turned on, press and hold MEMORY/CLOCK. The current time appears. Press MEMORY/CLOCK again. 12HR or 24HR shows on the display. or to set the minute time. 7. Press MEMORY/CLOCK. The clock time is now set.

@@Press display. or to select 12 or 24 hour time 3. Press MEMORY/CLOCK to confirm. 4. Press or to set the hour time.

5. @@@@To activate the timer: 1. When the unit is turned on, press TIMER on the remote control. 2. @@@@Press to start playback. 2. During playback, press again to resume. to pause it. @@@@1. In CD mode, press playback. to stop any disc 3. Press or to skip to the previous or next track.



[You're reading an excerpt. Click here to read official HITACHI CX77MP3C user guide](#)

@@ or to scan backward 4. Press and hold or forward within the same track/ le. Release the button to resume to playback at normal speed.

5. Press to stop the playback. 2. While playback is stopped, press MEMORY/ CLOCK. · PROG and PR01 shows on the display. @@@@To select a playback mode: · Press PLAY MODE repeatedly on the remote control to select a playback mode) Repeat one (ALBUM) Repeat album* (Repeat all (ALL)) Random (Cancel playback mode (no icon) · * Repeat album is only available for MP3 discs. The selected repeat or random mode icon will show on the display. 3. Press or to select the track for the rst program location. 4.

Press MEMORY/CLOCK to store the selected track into the program location. 5. Repeat steps 3 and 4 to program more tracks. Up to 40 tracks can be programmed. to start playback of the 6.

Press programmed tracks. Playback will stop after all programmed tracks are played. 7. To play back the programmed tracks again, press . 8. To cancel the programmed sequence from the memory, press twice in the programme mode, or open the disc compartment door. · PROG disappears from the display. 15 13 Tuner To access the Tuner mode: · Press FUNCTION repeatedly until Tuner mode is selected. · The TUNER icon lights on the display when tuner mode is selected. To change tuner band: · Press BAND in tuner mode to switch between FM and MW band. To perform a station search: or to adjust the frequency. @@@@@Incline and turn the antenna. Reduce its length if the signal is too strong(very close to a transmitter). AM antenna · The set is provided with a built-in antenna. Direct this antenna by turning the whole set.

· Press and hold or until the frequency on the display begins to change and then release the button to automatically sparticles and light stains will have absolutely no effect on reproduction quality. Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit. Never write on or affix labels to the surface of compact discs. Care of the cabinet If the cabinet becomes dusty, wipe it with a soft dry dust cloth. Do not use any wax, polish sprays, or abrasive cleaners on the cabinet. Caution Never allow any water or other liquids to get inside the unit while cleaning. 19 Specifications Technical Data Model no. Power Supply CD Max.

Output Power Frequency CX77MP3C AC 230-240V~50Hz 30W DC 12V (8 x D cell/UM-1/LR20 size) 2 x 4W RMS MW 522-1620 kHz FM 87.5-108 MHz 20 CX77MP3C Warranty DARTY HOTLINE If you have a problem or question, before visiting the Darty store, please call 0978 970 970 (calls are charged at local rate)7 days a week from 7 am to 10 pm. VANDENBORRE HOTLINE The after-sales service hotline (02 334 00 00)is available from Monday to Sunday. .



[You're reading an excerpt. Click here to read official HITACHI](#)

[CX77MP3C user guide](#)

<http://yourpdfguides.com/dref/3961821>