



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI DMP460. You'll find the answers to all your questions on the HITACHI DMP460 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI DMP460
User guide HITACHI DMP460
Operating instructions HITACHI DMP460
Instructions for use HITACHI DMP460
Instruction manual HITACHI DMP460

Instruction Manual

HITACHI
Inspire the Next

DMP260
DMP460
DMP860

2GB/4GB/8GB Music and Video Multimedia Player



[You're reading an excerpt. Click here to read official HITACHI DMP460 user guide](http://yourpdfguides.com/dref/2815053)
<http://yourpdfguides.com/dref/2815053>

Manual abstract:

Contents Contents

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

...3 Product Overview.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...5 Unpacking the MP3 Player.....

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 5 Features...

.....
.....

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *5 Identification of Parts and Controls ...*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.... *6 Connecting to a Computer.....*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....*7 System Requirements.*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. *7 Installing the Driver for Windows 98 SE*

.....
.....
.....
.....

.....
.....

.....
.....
.....

..... *9 Entering the Main Menu*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *9 Music Playback*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *10 Playing Music*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *10 Display Lyrics*

.....
.....
.....

.....
.....
.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

11 Entering the Music Setup Menu

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.11 To Set Repeat

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.11 To Set Equalizer ...

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....

....21 Entering the Photo Setup Menu

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....21 Movie Playback.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.22 Deleting Files and Folders

.....

.....
.....
.....

.....
.....
.....

.....23 E-Book Viewing.

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

24 Customising Settings

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.25 Time.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.25 Power

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....26 Language..

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

...26 Display.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

...26 Record..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

....27 System Tools.....

.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
...27 Converting Video to MTV Format..

.....
.....

.....
.....
.....

.....
.....
.....

.....28 Hints and Tips.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....29 Specifications.

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

...30 Safety Warnings.....

To lock am To Set Equalizer The equalizer setting enables you to select an equalizer from the six preset equalizer settings to suit the type of audio output or customise your personal equalizer effect. 1. Press the MENU button while listening to a track. The Music Setup Menu appears on the screen. Press the buttons to select Equalizer. Music Repeat Equalizer 3D Play Rate File 2.

Press the button to enter the EQ Menu. Press the buttons to select the desired equalizer from Normal, Pop, Rock, Classic, Jazz, Bass and Custom EQ. Press the button to confirm and exit. Music EQ Normal Pop Rock Classic Jazz Bass Custom EQ GB-12 To customise EQ, select Custom EQ, and press the appear on the screen. 1. 2. 3. 4. button. The Custom EQ value bars To Set 3D Sound Effect 1.

Press the MENU button while listening to a track. The Music Setup Menu appears on the screen. Press the buttons to select 3D. Music Repeat Equalizer 3D Play Rate File 2. Press the button to enter the 3D Menu.

Press the buttons to select On or Off, and then press the button to confirm and exit. Music 3D Off On To Set Play Rate 1. Press the MENU button while listening to a track. The Music Setup Menu appears on the screen. Press the buttons to select Play Rate.

Music Repeat Equalizer 3D Play Rate File GB-13 Specifications and Safety Warning Hints and Tips Basic Operation Connecting to a Computer buttons to navigate between the value bars. Press the button to When navigating to a value bar, press the select it. The blue arrow becomes red. Use the buttons to adjust the value and then press the button to confirm. After completing the setting, press the MENU button to exit. Product Overview Product Overview Connecting to a Computer Basic Operation Hints and Tips Specifications and Safety Warning 2. Press the button to enter the Play Rate Menu. @@Press the button to confirm and exit. Music Play Rate 1.00X 1.

14X 1.33X 0.67X 0.80X To Navigate Music Files 1. Press the MENU button while listening to a track. The Music Setup Menu appears on the screen. Press the buttons to select File. Music Repeat Equalizer 3D Play Rate File 2. 3. Press the screen.

Use the press the file. button. The music file list appears on the buttons to select a folder or file and then button to open the folder or play the selected Music MTPMEDIA MUSIC Evergreen.mp3 Say you say me.m Take me to your h GB-14 Voice Recording and Playback You can make voice recordings using the integrated microphone.

1. button to enter the main menu. Press and hold the Press the buttons to select Voice. 2. button and then the MENU button.

Press the Press the buttons to select Record. Voice Repeat Equalizer 3D Play Rate Record File 3. 1 2 Press the button to display the following screen and the MP3 player starts recording. 6 1. Volume level 2. Recording voice name 3. Bit rate 5. Elapsed time of the track 4. Sampling frequency 7 6. Remaining battery power indicator 7.

File format 8. Current mode 9. Play/Pause/Stop/Fast forward/ Rewind 3 4 5 8 9 GB-15 Specifications and Safety Warning Hints and Tips Basic Operation Connecting to a Computer Product Overview Product Overview Connecting to a Computer Basic Operation Hints and Tips Specifications and Safety Warning 4. During recording, you can: Pausing/Resume Recording: Press the button to pause recording. Press the button again to resume recording. Stop Recording: Press the MENU button to save the recordings. The MP3 player will go to the Voice playback interface automatically. 6 1. Volume level 2. Recording voice name 3.

Bit rate 4. Sampling frequency 5. Elapsed time of the track 6. Remaining battery power indicator 1 2 7 8 9 3 4 5 10 11 12 7. File format 8.

Current EQ indicator 9. Current track / Total track number 10. Current mode 11. Play/Pause/Stop/Fast forward/ Rewind 12. Total time of the track The recorded files are saved in the MICIN.

DIR folder of the MP3 player as WAV files (format: MIC0000X.WAV) and can be listened in the Voice mode. Voice recording is automatically stopped when the memory of the MP3 player is full. Data that has been already recorded is automatically saved. 5. Press the button to play the recording while playing recordings, you can: Pausing/Resume Playing: button to pause playing. Press the button again to resume Press the playing. Skipping Tracks: Press the buttons to skip to previous / next track. Searching: Press and hold the buttons to fast rewind / fast forward within a track. Adjusting the Volume: buttons to increase / decrease the volume.

Press the Exit: Press and hold the button to return to the main menu. GB-16 Entering the Voice Setup Menu 1. 2. 3. While playing the recording, press the MENU button to enter the Voice Setup Menu. Press the buttons and then the button to access the following: Repeat, Equalizer, 3D, Play Rate, File, Record. After finishing the music setting, press the MENU button to exit the Music Setup Menu. To Set Repeat The repeat mode setting enables you to play the tracks in a desired order. 1. Press the MENU button while listening to a track.

The Voice Setup Menu appears on the screen. Press the buttons to select Repeat. Voice Repeat Equalizer 3D Play Rate File Record 2. Press the button to enter the Repeat Menu. Press the buttons to select the desired mode as below and then press the button to confirm and exit.

No Repeat Play all the saved music files in order once. Repeat One Play the current or selected file repeatedly. Repeat All Play all the music files in order repeatedly. Folder Normal Play all the files in the current folder in order once. Folder Repeat Play all the files in the current folder repeatedly.

Folder Random Play all the files in the current folder in random order. Voice Repeat No Repeat Repeat One Repeat All Random All Folder Normal Folder Repeat Folder Random GB-17 Specifications and Safety Warning Hints and Tips Basic Operation Connecting to a Computer Product Overview Product Overview Connecting to a Computer Basic Operation Hints and Tips Specifications and Safety Warning To Set Equalizer The equalizer setting enables you to select an equalizer from the six preset equalizer settings to suit the type of audio output or customise your personal equalizer effect. 1. Press the MENU button while listening to a track. The Voice Setup Menu appears on the screen. Press the buttons to select Equalizer. Voice Repeat Equalizer 3D Play Rate File Record 2. Press the button to enter the EQ Menu. Press the buttons to select the desired equalizer from Normal, Pop, Rock, Classic, Jazz, Bass and Custom EQ. Press the button to confirm and exit.

Voice EQ Normal Pop Rock Classic Jazz Bass Custom EQ To customise EQ, select Custom EQ, and press the appear on the screen. 1. 2. 3. 4. button. The Custom EQ value bars buttons to navigate between the value bars. Press the When navigating to a value bar, press the button to select it. The blue arrow becomes red.



[You're reading an excerpt. Click here to read official HITACHI DMP460 user guide](http://yourpdfguides.com/dref/2815053)
<http://yourpdfguides.com/dref/2815053>

Use the buttons to adjust the value and then press the button to confirm.

After completing the setting, press the MENU button to exit. GB-18 To Set 3D Sound Effect 1. Press the MENU button while listening to a track. The Voice Setup Menu appears on the screen. Press the buttons to select 3D.

Voice Repeat Equalizer 3D Play Rate File Record 2. Press the button to enter the 3D Menu. @@Press the MENU button while listening to a track. The Voice Setup Menu appears on the screen. @@@@Press the MENU button while listening to a track.

The Voice Setup Menu appears on the screen. @@3. Press the screen. Use the press the file. button. @1. button to enter the main menu. @@@@1. 2. Photo Press the MENU button while viewing the pictures.

The Slide Show Picture Setup Menu appears on the screen. @@Press the button to confirm and exit. @@Manual To view pictures manually. buttons to display the previous or next picture. @1. Press and hold the button to enter the main menu. buttons to select Movie. Press the 2. Press the button. The movie list appears on the screen.

Movie pride.mtv 3. @@Press the button again to resume playing. @@Searching: buttons to rewind / fast forward within a video file. @@@@1. button to enter the main menu. @@The file list appears on the screen. @@To delete a folder, select the folder and press the MENU button. Press the buttons to select Yes and then press the button to confirm. @@@@1.

button to enter the main menu. Press and hold the Press the buttons to select E-Book. 2. 3. Press the button. The E-book list appears on the screen. @@@@Press the E-Book NEWS.TXT Skip to Next Page Automatically: While viewing text, press the button to automatically skip pages. Press the button again to stop the automatic skipping. Exit: Press the MENU button to return to the E-book list or press and hold the button to return to the main menu.

The last page you read is saved as a bookmark automatically when you exit the E-book mode. The bookmark page will be displayed on the screen when you switch to E-BOOK mode next time. GB-24 Customising Settings The MP3 player settings can be customised by accessing the Settings Menu. The Settings Menu consists of several items where various functions can be selected concerning language, play mode, recording, contrast, time off, storage, reset, etc. 1. button to enter the main menu. Press and hold the buttons to select Settings and then press Press the button. the 2. Press the buttons and then press the access the followings. button to Settings Time Power Language Display Record Sys Tool Hold Time Time Adjust To change the current time.

1. 2. 3. Press the Press the Press the buttons to change the setting value. buttons to navigate between setting field.

button to confirm the setting and exit. 2008 05 30 10 00 12 PM Settings Time Zone To change the time zone. 1. 2. Press the Press the buttons to change the time zone.

button to confirm the setting and exit. Settings Time Zone GMT +08 GB-25 Specifications and Safety Warning Hints and Tips Basic Operation Connecting to a Computer Product Overview Product Overview Connecting to a Computer Basic Operation Hints and Tips Specifications and Safety Warning Power Auto off To set the auto off time. The available options include: 15, 30, 60, 90, 120 minutes and Disable. Always on Yes The MP3 player will be always on while playing. However, it will turn off automatically in any other mode if no button is pressed for the set time. No The MP3 player will turn off automatically if no button is pressed for the set time. Settings Power Auto off Always on Language Press the buttons and then the button to select a desired menu language: English / French / German / Italian / Spanish / Portuguese / Dutch / Russian Settings Languages English Français Deutsch Italiano Español Português Nederlands Display To set the LCD off time. The backlight will be off after the set time if no button is pressed. 1. 2.

Press the buttons and then the button to select Backlight. buttons and then the button to select the Press the desire options: 15, 30 seconds, 1 Minute and Always on. Settings Display Backlight The backlight will never turn off when viewing pictures, reading E-books or watching a videos. GB-26 Record Before starting the recording, you can set the recording quality. 1. 2. buttons to select a recording quality from Press the Long Time, Normal Quality and High Quality. Press the button to confirm and return to the pervious screen. Settings Record Quality System Tools Press the buttons to select the following settings, and then press the button to confirm and return to the pervious screen. Delete To delete a file in the file list.

Format To format the MP3 player, you can select from either Quick or Complete. After formatting, all the data on the MP3 player will be erased. Reset To restore all settings of the MP3 player to factory default settings. About To check the free memory and firmware version of the MP3 player. Delete All To delete all files in the MP3 player.

Settings SysTool Delete Format Reset About Delete All To specify the key locked time. The keys will be locked after the set time if no button is pressed. buttons and then press the button to select Press the the desire time will be locked after the set time: 10, 30 seconds, 1, 3, 5 minutes and Off. To deactivate the lock function, see Key Hold Function on page 9 for details. Settings Hold Time 10 Sec 30 Sec 1 Min 3 Min 6 Min Off GB-27 Specifications and Safety Warning Hints and Tips Hold Time Basic Operation Connecting to a Computer Product Overview Product Overview Connecting to a Computer Basic Operation Hints and Tips Specifications and Safety Warning Converting Video to MTV Format This MP3 player supports the playback of videos in MTV format.

Other formats (AVI, WMV, MPEG1, Quick Time, MPEG2, RealMedia, MPEG4, 3GP) must be converted to MTV format. The "MTVVideo Converter" is supplied on the CD to enable you to convert the other formats to MTV format. 1. 2. Insert the provided CD in the CD-ROM drive of your computer. Double-click the file "Video Converter.exe" in the folder "MTVVideoConverter". The Video Converter V2.9 window appears. 3.

Click "Input Video", and then select the input source from the Open dialog box. If your video files (e.g. MP4 file) cannot be found in the Open dialog box, select All Files (*.*) in the File of type box. 4. 5. 6. Click "Output Video" to select an output "Output directory". Click "Advanced Settings".

Select "128x128" in the "Output Frame Size" box and select "MTV" in the Output Format box. Click "Start Conversion". For detailed operations, click "Help". To make your video playable on the MP3 player, you must select 128x128 or less in the Output Frame Size box (Advanced Setting). Otherwise, the message "Device Not Support" will appear on the screen when you play the video file.



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/2815053)

[DMP460 user guide](http://yourpdfguides.com/dref/2815053)

<http://yourpdfguides.com/dref/2815053>

You have to install the relevant codec package before running "Video Converter.exe". If not, the system will prompt "Load Video Failed!". When you attempt to convert the video files. Click "OK" and follow the prompt to download and install codec from the web site.

GB-28 Hints and Tips If a problem does occur, it may often be due to something very minor. The following table contains various tips. Cannot power on Files cannot be downloaded The battery may be exhausted. Recharge the battery. Check if the driver is installed correctly in the computer. Check the connection between the MP3 player and the computer. Check that the volume is on. Check the connection between the earphones and the MP3 player. Check if the music file format is supported by the MP3 player. Check if there is enough memory and battery capacity.

The key may be locked. Press the deactivate the lock function. button to No sound from the earphones Recording cannot be done The buttons do not work
GB-29 Specifications and Safety Warning Hints and Tips Basic Operation Connecting to a Computer Product Overview Product Overview Connecting to a Computer Basic Operation Hints and Tips Specifications and Safety Warning Specifications Model Audio Format Photo Format Video Format MP3 bit Rate WMA bit rate S/N rate Distortion Size Weight Frequency response Dynamic current Power off current Storage condition Working condition Power out Battery EQ Support Video Format to Converter JPEG / BMP MTV 8Kbps-320Kbps 5Kbps-320Kbps 85dB <0.2% 43 x 84 x 8.3 mm <40g (without accessories) 20Hz~20KHz 40mA (Play Mp3, backlight off) 0.30mA Humidity <90%, Normal temperature Humidity <85%,-10~40°C 2 x 1mW(16 ohm load) 300mAh, up to 8 hours playback for music and 3 hours for video Normal / Rock / Pop / Classic / Jazz / Custom EQ AVI(*.avi), WMV(*.wmv, *.asf), MPEG1(*.mpg), QuickTime(*.mov, *.qt), MPEG2(*.vob), RealMedia(*.rm, *.rmvb, ..), MPEG4, 3GP(*.3gp) DMP260 / DMP460 / DMP860 MP3 / WMA / WAV
GB-30 Safety Warnings Retain the manual. If you pass the unit onto a third party make sure to include this manual.

Damage Please inspect the unit for damage after unpacking. Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off and consult your dealer. Temperature Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires. Avoid exposure to direct sunlight and other sources of heat. Naked Flames Never place any type of candle or naked flame on the top of or near the unit. Moisture Do not expose this unit to rain, moisture, dripping or splashing. If you spill any liquid into the unit, it can cause serious damage. Switch it off and consult your dealer. Interference Do not place the unit on or near appliances which may cause electromagnetic interference.

If you do, it may adversely affect the working of the unit, and cause a distorted picture or sound. LCD screen The LCD screen is manufactured using high-precision technology. However, some tiny black points and/or bright points (red, blue or green in colour) may constantly appear on the LCD screen. These points are generated in the manufacturing process and are normal. Earphones For traffic safety, do not use earphones while driving or cycling. Listening to loud sounds for prolonged periods of time may permanently damage your hearing. Before putting on earphones, turn the volume down then put the earphones on and slowly increase the volume until you reach a comfortable listening level. Batteries Please dispose of the battery correctly by following the guidance in this manual. Service Do not open any fixed covers. The unit does not contain any user-serviceable parts.

Please leave all maintenance work to qualified personnel. Maintenance Ensure to switch off the unit before cleaning. Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface. Do not use liquids to clean the unit. **GB-31 Specifications and Safety Warning Hints and Tips Basic Operation Connecting to a Computer Product Overview Product Overview Connecting to a Computer Basic Operation Hints and Tips Specifications and Safety Warning** **SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT** This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

***** DO read the operating instructions before you attempt to use the equipment. DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions.

@@@ DO be careful with glass panels or doors on equipment. @@@ DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the equipment. DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires. DON'T use makeshift stands and NEVER fix legs with wood screws - to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions. DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving. DON'T listen to headphones at high volume, as such use can permanently damage your hearing. DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off using the switch on the equipment and make sure that your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer. ABOVE ALL --- NEVER let anyone especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electrical shock; --- NEVER guess or take chances with electrical equipment of any kind --- it is better to be safe than sorry! **GB-32**

Note: If you require a replacement for any of the items listed below, please quote their corresponding part numbers: Replacement Part USB Cable Earphones Installation CD with Instruction Manual Part Number 38-012-10300019 50-110-26900119 54-809-30000109 Visit Partmaster.



[You're reading an excerpt. Click here to read official HITACHI](#)

[DMP460 user guide](#)

<http://yourpdfguides.com/dref/2815053>

co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0870 6001 338 (UK customers only) Calls charged at National Rate. The mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE).

The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment, display the chemical symbol Hg, Cd, or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury, or more than 0.002% Cadmium or more than, 0.004% Lead.

Important Notice for the battery disposal The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, disposal of used batteries according to your local laws or regulations. Do not dispose of batteries with the normal household waste. For more information, please contact the local authority or your retailer where you purchased the product. Removal of the battery Always bring your product to a professional to remove/ replace the battery.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries. All trademarks are the property of their respective owners and all rights are acknowledged. DSG Retail Ltd. Maylands Avenue Hemel Hempstead Hertfordshire HP2 7TG England .



[You're reading an excerpt. Click here to read official HITACHI](#)

[DMP460 user guide](#)

<http://yourpdfguides.com/dref/2815053>