



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI ED-A101. You'll find the answers to all your questions on the HITACHI ED-A101 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI ED-A101
User guide HITACHI ED-A101
Operating instructions HITACHI ED-A101
Instructions for use HITACHI ED-A101
Instruction manual HITACHI ED-A101

Projector
ED-A101EF/ED-A111EF
User's Manual (detailed)
Operating Guide



Thank you for purchasing this projector.

WARNING ▶ Before using this product, please read all manuals for this product. Be sure to read "Safety Guide" first. After reading them, store them in a safe place for future reference.

About this manual

Various symbols are used in this manual. The meanings of these symbols are described below.

WARNING This symbol indicates information that, if ignored, could possibly result in personal injury or even death due to incorrect handling.

CAUTION This symbol indicates information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling.

Please refer to the pages written following this symbol.

NOTE • The information in this manual is subject to change without notice.
• The manufacturer assumes no responsibility for any errors that may appear in this manual.
• The reproduction, transfer or copy of all or any part of this document is not permitted without express written consent.

Trademark acknowledgment

- Mac® is registered trademarks of Apple Inc.
- VESA and DDC are trademarks of Video Electronics Standard Association.
- Windows® is a registered trademark of Microsoft Corporation in the U.S. and/or other countries.

All other trademarks are the properties of their respective owners.



[You're reading an excerpt. Click here to read official HITACHI ED-A101 user guide](#)

<http://yourpdfguides.com/dref/2815264>

Manual abstract:

@@@NOTE · The information in this manual is subject to change without notice. · The manufacturer assumes no responsibility for any errors that may appear in this manual. · The reproduction, transmission or use of this document or contents is not permitted without express written authority. About The Symbols Various symbols are used in this manual, the user's manual and on the product itself to ensure correct usage, to prevent danger to the user and others, and to prevent property damage. The meanings of these symbols are described below. It is important that you read these descriptions thoroughly and fully understand the contents. **WARNING CAUTION Typical Symbols** This symbol indicates information that, if ignored, could possibly result in personal injury or even death due to incorrect handling. This symbol indicates information that, if ignored, could result possibly in personal injury or physical damage due to incorrect handling. This symbol indicates an additional warning (including cautions). An illustration is provided to clarify the contents. This symbol indicates a prohibited action. The contents will be clearly indicated in an illustration or nearby (the symbol to the left indicates that disassembly is prohibited). This symbol indicates a compulsory action. The contents will be clearly indicated in an illustration or nearby (the symbol to the left indicates that the power plug should be disconnected from the power outlet). 1 Safety Precautions **WARNING** Never use the projector if a problem should occur. Abnormal operations such as smoke, strange odor, no image, no sound, excessive sound, damaged casing or elements or cables, penetration of liquids or foreign matter, etc. can cause a fire or electrical shock. In such case, immediately turn off the power switch and then disconnect the power plug from the power outlet. After making sure that the smoke or odor has stopped, contact your dealer. Never attempt to make repairs yourself because this could be dangerous.

· The power outlet should be close to the projector and easily accessible. Disconnect the plug from the power outlet. Use special caution for children and pets. Incorrect handling could result in fire, electrical shock, injury, burn or vision problem. Use special caution in households where children and pets are present. Do not insert liquids or foreign object. Penetration of liquids or foreign objects could result in fire or electrical shock. Use special caution in households where children are present. If liquids or foreign object should enter the projector, immediately turn off the power switch, disconnect the power plug from the power outlet and contact your dealer. · Do not place the projector near water (ex. a bathroom, a beach, etc.). · Do not expose the projector to rain or moisture. Do not place the projector outdoors. · Do not place flower vases, pots, cups, cosmetics, liquids such as water, etc on or around the projector. · Do not place metals, combustibles, etc on or around the projector. · To avoid penetration of foreign objects, do not put the projector into a case or bag together with any thing except the accessories of the projector, signal cables and connectors. Never disassemble and modify. The projector contains high voltage components. Modification and/or disassembly of the projector or accessories could result in fire or electrical shock.

· Never open the cabinet. · Ask your dealer to repair and clean insider. Do not disassemble. Do not give the projector any shock or impact. If the projector should be shocked and/or broken, it could result in an injury, and continued use could result in fire or electrical shock. If the projector is shocked, immediately turn off the power switch, disconnect the power plug from the power outlet and contact your dealer. Do not place the projector on an unstable surface. If the projector should be dropped and/or broken, it could result in an injury, and continued use could result in fire or electrical shock. · Do not place the projector on an unstable, slant or vibrant surface such as a wobbly or inclined stand. · Use the caster brakes placing the projector on a stand with casters.

· Do not place the projector in the side up position, the lens up position or the lens down position. · In the case of a ceiling installation or the like, contact your dealer before installation. 2 Safety Precautions (continued) **WARNING** Be cautious of High temperatures of the projector. High temperatures are generated when the lamp is lit. It could result in fire or burn. Use special caution in households where children are present. Do not touch about the lens, air fans and ventilation openings during use or immediately after use, to prevent a burn. Take care of ventilation. · Keep a space of 30 cm or more between the sides and other objects such as walls. · Do not place the projector on a metallic table or anything weak in heat.

· Do not place anything about the lens, air fans and ventilation openings of the projector. · Never block the air fan and ventilation openings. · Do not cover the projector with a tablecloth, etc. · Do not place the projector on a carpet or bedding. Never look through the lens or openings when the lamp is on. The powerful light could adversely affect vision. Use special caution in households where children are present. Use only the correct power cord and the correct power outlet. Incorrect power supply could result in fire or electrical shock. · Use only the correct power outlet depending on the indication on the projector and the safety standard.

· The enclosed power cord must be used depending on the power outlet to be used. Be cautious of the power cord connection. Incorrect connection of the power cord could result in fire or electrical shock. · Do not touch the power cord with a wet hand. · Check that the connecting portion of the power cord is clean (with no dust), before using.

Use a soft and dry cloth to clean the power plug. · Insert the power plug into a power outlet firmly. Avoid using a loose, unsound outlet or contact failure. Be sure to connect with ground wire. Connect the ground terminal of AC inlet of this unit with the ground terminal provided at the building using the correct power cord; otherwise, fire or electric shock can result.

· Don't take the core of power cord away. Surely connect the ground wire. 3 Safety Precautions (continued) **WARNING** Be careful in handling the light source lamp. The projector uses a high-pressure mercury glass lamp made of glass. The lamp can break with a loud bang, or burn out. When the bulb bursts, it is possible for shards of glass to fly into the lamp housing, and for gas containing mercury to escape from the projector's vent holes. Please carefully read the section "Lamp". Be careful in handling the power cord and external connection cables.



[You're reading an excerpt. Click here to read official HITACHI ED-A101 user guide](http://yourpdfguides.com/dref/2815264)
<http://yourpdfguides.com/dref/2815264>

If you keep using a damaged the power cord or cables, it can cause a fire or electrical shock. Do not apply too much heat, pressure or tension to the power cord and cables.

If the power cord or cables is damaged (exposed or broken core wires, etc.), contact your dealer. · Do not place the projector or heavy objects on the power cord and cables. Also, do not place a spread, cover, etc. over them because this could result in the inadvertent placing of heavy objects on the concealed power cord or cables. · Do not pull the power cord and cables. When connecting and disconnecting the power cord or cables, do it with your hand holding the plug or connector. · Do not place the cord near the heater. · Avoid bending the power cord sharply. · Do not attempt to work on the power cord. Be careful in handling the battery of the remote control.

Incorrect handling of the battery could result in fire or personal injury. The battery may explode if not handled properly. · Keep the battery away from children and pets. If swallowed consult a physician immediately for emergency treatment. · Do not allow the battery in a fire or water. · Avoid fire or high-temperature environment. · Do not hold the battery with the metallic tweezers. · Keep the battery in a dark, cool and dry play. · Do not short circuit the battery. · Do not recharge, disassemble or solder the battery. · Do not give the battery a physical impact. · Use only the battery specified in the other manual of this projector. · Make sure the plus and minus terminals are correctly aligned when loading the battery. · If you observe a leakage of the battery, wipe out the flower and then replace the battery. If the flower adheres your body or clothes, rinse well with water. · Obey the local laws on disposing the battery. 4 Safety Precautions (continued) CAUTION Be careful in moving the projector. Neglect could result in an injury or damage. · Do not move the projector during use. Before moving, disconnect the power cord and all external connections, and close the slide lens door or attach the lens cap.

· Avoid any impact or shock to the projector. · Do not drag the projector. · For moving the projector, use the enclosed case or bag if provided. Do not put anything on top of the projector. Placing anything on the projector could result in loss of balance or falling, and cause an injury or damage. Use special caution in households where children are present. Do not attach anything other than specified things to the projector. Neglect could result in an injury or damage. · Some projector has a screw thread in a lens part. Do not attach anything other than specified options (such as conversion lens) to the screw thread. Avoid a smoky, humid or dusty place. Placing the projector in a smoke, a highly humid, dusty place, oily soot or corrosive gas could result in fire or electrical shock. · Do not place the projector near a smoky, humid or dusty place (ex. a smoking space, a kitchen, a beach, etc.).

Do not place the projector outdoors. · Do not use a humidifier near the projector. Take care of the air filter to normal ventilate. The air filter should be cleaned periodically. If the air filter becomes clogged by dust or the like, internal temperature rises and could cause malfunction.

The projector may display the message such as "CHECK THE AIR FLOW" or turn off the projector, to prevent the internal heat level rising. · When the indicators or a message prompts you to clean the air filter, clean the air filter as soon as possible. @@ · Use the air filter of the specified type only. @@ ·

When you replace the lamp, replace also the air filter. @@@@ (ie., @5 Safety Precautions (continued) CAUTION Remove the power cord for complete separation. · For safety purposes, disconnect the power cer from the display of CRT. · Do not use a polarized screen.

@@@@@@@ Dispose of in accord with environmental laws.

For lamp recycling, go to www.lamprecycle.org. @@ For more information, call your dealer. @@@@ In addition, working in high places is dangerous, so ask your local dealer to have the lamp replaced even if the bulb is not broken. · Do not use the projector with the lamp cover removed. At the lamp replacing, make sure that the screws are screwed in firmly. Loose screws could result in damage or injury. · Use the lamp of the specified type only. · If the lamp breaks soon after the first time it is used, it is possible that there are electrical problems elsewhere besides the lamp.

If this happens, contact your local dealer or a service representative. · Handle with care: jolting or scratching could cause the lamp bulb to burst during use. · Using the lamp for long periods of time, could cause it dark, not to light up or to burst. When the pictures appear dark, or when the color tone is poor, please replace the lamp as soon as possible. Do not use old (used) lamps; this is a cause of breakage.

Disconnect the plug from the power outlet 8 Regulatory Notices FCC Statement Warning This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.

INSTRUCTIONS TO USERS: This equipment complies with the requirements of FCC (Federal Communication Commission) equipment provided that the following conditions are met. Some cables have to be used with the core set. Use the accessory cable or a designated-type cable for the connection. For cables that have a core only at one end, connect the core to the projector. CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



[You're reading an excerpt. Click here to read official HITACHI ED-A101 user guide](http://yourpdfguides.com/dref/2815264)
<http://yourpdfguides.com/dref/2815264>

For the Customers in CANADA NOTICE: This Class B digital apparatus complies with Canadian ICES-003. Warranty And After-Service Unless seen any abnormal operations (mentioned with the first paragraph of WARNING in this manual), when a problem occurs with the equipment, first refer to the "Troubleshooting" section of the "Operating Guide", and run through the suggested checks. If this does not resolve the problem contact your dealer or service company. They will tell you what warranty condition is applied. 9 Contents About this manual. Contents

. . . Projector features. Preparations .

.
.

.
.
.

. Part names

. Setting up

.
.
Remote control

. Power on/off

. Operating .

.
. EASY MENU.

. . . ASPECT, D-ZOOM, KEYSTONE , KEYSTONE , PERFECT FIT, PICTURE MODE, BRIGHTNESS, CONTRAST, COLOR, TINT, SHARPNESS, WHISPER, MIRROR, RESET, FILTER TIME, LANGUAGE, Go to Advanced Menu 2.1 .

2.3.33.44556.

.7710121313.141415.161617.18181818191920202021212223232324.26. . . . PICTURE menu .

.28 BRIGHTNESS, CONTRAST, GAMMA, COLOR TEMP, COLOR, TINT, SHARPNESS, MY MEMORY IMAGE menu

.31 ASPECT, OVER SCAN, V POSITION, H POSITION, H PHASE, H SIZE, AUTO ADJUST EXECUTE INPUT menu

.33 PROGRESSIVE, VIDEO NR, COLOR SPACE, COMPONENT, VIDEO FORMAT, FRAME LOCK, COMPUTER IN, RESOLUTION SETUP menu .

.36 D-ZOOM, D-SHIFT V, D-SHIFT H, KEYSTONE , KEYSTONE , PERFECT FIT, WHISPER, MIRROR, STANDBY MODE, MONITOR OUT AUDIO menu

.39 VOLUME, SPEAKER, AUDIO SCREEN menu

40 LANGUAGE, MENU POSITION, BLANK, START UP, yScreen, yScreen Lock, MESSAGE, SOURCE NAME, TEMPLATE OPTION menu

.44 AUTO SEARCH, AUTO ON, AUTO OFF, LAMP TIME, FILTER TIME, MY BUTTON, MY SOURCE, SERVICE, SECURITY C.C. (Closed Caption) menu57 DISPLAY, MODE, CHANNEL Maintenance

.58 58 60 62 63 Troubleshooting

.64 64 65 66 66 67

70 Projector features / Preparations Contents of package User's Manual (concise) NOTE 3 Part names Projector (2) 58) 39) 14) (3) (1) (6) (7) (8) (4) (5) (12) (13) (14) (11) (5) (10) (9) 16, 17, 62) 5, 10) 12) 16, 17) 13) 60, 70) 20) 16, 62, 70) 16, 62) (13) (15) (6) (6) (16) WARNING CAUTION 4 Part names Control buttons LAMP TEMP POWER STANDBY/ON INPUT FOCUS +/-65, 66) 65, 66) 16, 17, 65, 66) 16, 17) 18) (1) (2) (3) LAMP TEMP POWER STANDBY/ON (4) INPUT 21 24 (6) FOCUS MENU (5) (7) + FOCUS MENU 24 24 43 Ports (10, Technical's 3 to 6) 17, 66) 38) VIDEO AUDIO IN3 (L,R) AUDIO OUT AUDIO IN1 AUDIO IN2 S-VIDEO MONITOR OUT Y, CB/PB, CR/PR COMPUTER IN2 COMPUTER IN1 CONTROL 39) 39) 39) 13) 39) (1) (2) (3) (4) (5) MONITOR OUT COMPUTER IN2 COMPUTER IN1 1 AUDIO OUT 2 AUDIO IN (6) CONTROL Y VIDEO CB/PB CR/PR L R S-VIDEO (9) (10) (11) (12) AUDIO IN3 (7) (8) (13) 5 Part names Remote control COMPUTER 18 MY SOURCE/DOC.CAMERA VIDEO 18 STANDBY/ON 16, 17) AUTO 21) SEARCH 19) ASPECT 19) BLANK 23) FREEZE 23) MAGNIFY - ON 23) MAGNIFY - OFF 15, 23) VOLUME + 18) VOLUME 15, 18) KEYSTONE 22) MUTE 18) MY BUTTON - 1 46) MY BUTTON - 2 46) FOCUS 21) FOCUS + 21) D-ZOOM 20) D-ZOOM 20) POSITION 20, 23) MENU 24, 25) 24, 25) ENTER 24, 25) ESC 15, 24, 25) RESET 15, 24, 25) 14) 18, 46) (1) (3) (5) (7) (9) (10) (11) (14) (16) (18) (19) (22) (24) (26) (2) (4) (6) (8) (12) (13) (15) (17) (21) (20) (23) (25) (27) VIDEO MY SOURCE/ COMPUTER DOC.CAMERA ASPECT AUTO SEARCH BLANK MAGNIFY ON FREEZE VOLUME OFF KEYSTONE MY BUTTON 1 MUTE 2 - FOCUS + - D-ZOOM + POSITION MENU ENTER ESC RESET (28) 6 Setting up Arrangement NOTE 14 7 Setting up Arrangement (continued) Table for 4:3 screen (1) A B1 B2 C1 ($\pm 8\%$) C2 A C2 C1 B1 B2 48 50 60 70 80 90 100 120 150 200 1 4 7 10 13 16 22 31 45 15 16 19 22 25 28 31

37 45 60 10 10 11 13 14 16 17 20 24 32 39 40 47 55 62 70 77 92 115 152 Table for 16:9 screen (2) B2 B1 C1 A C2 A B1 B2 C1 ($\pm 8\%$) C2 NOTE 8 Setting up Arrangement (continued) WARNING CAUTION 9 Setting up Connecting with your devices 13 PCs RS-232C RGB OUT AUDIO OUT RGB OUT AUDIO OUT AUDIO IN Monitor RGB IN MONITOR OUT COMPUTER IN2 COMPUTER IN1 1 AUDIO OUT 2 AUDIO IN Speakers CONTROL Y VIDEO CB/PB CR/PR L R S-VIDEO AUDIO IN3 Y CB/PB CR/PR COMPONENT VIDEO OUT L R AUDIO OUT VIDEO OUT L R AUDIO OUT S-VIDEO OUT L R AUDIO OUT VCR/DVD players WARNING CAUTION 10 Setting up Connecting your devices (continued) NOTE About Plug-and-Play capability COMPUTER IN1 11 Setting up Connecting with a power supply WARNING 12 Setting up Using the security bar and slot NOTE WARNING Using the cable cover CAUTION 13 Remote control Preparing for the remote control HITACHI MAXELL R6P LR6 NOTE 30° 30° WARNING 14 Remote control Changing the frequency of remote control signal VIDEO MY SOURCE/ COMPUTER DOC. CAMERA ASPECT AUTO SEARCH BLANK MAGNIFY ON FREEZE VOLUME OFF (2) KEYSTONE MY BUTTON 1 MUTE 2 (1) - FOCUS + - D-ZOOM + POSITION MENU ENTER VOLUMEMAGNIFY OFF 48 RESET ESC ESC RESET 15 Power on/off Turning on the power I POWER POWER POWER STANDBY/ON LAMP TEMP POWER STANDBY/ON INPUT STANDBY/ON MY SOURCE/ COMPUTER DOC. CAMERA POWER VIDEO ASPECT AUTO SEARCH BLANK MAGNIFY ON FREEZE VOLUME OFF KEYSTONE MY BUTTON 1 MUTE 2 - FOCUS + - D-ZOOM + POSITION MENU ENTER ESC RESET STANDBY/ON 18 NOTE 44) STANDBY/ON WARNING CAUTION 16 Power on/off Turn off the power STANDBY/ON POWER STANDBY/ON LAMP TEMP STANDBY/ON POWER STANDBY/ON INPUT POWER POWER VIDEO MY SOURCE/ COMPUTER DOC. CAMERA ASPECT AUTO SEARCH BLANK MAGNIFY ON FREEZE VOLUME OFF KEYSTONE MY BUTTON 1 MUTE 2 - FOCUS + - D-ZOOM + POSITION MENU ENTER ESC RESET STANDBY/ON POWER NOTE 66 CAUTION 17 Operating Adjusting the volume VOLUME + VOLUME - VOLUME+/VIDEO MY SOURCE/ COMPUTER DOC. CAMERA ASPECT AUTO SEARCH BLANK MAGNIFY ON FREEZE VOLUME OFF 39 39 KEYSTONE MY BUTTON 1 MUTE 2 - FOCUS + - D-ZOOM + POSITION MENU Temporarily muting the sound MUTE MUTE VOLUME + VOLUME MUTE VIDEO MY SOURCE/ COMPUTER DOC. CAMERA ASPECT AUTO SEARCH BLANK MAGNIFY ON FREEZE VOLUME OFF 39 S-VIDEO COMPONENT COMPUTER IN2 VIDEO COMPUTER IN1 57 KEYSTONE MY BUTTON 1 MUTE 2 - FOCUS + - D-ZOOM + POSITION MENU Selecting an input signal INPUT INPUT INPUT MENU R R) 44 COMPUTER COMPUTER MY SOURCE/ COMPUTER DOC.



[You're reading an excerpt. Click here to read official HITACHI ED-A101 user guide](http://yourpdfguides.com/dref/2815264)

<http://yourpdfguides.com/dref/2815264>

CAMERA VIDEO ASPECT AUTO SEARCH BLANK MAGNIFY ON FREEZE VOLUME OFF 44 COMPUTER VIDEO S-VIDEO COMPONENT
COMPUTER IN1 18 KEYSTONE MY BUTTON 1 MUTE 2 - FOCUS + - D-ZOOM + POSITION MENU Operating Selecting an input signal (continued)
VIDEO VIDEO MY SOURCE/ COMPUTER DOC. CAMERA ASPECT AUTO SEARCH BLANK MAGNIFY ON FREEZE VOLUME R R OFF
KEYSTONE MY BUTTON 1 MUTE 2 44 VIDEO COMPUTER IN1 COMPONENT COMPUTER IN2 Searching an input signal SEARCH SEARCH VIDEO
MY SOURCE/ COMPUTER DOC. CAMERA ASPECT AUTO SEARCH BLANK MAGNIFY ON FREEZE VOLUME OFF KEYSTONE MY BUTTON 1 MUTE
2 R R - FOCUS + - D-ZOOM + 44 Selecting an aspect ratio ASPECT ASPECT VIDEO MY SOURCE/ COMPUTER DOC. CAMERA ASPECT AUTO
SEARCH BLANK For a computer signal MAGNIFY ON FREEZE VOLUME OFF KEYSTONE MY BUTTON 1 MUTE 2 For a video signal, s-video signal or
component video signal For no signal ASPECT 19 Operating Adjusting the projection position UTER COMP UTER COMP UTER COMP OUT IN2 IN1 1
AUDIO OUT EO S-VID AUDIO 2 IN ROL CONT CR/PR CB/PB R Y L IN3 VIDEO AUDIO CAUTION Adjusting the zoom D-ZOOM + D-ZOOM + D-
ZOOM D-ZOOM D-ZOOM + OFF KEYSTONE MY BUTTON 1 MUTE 2 - FOCUS + - D-ZOOM + POSITION MENU ENTER (23 ESC RESET D-ZOOM
Adjusting the picture position POSITION POSITION OFF KEYSTONE MY BUTTON 1 MUTE 2 - FOCUS + - D-ZOOM + POSITION MENU ENTER ESC
RESET POSITION 20 Operating Adjusting the focus FOCUS + + FOCUS + FOCUS FOCUS 5 FOCUS FOCUS - FOCUS + OFF KEYSTONE MY
BUTTON 1 MUTE 2 FOCUS + - D-ZOOM + POSITION MENU MENU ENTER ESC RESET 43 FOCUS Using the automatic adjustment feature AUTO For
a computer signal AUTO VIDEO MY SOURCE/ COMPUTER DOC. CAMERA ASPECT AUTO SEARCH BLANK MAGNIFY ON FREEZE VOLUME OFF
KEYSTONE MY BUTTON 1 MUTE 2 - FOCUS + - D-ZOOM + For a video signal and s-video signal 34 For a component video signal 47 21 Operating
Correcting the keystone distortions KEYSTONE KEYSTONE MAGNIFY ON FREEZE VOLUME OFF KEYSTONE MY BUTTON 1 MUTE 2 - FOCUS + - D-
ZOOM + POSITION MENU ENTER ESC RESET ENTER INPUT ENTER INPUT ENTER INPUT KEYSTONE 53 22 Operating Using the magnify feature ON
MAGNIFY MAGNIFY ON MAGNIFY ON/OFF VIDEO MY SOURCE/ COMPUTER DOC. CAMERA ASPECT AUTO SEARCH BLANK MAGNIFY ON
FREEZE VOLUME OFF KEYSTONE MY BUTTON MUTE POSITION POSITION OFF MAGNIFY NOTE Freezing the screen FREEZE FREEZE VIDEO MY
SOURCE/ COMPUTER DOC. CAMERA ASPECT AUTO SEARCH BLANK 42 FREEZE MAGNIFY ON FREEZE VOLUME OFF KEYSTONE MY BUTTON 1
MUTE 2 FOCUS D-ZOOM Temporarily blanking the screen BLANK 40 BLANK BLANK VIDEO MY SOURCE/ COMPUTER DOC.

CAMERA ASPECT AUTO SEARCH BLANK MAGNIFY ON FREEZE VOLUME NOTE 46 23 Operating Using the menu function LAMP TEMP ENTER
POSITION MENU MENU MENU POWER STANDBY/ON ENTER INPUT ESC RESET ESC ER MY DO SO C.C UR AM CE ER / A UT CO MP EO AU TO SE
AR VO LU ME RESET CH BL AN K VID ZE CT PE AS FR EE MENU IFY MA COMPU TER COMPU OUT S-VIDEO AUDIO CR/PR CB/PB R Y L IN3
VIDEO AUDIO 2 IN AUDIO OUT ON MY YS FO N PO SIT IO MENU POSITION ES C EN TE - R RE KE CONTR CU OL SE FOCUS - + FOCUS OF F TO
NE - D-Z TER ME NU IN2 BU 1 TT OO GN COMPU M 1 ON TER + IN1 2 MU TE S + T MENU In the EASY MENU 24 Operating Using the menu function
(continued) In the Advanced Menu ENTER ENTER RESET ESC MENU 25 EASY MENU Item ASPECT D-ZOOM KEYSTONE KEYSSTONE PERFECT FIT
Description ((31) 36) (36 (36 (37 PICTURE MODE 29 28 26 EASY MENU EASY MENU (continued) Item BRIGHTNESS CONTRAST COLOR TINT
SHARPNESS WHISPER MIRROR (((29 (37) 37 30 (29 Description (28 28 RESET RESET FILTER TIME RESET (45 40) LANGUAGE Go to Advanced
Menu... " ENTER " (27 PICTURE menu ENTER Item BRIGHTNESS CONTRAST Description #1 DEFAULT #6 CUSTOM #6 DEFAULT #5 CUSTOM #1
CUSTOM #2 DEFAULT #2 CUSTOM #3 DEFAULT #3 CUSTOM #5 DEFAULT #4 CUSTOM #4 DEFAULT To adjust CUSTOM ENTER GAMMA ENTER
ENTER 28 PICTURE menu PICTURE menu (continued) Item #1 HIGH DEFAULT #6 Hi-BRIGHT-3 CUSTOM #6 Hi-BRIGHT-3 DEFAULT #5 Hi-
BRIGHT-2 CUSTOM #5 Hi-BRIGHT-2 DEFAULT #4 Hi-BRIGHT-1 CUSTOM Description #1 HIGH CUSTOM #2 MID DEFAULT #2 MID CUSTOM #3
LOW DEFAULT #3 LOW CUSTOM #4 Hi-BRIGHT-1 DEFAULT To adjust CUSTOM ENTER COLOR TEMP ENTER ENTER COLOR TINT 29 PICTURE
menu PICTURE menu (continued) Item Description SHARPNESS ENTER LOAD-1, LOAD-2, LOAD-3, LOAD-4 MY MEMORY (SAVE-1, SAVE-2, SAVE-3,
SAVE-4 46) 30 IMAGE menu ENTER Item For a computer signal Description ASPECT For a Video signal, S-video signal or Component video signal For no
signal OVER SCAN V POSITION RESET above 31 IMAGE menu IMAGE menu (continued) Item Description H POSITION RESET 31 H PHASE H SIZE
RESET For a computer signal (32) For a video signal and s-video signal AUTO ADJUST EXECUTE 34 For a component video signal 47 32 INPUT menu
ENTER Item Description PROGRESSIVE VIDEO NR COLOR SPACE COMPONENT (Y, CB/PB, CR/PR) COMPONENT PR) VIDEO COMPONENT (Y,
CB/PB, CR/ SCART RGB 33 INPUT menu INPUT menu (continued) Item Description S-VIDEO VIDEO VIDEO FORMAT VIDEO S-VIDEO FRAME LOCK
COMPUTER IN1 IN2 COMPUTER IN 34 INPUT menu INPUT menu (continued) Item Description COMPUTER IN1 IN2 ENTER RESOLUTION 35 SETUP
menu ENTER Item D-ZOOM Description D-SHIFT V D-SHIFT H KEYSTONE 53 37 KEYSTONE 53 (37 36 SETUP menu SETUP menu (continued) Item
Description ENTER INPUT ENTER PERFECT FIT INPUT ENTER INPUT 36) 53 WHISPER MIRROR 53 37 SETUP menu SETUP menu (continued) Item
Description STANDBY MODE 39) AUDIO OUT MONITOR OUT MONITOR OUT B B R R) MONITOR OUT MONITOR OUT COMPUTER IN MONITOR
OUT 38 AUDIO menu ENTER Item VOLUME Description SPEAKER B B R R) AUDIO AUDIO OUT AUDIO IN COMPONENT COMPUTER IN2 VIDEO S-
VIDEO COMPUTER IN1 (57 39 SCREEN menu ENTER Item LANGUAGE ENGLISH FRANÇAIS Description DEUTSCH ESPAÑOL MENU POSITION
MENU (23) BLANK BLANK (41) (START UP 41) (40) (40 50) SCREEN menu SCREEN menu (continued) Item Description ENTER RESET ESC MyScreen
ENTER RESET ESC ((50) below) MyScreen Lock 50) (41 SCREEN menu SCREEN menu (continued) Item Description MESSAGE (23) ENTER SOURCE
NAME INPUT INPUT RESET ENTER ENTER INPUT ENTER INPUT INPUT ENTER 42 SCREEN menu SCREEN menu (continued) Item Description (
TEMPLATE 5) (MY BUTTON 46) FOCUS+/(21) 43 OPTION menu ENTER Item Description AUTO SEARCH (AUTO ON 16) (45) 44 OPTION menu
OPTION menu (continued) Item Description AUTO OFF CONTROL 17) RESET LAMP TIME (58) RESET FILTER TIME (60) 45 OPTION menu OPTION
menu (continued) Item 1 2 Description (6) MY BUTTON B B R R) (48) (MY BUTTON MY BUTTON 30) ((45) (43) 26) MY SOURCE/DOC.



[You're reading an excerpt. Click here to read official HITACHI ED-](http://yourpdfguides.com/dref/2815264)

[A101 user guide](http://yourpdfguides.com/dref/2815264)

<http://yourpdfguides.com/dref/2815264>

2 3 4 Ground Ground H VIDEO 4 Connection to the ports (continued) MONITOR OUT COMPUTER IN2 COMPUTER IN1 I 1 M CONTROL S-VIDEO
AUDIO OUT 2 J AUDIO IN K Y VIDEO CB/PB CR/PR L R L AUDIO IN3 I AUDIO IN1, J AUDIO IN2 AUDIO IN3 K L, L R M AUDIO OUT To input
SCART RGB signal; Y VIDEO CB/PB CR/PR L R AUDIO IN3 5 Connection to the ports (continued) N MONITOR OUT COMPUTER IN2 COMPUTER IN1 I
AUDIO OUT 2 AUDIO IN CONTROL Y VIDEO CB/PB CR/PR L R S-VIDEO AUDIO IN3 N CONTROL 9876 54321 Signal 1 2 3 4 5 6 Signal 7 Ground 8 9
RTS Signal 6 RS-232C Communication 1 5 6 2 7 3 8 4 9 5 1 6 2 7 3 8 4 9 RTS (7) - (9) (7) RTS (9) RI Connecting the cable 1.



[You're reading an excerpt. Click here to read official HITACHI ED-](#)

[A101 user guide](#)

<http://yourpdfguides.com/dref/2815264>



<http://yourpdfguides.com/dref/2815264>

Japan 292 Yoshida-cho Totsuka-ku, Yokohama-city Kanagawa 244-0817 HITACHI EUROPE LTD. Consumer Affairs Department PO Box 3007 Maidenhead SL6 8ZE UNITED KINGDOM Tel: 0870 405 4405 Email: consumer.mail@Hitachi-eu.com HITACHI EUROPE GmbH Munich Office Dornacher Strasse 3 D-85622 Feldkirchen bei München GERMANY Tel: +49 -89-991 80-0 Fax: +49 - 89 - 991 80 -224 Hotline: +49 - 180 - 551 25 51 (12ct/min.) Email: HSE-DUS.Service@Hitachi-eu.com HITACHI EUROPE SRL Via T. Gulli n.39 20147 MILAN ITALY Tel: 02 487861 Fax: 02 48786381 Servizio Clienti Tel. 02 38073415 Email: customerservice.italy@hitachi-eu.com HITACHI EUROPE S.

A.S Lyon Office B.P.45, 4 Allée des Sorbiers 69671 Bron Cedex FRANCE Tel: 04 72 14 29 70 Fax: 04 72 14 29 99 Email: france.consommateur@hitachi-eu.com HITACHI EUROPE S.A. 364, Kifissias Ave. & 1, Delfon Str. 152 33 Chalandri Athens GREECE Tel: 1-6837200 Fax: 1-6835694 Email: service.hellas@hitachi-eu.com HITACHI EUROPE S.A. Gran Via Carlos III 86 Planta 5a Edificios Trade - Torre Este 08028 Barcelona SPAIN Tel: 93 409 2550 Fax: 93 491 3513 Email: atencion.cliente@hitachi-eu.com HITACHI EUROPE AB Box 77 S-164 94 KISTA SWEDEN Tel: 08 562 711 00 Fax: 08 562 711 11 Email: csgswe@hitachi-eu.com HITACHI EUROPE LTD. Norwegian Branch Office Strandveien 18 1366 Lysaker NORWAY Tel: 02205 9060 Fax: 02205 9061 Email: csgnor@hitachi-eu.com HITACHI EUROPE LTD. BENELUX BRANCHE OFFICE BERGENSESTEENWEG 421 1600 SINT-PIETERS-LEEUV BELGIUM Tel:0032/2 363 99 01 Fax:0032/2 363 99 00 Email:info@hitachi.be www.hitachidigitalmedia.com .



[You're reading an excerpt. Click here to read official HITACHI ED-A101 user guide](http://yourpdfguides.com/dref/2815264)
<http://yourpdfguides.com/dref/2815264>