



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI HDR505. You'll find the answers to all your questions on the HITACHI HDR505 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI HDR505
User guide HITACHI HDR505
Operating instructions HITACHI HDR505
Instructions for use HITACHI HDR505
Instruction manual HITACHI HDR505

HITACHI
Inspire the Next

Digital TV Recorder

Model
HDR505



Instruction manual
To obtain the best performance and ensure years of trouble-free use, please read this instruction manual completely.



[You're reading an excerpt. Click here to read official HITACHI HDR505 user guide](http://yourpdfguides.com/dref/4307962)
<http://yourpdfguides.com/dref/4307962>

Manual abstract:

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 2 SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

.....
.....
.....
.....

..... 3 Overview of the Remote Control .

.....
.....

.. 4 Connections...

.....
.....
.....
.....

.. 5 Remote Control ...

.....
.....
.....
.....

. 6 Connection to the Tv

.....
.....
.....
.....

..... 6 Power Connection ...

.....
.....
.....
.....

.. @7 Antenna Connection ...

.....
.....
.....
.....

.... @@@@8 Deleting Channels

.....
.....
.....

9 Renaming Channels

.....
.....
.....

... 9 Adding Locks to Channels

.....
.....
.....

.. 9 Setting Favourites

.....
.....
.....
.....

.... 9 Program Guide

.....
.....
.....

..... 9 Timers .

.....
.....
.....
.....

.....
.....
.....

..... 12 Recordings Library

.....
.....
.....

.....
.....
.....

... 12 Play Options:

.....
.....
.....
.....

.....
.....
.....

. 13 Main Title

.....
.....
.....

.....
.....
.....

.....
.....
.. 15 Recording Format ...
.....

.....
.....
.....
..... 15 Configuration ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
..... 16 Channel List

.....
.....
.....
.....
.....
.....
.....
.....
.....
..... 16 Scan Encrypted .

.....
.....
.....
.....
.....
..... 17 Auto Power Down ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
..... 17 Receiver Upgrade .

.....
.....
.....
.....
.....
.....
.....
.....
.....
..... 17 Parental Locking

.....
.....
.....
.....
.....
.....
.....
.....
.....
..... 17 Menu Lock

.....
.....
.....
.....
.....
.....
.....
..... 17 Set Pin

television whilst driving. DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode.



[You're reading an excerpt. Click here to read official HITACHI HDR505 user guide](http://yourpdfguides.com/dref/4307962)

<http://yourpdfguides.com/dref/4307962>

Switch off using the switch on the equipment and make sure that your family know how to do this. Special arrangements may need to be made for infirm or handicapped people. DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer. ABOVE ALL --- NEVER let anyone especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electrical shock; --- NEVER guess or take chances with electrical equipment of any kind --- it is better to be safe than sorry! English - 3 - Overview of the Remote Control Used in Media Browser (optional) & Teletext Used in Media Browser (optional) & Teletext Used in Media Browser (optional)/ English - 4 - Connections FRONT VIEW ® Rating label HDR505 DIGITAL TELEVISION RECORDER 12 V DC 1.5A Hitachi Europe Ltd. CAUTION :DO NOT OPEN. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. ONLY USE ADAPTOR SUPPLIED BACK VIEW 35026858 ANTENNA IN ANTENNA OUT OPTICAL AUDIO OUT SCART (TV) DC IN 1 2 3 4 5 1. AERIAL OUT : Connect to your TV 2.

ANTENNA IN : Aerial input 3. OPTICAL AUDIO : Optical Digital Audio Output 4. TV SCART : TV SCART connection 5. POWER SUPPLY : DC IN (12V) English - 5 - Remote Control First open the battery cover on the underside of the remote control. Put in both batteries 1.

5Volt (RO3/AAA) referring to the imprinted symbols (+/-) in the battery case and put on the battery cover again. While using the remote control, direct it towards the front side of the receiver. If the remote control does not work or the chosen function does not work, the batteries are most probably exhausted and they should be replaced as soon as possible. Please use only the leak proof batteries. It is best to remove the batteries from the remote unit if you will not be using the remote control unit for long time.

Connection to the Tv ANTENNA IN ANTENNA OUT OPTICAL AUDIO OUT SCART (TV) DC IN Connect your set-top box with a scart cable using the TV scart connector on the rear panel to your television's scart connector. The set-top box gives RGB or CVBS output. If you want to get the picture via scart connector and your TV's scart connector has an RGB input, then you can switch your digital set-top box to RGB mode, by toggling TV out menu to RGB mode, in configuration menu. So, you will be able to achieve high performance from your digital set-top box. English - 6 - 35026858 Power Connection IMPORTANT: The set-top box is designed to operate on 12 V DC. For this, an adaptor is used which gives 12 V voltage. Connect this adaptor to a system that supplies 220-240V AC,50Hz. After unpacking, allow the set-top box to reach the ambient room temperature before you connect the set to the mains UK Power On-Off Connect all cables before plugging into the mains. After plugging in the ma Channel table is the place where the channels are managed.

English - 8 - Navigating the Entire Channel List In the channel table " / " moves the selection to the previous or next .

To exit menu and watch a specific channel highlight it using, " / " then press OK key while the "SELECT" option at the bottom of the screen is highlighted. If the MP) : go to preferred channel directly via numeric buttons. (RECORD) : the unit will record the selected programme. (PAGE LEFT) : moves the page to left. (PAGE RIGHT): moves the page to right. TEXT (SEARCH) : activates "Search" window. (NOW) : shows the current programme. Programme Option In EPG menu, press the OK button to enter the "Programme Options" menu. programme. This option operates like the RECORD button.

To cancel an already set recording, highlight that programme and press the OK button and select the option "Delete Timer". The recording will be cancelled. Record Series/Delete Series Number In EPG menu, after you have selected a programme, press the OK button and select the "Record Series" option in the menu which appears and press the OK button again. So a series recording is set to the selected programme. With this feature, you can record a programme and all of it's following parts within 7 days.

The information belonging to the selected programme will be saved from the software and following parts of the selected programme which are not included in the period of 7 days, will be automatically added day by day. The letter "s" denotes that these recordings are series records. To cancel an already set series recording, highlight that programme and press the OK button and select the option "Delete Series Timer". The recordings will be cancelled. Note: Series programme informations should be broadcasted by the broadcaster Check Conflicts A conflict is caused, if more than two programmes are set for recording in the same time interval or if two reminders have the same starting time.

In the EPG menu, press the OK button. In the following window, select the option "Check Conflicts" and press again the OK button. You will enter the "Too Many Timers" window. Select Channel In EPG menu, using this option, you can switch to channel of the programme which is selected. Record/Delete Timer In EPG menu, after you have selected a programme, press the OK button and select the "Record" option in the menu which appears and press the OK button again. So a recording is set to the selected Set Reminder/Delete Reminder In EPG menu, after you have selected a programme, press the OK button and select the "Set Reminder" option in the menu which appears and press the English - 10 - OK button again. You can set a reminder for future programs. To cancel an already set reminder, highlight that programme and press the OK button and select the option "Delete Reminder". The reminder will be cancelled.

Record/Cancel: Sets recordings for the selected programme.

If you pres it again, the recording will be cancelled. OK: Pressing this button will save the latest changings and you will leave this window and go back to the EPG window. Alternatives: If you press this button, you will get alternatives for the programme which causes a conflict. NOTE: A conflict is caused, if more than two programmes are set for recording in the same time interval or if two reminders have the same starting time. To solve this conflict, you have to select an alternative for one of those programmes or cancel one of the reminders. Split Record If you select a programme to be recorded, with this feature, if there is another part of the programme available, it will also be set automatically to be recorded. For example in the following picture you see the programme highlighted, which following episode is also underlined. To do this, you have to press only the RECORD button once. The rest will be done automatically.

Note: Split programme informations should be broadcasted by the broadcaster.



[You're reading an excerpt. Click here to read official HITACHI HDR505 user guide](http://yourpdfguides.com/dref/4307962)
<http://yourpdfguides.com/dref/4307962>

Multiple/Alternative Timer Record It is possible to record or set reminder for two individual events at the same time interval. If you set more than two recordings/reminders at the same time, you will see an error message. NOTE: If there is still a conflict and you leave this menu by pressing the OK button, you will see this warning message: "There are still conflicts!". In timer menu, you can see this conflict as the picture below. A warning triangle will appear nearby the programmes which cause a conflict.

These programmes will be recorded particularly or not. INFO: Pressing this button, gives you detailed information about the selected programme. English - 11 - Timers Duration: Displays the duration of the recording. This is automatically worked out after the start and end times have been entered. Playback: permit or block playback for other users.

"use parental settings" is default. Change /Delete: permit or prohibit any modifications for other users. When a timer Start time is reached, the receiver starts to record the desired program, then when the end time is reached, the record stops. Save the adjustments by means of GREEN key or cancel with RED button. Edit the list via GREEN key and delete with the RED button. Recordings Library To display Timer window press either TIMERS key or activate it from main menu. The features of this menu are like below: Delete: You can delete the highlighted single timer or series timer. Edit: You can edit the saved timers. Add: By pressing this button, you will go to the "Add Timer" menu. Options: If you press the OK button, you can select the "Delete Timer", "Delete Series Timer" and "Check Conflicts".

All the recordings are kept in list. To show the list of recordings press either LIB button on the remote or access it from the main menu. RED BUTTON (DELETE) : Erase the recordings GREEN BUTTON (EDIT) : make changes to the recordings YELLOW BUTTON (TAG) : marks the recordings for archiving BLUE BUTTON (SORT) : change the order of the recordings INFO (DETAILS) : displays the short extended programs in detail To add a Timer press YELLOW button on the remote and the, "Add Timer" windows appears. Channel: " / " keys will navigate the user through the TV or Radio list. Date: By using either " / " or "0,1,2,...,9" keys start date is entered. Start: By using either " / " or "0,1,2,...,9" keys start time is entered. End: By using either " / " or "0,1,2,...,9" keys end time is entered. OK BUTTON : opens the play options menu (RESUME): recommence the recordings Red bar: indicates the used space of the recordings on the hard disk. Yellow bar: displays the approximate capacity required for the timers currently set. Green bar: shows the free space on the hard disk. English - 12 - Play Options: Play from start: Plays the recording from the beginning.

Resume: Begins with playing from the last stopped position. Play from offset: Begins with playing, from the time which is entered. Manage chapters : It will display any marked chapters (To set chapter marks, press the Menu button during playback and enter the "Chapter Options" menu) and begin with playback from the selected chapter. Create archive (Archive management): Using this option, you will be able to archive your recordings to an external device like a DVD player. Press the LIB. Button and come to the "Recordings Library". In this library, the saved recordings are listed. To select a recording which should be archived, highlight one of them using the " / " buttons and select the TAG option, by pressing the yellow button. After then, press the OK button to open the "Play Options" menu. In this menu, using the " / " buttons, select the "Create Archive" option and enter it by pressing the OK button.

You will see the menu below: Here, only the "Start recording at" and " Stop recording at" options are active. If you have already separated recording, you could select any chapter to begin with the archiving and stop it. If it is not separated in chapters, the beginning and ending time of the recording will be automatically the beginning and ending time of the archiving. Main Title If you want to display a main title, select "Include" (To do this, use the " / " buttons). If not, select "Skip". By selecting "Skip", the options below will be disabled. TEXT: After you select the "Include" option in the "Main Title" menu, you could edit the main title. DURATION: Set the duration of the appearance of the main title on the screen. Recording Title If you want to display a recording title, select "Include" (To do this, use the " / " buttons). If not, select "Skip".

By selecting "Skip", the options below will be disabled. While archiving, you could decide to show the names of the saved recordings on the screen. DISPLAY: In this option, you could decide, which of the following items should be displayed in the recording title: "Name", "Start date/time" and "Length". Edit Recordings While the "Edit recordings" option is highlighted, using the " / " buttons come to the list of recordings on the right of this menu. Select one of them, which should be archived and press the OK button.

You will come to the following menu: DURATION: Set the duration of the appearance of the "Edit recording title" menu main title on the screen. If you press the Menu button during playback, you will enter the "Chapter options and in this menu, you could set any point as a chapter. So, the user is be able to skip frames which should not be archived. The user could also start and stop the playback from any chapter he wants. To stop archiving, press the STOP button. During archiving, no other button will function. English - 13 - Chapter Options During playback of a recording, if you press the MENU button, you will get to the "Chapter Options" menu. @@@@ You could set a chapter mark anywhere you want. @@ If there is more than one chapter. @@ This is the last played chapter. @@ If there is more than one chapter. @@@@ Oldest: Starting with the oldest, recordings will be deleted to make space for the requested timer. Recordings The internal hard drive can store up to 40 / 80 / 120 hours (it depends on the size of the HDD) of digital TV broadcast (depending on the data rate of the recorded programme, which is set automatically by the broadcaster). Longest: Starting with the longest, recordings will be deleted to make space for the requested timer. @@@@ Press OK with the "Format Disk" option is highlighted.

A menu appears, in which you will be asked for a pin number. If you have not changed the pin number, the factory default is 0000.



[You're reading an excerpt. Click here to read official HITACHI HDR505 user guide](http://yourpdfguides.com/dref/4307962)
<http://yourpdfguides.com/dref/4307962>

@@Select "NO" and press OK to cancel. @@@@. Do not subject the Recorder to any vibration or impact. @@@@. Do not place the Recorder in a location with high humidity. Place the Recorder horizontally, never at an incline. @@@@. The following phenomena may occur. @@@@. Select Configuration from Setup menu and press OK to enter this menu. @@- If a power failure occurs the content being recorded or timer recorded may be damaged if power failure occurs. The content being played back may be damaged.

- For important recording If the HDD malfunctions, the content recorded on the HDD may be lost. If you wish to save content permanently, we recommend copying or moving the content to Video or DVD. NOTE If a message indicating an HDD error is displayed (such as "ERROR IN HDD. CANNOT OPERATE.") and the HDD has malfunctioned, you cannot replace the HDD by yourself.

If you disassemble the Recorder, the warranty will become void. Also, recovery of data is impossible. If playback is possible, re-record the recorded content onto a Video or DVD, and contact the approved service centre with the details provided at the front and back of this operation manual. Hard Disk Operation (Recording / Playback / Time Shift Recording) If the Recorder is used in a cold location (a location at low temperature), the drive will only allow live viewing after power is turned on until the HDD is ready. During this time, the Recorder will not allow Time Shift Viewing, recording, display of recording lists or playback of recorded programmes.

Please wait until the HDD is ready. Tv Type Digital terrestrial television channels can broadcast programmes in a widescreen format which must be output differently to normal and widescreen TV sets. This function tells the receiver the screen format of the TV connected so that broadcasts are displayed correctly. Highlight the TV Type line in the Configuration menu and use the " / " keys to select 4:3 if you have a standard TV set connected or 16:9 if it is a widescreen TV. If you choose "Auto", the TV type will be set automatically according to the broadcasted programme. This function duplicates the selection made at the time of first installation and can be used if you change TV sets. Tv Out The receiver can output RGB and CVBS signal from the TV SCART on the rear panel. Although the RGB format results in a better quality picture, not all equipment can cope with an RGB signal. Favourite Mode This function enables or disables the favourite channel list mode by pressing " / " buttons. If a favourites list exists it will switch to the list number selected.

If there is no favourite listing, a warning message is displayed. Channel List Use " / " buttons to go to Channel List option. Use " / " buttons to toggle Channel List Mode. If you select "TV Only" you navigate through only TV channels, if you select "Radio Only" you navigate through only radio channels, if you navigate "Text Only" you navigate through only Text channels with the PR+/PR- buttons. If you choose "Show All" all channels can be navigated with the PR+/PR- buttons. To save the recent changes and exit; press the MENU button. English - 16 - Scan Encrypted Use " / " buttons to go to the Scan Encrypted Channels option. Use " / " buttons to toggle YES or NO the searching for encrypted channels. the lock key is displayed. The key is set to "0000" initially.

Enter lock key. If it is incorrect, "Wrong Pin" is displayed. If it is correct, the Parental Control Menu is displayed. Auto Power Down This box will automatically switched from active mode into standby mode, after less than three hours in active mode, following the last user interaction and/or a channel change with an alert message two minutes before going in to standby mode. The Automatic power-down will be set as default and the user will be able to change Automatic power down to on or off in the menu Menu Lock In menu lock you can set locking for All Menus, or the Installation Menu to restrict access to these menu's.

If the menu lock is disabled, there will be free access to the menu system. Use " / " buttons to go to Menu Lock option. Use " / " buttons to choose Menu Lock Mode. DISABLED : All menus are unlocked. @@@@. Please ensure that after use it is set to its standby mode.

The STB automatically powers up at 3.00 A.M. @@This operation will normally take approximately 30 minutes. If you have an important recording to make at 3.00 A.M. @@@@. The PIN code of the unit changed. @@Press OK to display the "Set PIN" window. Use NUMERIC buttons to enter new pin number you will need to input your new pin a second time for verification purposes.

If Both pin numbers are four digits long and the same, the pin will be changed. The factory default pin number is 0000, if you change the pin number make sure you write it down and keep it safe. Language In this menu the user can adjust the preferred language. Language is changed by pressing OK key. Parental Locking Use " / " buttons to go to Parental Lock option. Press OK button to enter the menu. A box asking for Menu: shows the language of the system Preferred English - 17 - These settings will be used if available. Otherwise the current settings will be used. Audio: by pressing " / " keys change the audio language. Subtitle: alter the subtitle language with " / " keys.

The chosen language will be seen in subtitles. Guide: by pressing " / " keys change the guide language. Current Audio: if audio language is supported change the audio language by pressing " / " keys Subtitle: if subtitle is backed up alter the subtitle language with " / " keys. The chosen language will be seen in subtitles. When there are no channels stored in the box; he Channel List menu is not accessible.

Channel navigation is not allowed. Therefore, trying to enter these menus or navigate the channels will display an error message on the screen. Specific Functions of Remote Control When there is no menu active on the screen, each of the keys have specific functions. OK KEY: when OK key is pressed Channel list appears on the screen. RECORD KEY The programs are recorded at once.

Record time is attained from EPG automatically. If the program has EPG information, you could set the timer. If there is no EPG info, press the Record button to set the timer in 30 minutes periods. Installation Automatic Channel Scan / Retune Automatic channel scan is activated by selecting OK when the line is highlighted. A pop-up menu appears on the screen, select "YES" the automatic scan begins. All the multiplexes are searched and a channel table is created automatically.



[You're reading an excerpt. Click here to read official HITACHI HDR505 user guide](http://yourpdfguides.com/dref/4307962)
<http://yourpdfguides.com/dref/4307962>

All channels found are stored in a sorted form with respect to their channel numbers. Selecting "NO" will cancel the operation. · In EPG by pressing the record key, programs are recorded instantly. LIB KEY : by pressing this key, you will get to the Recordings Library, which shows you the details of your saved recordings.

By pressing it again, you will exit the Recordings Library. SUBTITLE : subtitle key shows/hides subtitles of channel. When the subtitle key is pressed, subtitle ON/OFF message is displayed. INFO KEY When INFO key pressed, and when changing channels the information window is displayed on the lower part of the screen. The small bar indicates the program duration. On the channel info window there are Manual Channel Scan In manual search the number of the multiplex is entered manually and only that multiplex is searched for the channels. In manual and auto search, any existing channel in the database is not re-stored to avoid redundant duplicates of that channel. To start the scan enter the channel number manually and press OK. First Time Installation Use this option to load default settings, which had been set at the factory. To install factory settings, highlight 'First Time Installation' menu and press OK key, then you will be asked to confirm deleting all channels and settings.

Selecting YES and pressing OK will delete the channel table. Selecting "NO" and pressing OK will cancel the operation. · Current event name next event name, and their start and end times. · Program duration bar · Program mode (TV or Radio) · Channel number · Name of the channel PR+ / PR (CHANNEL NAVIGATION) There are two ways to navigate through the channels: Message When the box receives no signal (e.g. the antenna (cable is disconnected), "NO SIGNAL" message is seen on the screen. English - 18 - · Pressing PR +/ PR - keys will take you to go to the next or the previous channel in the list. · Pressing a number key will activate a small digit entry window on the left upper corner of the screen. After a digit is entered, the box will stay for 2 seconds while you enter another digit. If no digit is entered during these 2 seconds, then the box will switch to the entered number channel.

If a number that is greater than the maximum number of channels is entered, the box will switch automatically to the last channel. · Press OK button to display the channel list. Volume Control The volume level of the sound from the receiver can be altered with the VOL+ and VOL- keys on the remote control handset. Pressing either key displays a bar graph of the sound volume on the TV screen. The volume level selected will remain set, even when the receiver is turned off and on again, until it is altered with VOL + and VOL - keys. The audio volume adjustment for the receiver is independent of the volume control on your TV set. Be careful that both volume controls are kept within reasonable levels so that when switching from analogue to digital television viewing, or when first turning on your TV set, the sound level is not too high. You can silence the sound from the receiver by pressing the MUTE key. The sound remains muted until the MUTE key is pressed again, the VOL + or VOL- keys are pressed. While the sound is muted in this way, the mute symbol is displayed in the top left of the TV screen.

The symbol is removed after 3 seconds, but the sound will remain muted until the MUTE key is pressed for the second time and the mute symbol will display for 3 seconds. Pause Live Recording is a feature that enables you to pause a live broadcast if, say the phone rings you can go back to the same spot that you were at when you left. The live broadcasting can be stopped any time. Press PAUSE button to suspend the broadcasting. In the INFO banner the timeshift will commence. The duration of Timeshift can be adjusted from Recordings in the Configuration menu (See 5.1.RECORDINGS). In order to stop the timeshift press PLAY, PAUSE or OK button. The paused recording can be watched in different speeds by means of or keys.

To terminate the Pause Live Recording press button. TEXT Many digital terrestrial television channels not only broadcast pictures and sound for programmes but also pages of information on the programmes, the weather, news and many other topics. This digital teletext can be displayed by the receiver. Some channels are entirely given over to digital teletext and carry no normal TV programme at all. These dedicated digital teletext channels will not give a quarter-screen image in the EPG or the Channel List screen.

When such a channel is selected, after a brief pause, they will usually display the opening page of information automatically. Other channels have digital teletext pages broadcast alongside the television programme and often include a reduced size broadcast picture within digital teletext pages. These usually require the TEXT button to be pressed to activate the digital teletext pages. In both cases, moving through the different pages of information is accomplished in a variety of ways, dependent on the individual broadcasters, but including use of the " / " " / " " / " " and [OK] keys to select items from onscreen menus, and the coloured keys to jump directly to particular pages. You can exit teletext mode by pressing the TEXT button on the remote or by changing channel.

Also if you call for the INFO bar or bring up a menu you will temporarily enter TV mode returning to TEXT mode when you cancel the menu or INFO bar. You can exit any digital teletext channel by changing channel in any of the normal ways. You can leave the digital teletext function of a combined digital teletext/ programme channel, to return to normal television viewing of that channel, by pressing the TEXT key. Calling for the information banner or any menu onscreen stops the receiver from displaying the digital teletext pages and they are temporarily replaced by a blank picture while the banner or menu is displayed. Digital teletext cannot be accessed when the Subtitles are enabled. Time Shifting(Pause Live Recording) English - 19 - WIDE TV sets are available with screens of the standard (4:3) format and widescreen (16:9) format. When you first installed your receiver you specified the format of the connected TV (this can now be altered if necessary; see Configuration) Digital terrestrial television broadcasts are also made in both standard and widescreen formats. In particular, films and dramas tend to be broadcast in widescreen format to closer emulate the cinema experience, but some programmes such as news bulletins are 4:3. To help get the most from both TV set and programme when a widescreen film is watched on a standard TV, or a standard broadcast is viewed on a widescreen set, the receiver includes the WIDE key. So long as the receiver has been correctly set up for the TV set connected, a widescreen programme will always be displayed correctly on a widescreen set, and a standard format programme will correctly fill the screen of a standard format TV.



[You're reading an excerpt. Click here to read official HITACHI HDR505 user guide](http://yourpdfguides.com/dref/4307962)

<http://yourpdfguides.com/dref/4307962>

With a widescreen TV set displaying a standard format programme the WIDE key switches between displaying the picture with black bars down the sides, and enlarging the picture so that it fills the whole width of the screen but the top and bottom are cropped off. With a standard format TV displaying a widescreen programme, the WIDE key switches between displaying the picture with black bars at the top and bottom of the screen, and filling the whole height of the screen but cropping the sides off according to instructions broadcast with the programme (called 'pan and scan'). The effect of the WIDE key on the picture display is cancelled by pressing WIDE again. Note: Sometimes the TV will automatically try and compensate for an incorrect screen format, in this instance set the tv to the correct format whilst viewing the programme. Notes POWER: The receiver should be plugged into a 220/240 V AC 50Hz supply only.

LEADS: Ensure the power supply lead, and all other leads, are positioned so they are not likely to be walked on or pinched by things placed on or against them. Pay particular attention to the power lead, where it enters the mains plug and where it comes out of the receiver. Do not connect or adjust leads when the receiver is plugged in. TEMPERATURE AND MOISTURE: Do not leave or use the receiver in a hot, cold or humid area. Do not allow the receiver to get wet - from drips or splashes - as this may be dangerous.

Do not place water-filled objects such as flower vases, on top of the receiver. VENTILATION: Slots and openings in the receiver's cover are for ventilation.

Do not cover or block them as this could lead to overheating. CLEANING: Unplug the receiver before it is cleaned. Use a lightly dampened cloth only.

Do not use liquid or aerosol cleaners. HEAT AND FLAMES: The receiver should not be placed near to naked flames or sources of intense heat, such as an electric fire. Ensure that no naked flames sources, such as lighted candles, are placed on top of the Receiver. LIGHTNING: Unplug your receiver from the wall socket if there is a storm or lightning, or if it is to be unused for a long time. REPLACEMENT PARTS: If your receiver needs a replacement part, ensure the person undertaking the repair uses parts which are specified by the manufacturer or have the same specifications as the original part.

Other parts may cause a fire, electric shock or other hazards. BATTERY DISPOSAL: Please ensure that exhausted batteries from the remote control handset are disposed of safely. SERVICING: Ensure the person who services your receiver is qualified to do so. Do not remove the cover yourself you could get an electric shock. We are proud to offer a high-quality product. To keep this level of quality, your receiver should be serviced at an authorised service centre.

English - 20 - General troubleshooting PROBLEM The Led indicator does not glow No picture or sound POSSIBLE PROBLEM Main cable is not connected No signal or weak signal WHAT TO DO Check If the main cable is not plugged into the power socket Check the Aerial and scart connections Press the standby key. Check if anything is obstructing the front panel. Change the batteries The digital set-top box was unplugged without The remote control is not working first going to stand by. Remote control is incorrectly aimed.

Battery exhausted. Password forgotten Record does not start Take contact with the nearest service center. No or weak Aerial input Signal Check Aerial input connection. English - 21 - GENERAL CHARACTERISTICS Supply Voltage Input Frequency Maximum Power consumption Standby Power Consumption Operating temperature Storage temperature Humidity Physical dimensions Weight 220 - 240 V AC ~ 50Hz 470Mhz-862Mhz 18 W 1W 5°C to +45°C -15°C to +55°C 25 to 75 % rel 360x280x48 mm 2820 g HARDWARE CONFIGURATION Main Processor Flash Memory DDRRAM STM5100 8 MB 64 MB DIGITAL CAPABILITIES Transmission Standards DVB, MPEG2 DEMODULATION COFDM with 2K/8K FFT mode. FEC for all DVB Modes. (Automatically found) VIDEO ALL MPEG-2 MP@ML Video Decoder Aspect Ratio RGB analogue outputs. CVBS analogue output. 4:3, 16:9 with pan vector BW 5MHz at 0.5 to 5 MHz sweep signal AUDIO MPEG1 Layer 1 and 2 Sampling frequencies supported 32 kHz, 44.1 kHz or 48 kHz.

Output can be programmed as STEREO, LEFT only or RIGHT only (on both outputs). This is useful for dual mono channels in order to select the correct sound track, which is stored for every channel. Wide dynamic range 16-bit resolution REMOTE CONTROL Operating Distance Batteries 10 m Max. 2x1.5V Micro (R-03/AAA) English - 22 - TUNERS 1 x RF In 1 x RF Out (loop through) IEC-type, female (75Ohm) IEC-type, male (75Ohm) HARD DISK Hard Disk capacity 500 GB FRONT PANEL Display : 7 segment led display Remote Control Keys On / Off AUDIO Output 2 Vrms, 0 dBfs / Z = 10 kohm DIGITAL AUDIO Output Optical SPDIF A / V & DATA IN / OUT Scart RGB Video Output CVBS Video Output Analog Audio Output TV scart TV scart TV scart TV scart Digital Audio Output Optical output English - 23 - Product Guarantee This product is guaranteed against manufacturing defects for a period of 1 Year This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use In the event of a problem with the product within the guarantee period please return it to your nearest store If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement Your statutory rights remain unaffected Guarantor; Home Retail Group 489 499 Avebury Boulevard Central Milton Keynes MK9 2NW Waste Disposal Instructions for waste disposal: Packaging and packaging aids are recyclable and should principally be recycled.

Packaging materials, such as foil bag, must be kept away from children. Batteries, including those which are heavy metal-free, should not be disposed of with household waste. Please dispose of used battery in an environmentally friendly manner. Find out about the legal regulations which apply in your area.

Information for Users in European Union Countries The mark is in compliance with the Waste Electrica and Electronic Equipment Directive 2002/96/EC (WEEE).

The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment, display the chemical symbol Hg, Cd, or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury, or more than 0.002% Cadmium or more than, 0.004% Lead. English - 24 - DVB-T functionality information This DVB receiver is only suitable for use in the country which it was designed to be used in. @@@@To check when you switch, go to Digital UK's postcode checker on www.digitaluk.



[You're reading an excerpt. Click here to read official HITACHI HDR505 user guide](http://yourpdfguides.com/dref/4307962)

<http://yourpdfguides.com/dref/4307962>

co.uk Check your ITV news service or look at Teletext page 106 to see what TV region you're in.

Keep this leaflet and your instruction manual safe you'll need them

.....

.....

.....

.....

.....

.. Visit us at digitaluk.co.uk _call us on 08456 50 50 50 Calls charged at BT rate of 3p per minute daytime and 1p per minute evenings and weekends. Rates may vary for calls from non-BT lines. Television in the UK is going digital, bringing us all more choice and new services. Starting in late 2007 and ending in 2012, television services in the UK will go completely digital, TV region by TV region. Please see overleaf to find out when your area switches to digital. Digital UK is the independent, non-profit organisation leading the process of digital TV switchover in the UK. Digital UK provides impartial information on what people need to do to prepare for the move to digital, and when they need to do it. How to re-tune: 1. @.@2. From the Menu options on screen, select 'Installation'. @.@.@.@.@If you are missing any channels, it may be that they are not available in your area, or that your aerial needs upgrading.

If you have any questions, please contact your equipment supplier or call Digital UK on 0845 6 50 50 50 or visit www.digitaluk.co.uk How the switchover affects your Digital TV Recorder: When the TV switchover happens in your area, there are at least two occasions when you will need to re-tune your Digital TV Recorder in order to continue receiving your existing TV channels, and also to pick up new ones. Digital UK, the body leading the digital TV switchover, will advise you when you need to re-tune during the switchover. If you find you can't receive the extra digital channels, it may be because your area is not covered by Freeview yet or that you need an aerial upgrade. Visit www.digital.co.uk to check.

DIGITAL TV RECORDER HDR505 BEFORE YOU START This Digital TV Recorder (DTR) can only receive and record Digital Terrestrial TV (Freeview) signals. Please check that you are in a Digital TV reception area. The FREEVIEW service is subject to coverage. An aerial upgrade may be required.

FREEVIEW TM and logo © DTV services Ltd 2002.

To check FREEVIEW coverage in your area now text your postcode to 83331 for a reply in seconds (standard network charges apply), telephone 08708 80 99 80 or visit www.freeview.co.uk Please check that all the following accessories are included and then insert the batteries in the remote control, ensuring that they are the correct way round. Accessories: - 1 Remote Control & 2 x AAA batteries - 1 Operation Manual - 1 Scart Cable (21 pin cable) - 1 RF Cable 1 some time.

Then, you can turn on your digital set-top box by pressing the STANDBY button on the remote control. 5 FIRST TIME INSTALLATION Set the " keys and Ø TV type with "3 press OK .You /4 can select Normal 4:3 or Widescreen 16:9 if you have a widescreen TV. Ø Automatic channel scan window appears and the unit starts to search for channels. 2 CONNECTION TV Aerial AC3 DIGITAL AMPLIFIER DC IN 12V,2A ANTENNA IN ANTENNA OUT OPTICAL AUDIO OUT SCART (TV) Note: When the search progress is completed, a message will be displayed on the screen saying "System will be restarted to save changes". Please press OK, and after 3-5 seconds the box will restart. You can watch saved broadcasts after the restart process. MAIN MENU Main menu is accessed by pressing 35026603 TV 6 the MENU key on the remote control. Ø with "5 Navigate /6 " keys among 3 the menus and press OK to activate REMOTE CONTROL STANDBY ON OFF LIB. menus.

Ø of the programmes, The list PLAY TIMERS LIBRARY TIMERS RECORD ARROW KEYS PAUSE TIMESHIFT GUIDE INFO Channel List, Electronic Programme Guide, Timers, Recordings Library and Setup menu are reached from main menu. Ø Press BACK to exit the main menu. OK KEY TEXT OK BACK PR VOLUME UP/DOWN 1 GHI PROGRAM UP/DOWN 7 CHANNEL LIST VOL ABC DEF 2 JKL 3 MNO 4 PQRS 5 TUV 6 WXYZ Channel list is the place where the channels are managed. The following operations can be performed in this menu: NUMERIC KEYS 7 AUX MENU FAV. 8 0 SUBT. 9 PP WIDE MENU PIP PIPPIP+ SWAP PIP WINDOW PICTURE IN PICTURE 4 GETTING STARTED Connect all cables before plugging in to mains. When the settop-box is first powered up please wait for a while before activating the receiver since booting of software will take Ø Navigating channel list Ø channels Renaming Ø channels Deleting Ø favourite list Setting Ø Adding locks to channels 8 SETUP The entire settings and configuration of the unit is adjusted in the SETUP menu. To activate setup menu in main menu press OK, when it is highlighted. Setup menu appears on the screen. Navigate within this submenu by means of "5 /6 " keys.

Model HDR505 9 RECORDINGS RECORD WITH SINGLE KEY NOTE: The HDR505 has two tuners so you can make a recording of one digital channel and watch a different digital channel on the TV. ? programme simply press the RECORD key To record a ? The recording time of the programme will be automatically obtained from the Electronic Programme Guide (EPG). ? It is also possible to record a programme in the EPG by selecting it and pressing the RECORD button ADD RECORDS VIA TIMERS Programmes can also be recorded by means of "Timers" menu. Select "Timers" from Main Menu and press OK. ? Press YELLOW button to add a new recording.

? you want to record. Select what ? Press GREEN button to store it. ? programme starts it will be automatically When the recorded. DIGITAL TV RECORDER © RECORDINGS LIBRARY All the recordings are kept in "Recordings library". To show the list of recordings press either LIB. button or access it from main menu. Red bar: Indicates the space used on the Hard Disk. Yellow bar: Yellow bar shows how much space has been set for timer recordings. Green bar: Shows the free space on the hard disk. QUICK START GUIDE PAUSE LIVE RECORDING This feature allows you to freeze a programme if you need to leave the TV for a while and resume watching the programme from the same point when you return. Simply Press the (pause) button and the HDR505 immediately start to record the programme being watched. When you return simply press the (pause) key again and it will start replaying whilst continuing to record. At the end of the programme press the stop button. Instruction manual To obtain the best performance and ensure years of trouble-free use, please read this instruction manual completely.

www.hitachidigitalmedia.com .



[You're reading an excerpt. Click here to read official HITACHI HDR505 user guide](http://yourpdfguides.com/dref/4307962)

<http://yourpdfguides.com/dref/4307962>