




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI HIT19WDVB. You'll find the answers to all your questions on the HITACHI HIT19WDVB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI HIT19WDVB
User guide HITACHI HIT19WDVB
Operating instructions HITACHI HIT19WDVB
Instructions for use HITACHI HIT19WDVB
Instruction manual HITACHI HIT19WDVB

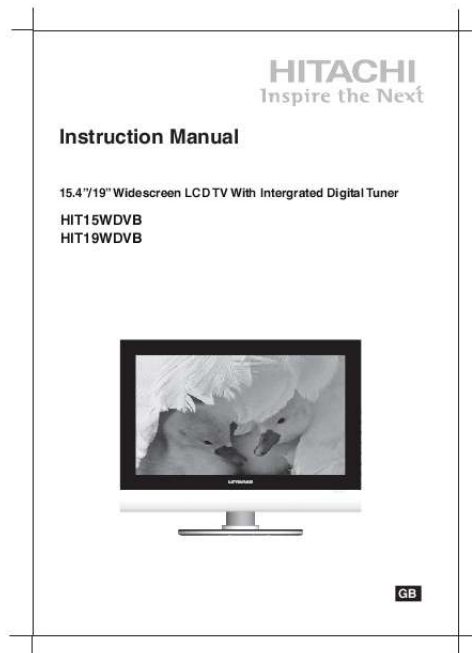

[You're reading an excerpt. Click here to read official HITACHI HIT19WDVB user guide](http://yourpdfguides.com/dref/2814869)
<http://yourpdfguides.com/dref/2814869>

Manual abstract:

DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment. DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the equipment. DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires. DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing. DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation. Switch off using the switch on the equipment and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer. ABOVE ALL NEVER let anyone especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electric shock NEVER guess or take chances with electrical equipment of any kind...it is better to be safe than sorry! Note: This product is exclusively available through Dixons Stores Group.

In the unlikely event of a problem with your product please return to the store where your purchase was made. 1 Specifications Troubleshooting Using The DTV Features Using The Features Installing the LCD TV Introducing the LCD TV This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured. Preparation Preparation Introducing the LCD TV Safety Warnings Power Source The TV set should be operated only from a 220-240 V AC, 50Hz outlet. Ensure that you select the correct voltage setting for your convenience. Power Cord Do not place the set, a piece of furniture, etc.

on the power cord (mains lead) or pinch the cord. Handle the power cord by the plug. Do not unplug the appliance by pulling from the power cord and never touch the power cord with wet hands as this could cause a short circuit or electric shock. Never make a knot in the cord or tie it with other cords. The power cords should be placed in such a way that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electric shock. When it is damaged and needs to be replaced, it should be done by qualified personnel. Moisture and Water Do not use this device in a humid and damp place (avoid the bathroom, the sink in the kitchen, and near the washing machine). Do not expose this device to rain or water, as this may be dangerous and do not place objects filled with liquids, such as flower vases, on top. Avoid from dripping or splashing.

If any solid object or liquid falls into the cabinet, unplug the TV and have it checked by qualified personnel before operating it any further. Cleaning Before cleaning, unplug the TV set from the wall outlet. Do not use liquid or aerosol cleaners. Use soft and dry cloth. Ventilation The slots and openings on the TV set are intended for ventilation and to ensure reliable operation. To prevent overheating, these openings must not be blocked or covered in anyway. Heat and Flames The set should not be placed near to open flames and sources of intense heat such as 2 an electric heater. Ensure that no open flame sources, such as lighted candles, are placed on top of the TV. Batteries should not be exposed to excessive heat such as sunshine, fire or the like. Lightning In case of storm and lightning or when going on holiday, disconnect the power cord from the wall outlet.

Replacement Parts When replacement parts are required, make sure that the service technician has used replacement parts, which are specified by the manufacturer or have the same specifications as the original one. Unauthorized substitutions may result in fire, electrical shock or other hazards. Servicing Please refer all servicing to qualified personnel. Do not remove the cover yourself as this may result in an electric shock. Waste Disposal Instructions for waste disposal: Packaging and packaging aids are recyclable and should principally be recycled.

Packaging materials, such as foil bags, must be kept away from children. Batteries, including those, which are heavy metal-free, should not be disposed of with household waste. Please dispose of used battery in an environment friendly manner. Find out about the legal regulations, which apply in your area. The cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury; please follow the local laws or regulations for disposal.

Disconnecting the Device The mains plug is used to disconnect TV set from the mains and therefore it must remain readily operable. Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications Contents Preparation

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

1 Safety Instructions

.....

.....

.....

.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

1 Chapter 1 Introducing The LCD TV

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 3 Package Contents

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.. 3 Setting Your LCD TV

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

. 4 Your LCD TV

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

... 5 Remote Control.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

8 Chapter 2 Installing The LCD TV

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

..... 10 Connecting a TV Cable or an Anterial

.....

.....

.....

.....

.....

.....

.....

.....

.....
.....
.....
.. 10 Connecting a DVD Player

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 14 Connecting a VCR & Video Camera

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 15 Connecting a TV Cable Box or Satellite Receiver

.....
.....
.....

.....
.....
.....
.....

.....
16 Connecting an Audio Receiver

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.. 17 HDMI ...

.....
.....

.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 18 Chapter 4 Using The DTV Features .

.....
.....
.....

.....
.....
.....

.....
.....

... 24 Specifications ..

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 35 3 Specifications Troubleshooting Using The DTV Features Troubleshooting ...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 34 Using The Features Chapter 3 Using The Features ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.19 Basic Operation

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 19 OSD Menu Operation ...

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 20 The Video Settings

.....
.....
.....

.....
.....
.....

.....

.....
.....
.....
.....
.....
.....
.....

21 The Audio Settings

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 21 The Setup Settings ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 22 The Preferences Settings

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

23 The Screen Settings

.....

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.... 23 Installing the LCD TV Introducing the LCD TV Preparation - + + - GB Other connections Preparation Introducing the LCD TV Installing the LCD TV
Using The Features Using The DTV Features Troubleshooting Specifications 4 Chapter 1 Introducing The LCD TV Once you open the box, make sure all of
the following contents are included. If you're missing any items, please contact your dealer. PACKAGE CONTENTS LCD TV Bottom Stand Remote Control/
AAA Batteries x 2 VIDEO Cable AUDIO Cable RCT-1522 (P.N.:845-045-LM9XB-THITH) (P.N.
:621-151-2000H) (P.N.:621-151-60002H) Power Cord SCART Adapter (P.N.:600-151-5000-LJH) User's Manual (P.
N.: 412-SCA-0001H) (For special and high quality SCART cable (with a bigger adapter head), please use the supplied SCART Adapter to fit snugly into the
SCART socket at the rare panel.) Quick Start Guide Quick Start Guide HIT15WDVB HIT19WDVB PLEASE NOTE: By using a SCART lead (not supplied)
you can improve the quality of playback and sound.



[You're reading an excerpt. Click here to read official HITACHI
HIT19WDVB user guide
http://yourpdfguides.com/dref/2814869](http://yourpdfguides.com/dref/2814869)

Remember you must still have the aerial lead (not supplied) connected. If you are using a SCART lead you should not have to tune your TV to your video, instead select the SCART channel by pressing the TV/SCART button on the remote control.

3a A B C Connecting to a VCR OR 3b AC IN 100-240V 50/60Hz Connecting to a VCR and a Satellite/Cable box A Connect one end of an RF lead to the aerial socket marked on your TV and the other end to the socket marked RF OUT on the back of your VCR. Do not connect the TV to the mains supply until you have completed all the connections. If you have a SCART lead, connect one end of the lead to the SCART socket on your VCR and connect the other end to the SCART socket marked SCART on the back of your TV. AC POWER SWITCH VHF/UHF IN B Connect one end of another RF lead to the aerial socket marked RF IN on your VCR and the other end to the socket marked RF OUT on the back of your Satellite/Cable box. PC AUDIO IN Connect one end of the RF lead to the aerial socket on your TV and the other end to the socket marked RF OUT on the back of your VCR. AC IN 100-240V 50/60Hz AC POWER SWITCH VHF/UHF IN PC AUDIO IN D A A VCR C Connect your aerial lead to the socket marked RF IN on the back of your Satellite/Cable box. Connect your aerial lead to the socket marked RF IN on the back of your VCR. B C B C Satellite/Cable Box D If you have SCART leads connect one end to the socket marked SCART on the back of your TV, and connect the other end to the SCART socket on the back of your VCR. Now go to stage 4. Now go to stage 4.

1 Insert batteries into Remote Control 4 Use 2 x AAA size batteries. Switch on 5 INPUT Select & Start the APS menu Region Confirm Country UK Start APS 2 OK: Start Searching AC IN 100-240V AC IN 100-240V 50/60Hz 50/60Hz AC POWER AC POWER SWITCH SWITCH VHF/UHF IN VHF/UHF IN Connect aerial A B C PC AUDIO IN PC AUDIO IN Is aerial plugged in Press OK to start APS Press MENU to exit APS Do not connect the TV to the mains supply until you have completed oven cleaner etc.) on the remote, as it may suffer damage. Handling the Remote Control It could cause corrosion or battery leakage and may result in physical injury and/or property damage including fire. Never mix used and new batteries in the device. Replace all the batteries in a device at the same time. Remove the batteries if the remote control is not going to be used for an extended period of time. To avoid possible failure, read the following instructions and handle the remote control property. Do not drop or cause impact to the remote control. Do not spill water or any liquid on the remote control.

Do not place the remote control on a wet object. Do not place the remote control under the direct sunlight or near sources of excessive heat. NOTE: Remove the battery from remote control handset when it is not to be used for a long period. Otherwise it can be damaged due to leakage of battery. 4 Connect other an external A/V device (refer to page 14-17).

Effective range Your remote control can be activated from up to the LCD TV 5m away, if points directly in front of the device. 30 O 5M 30 O Your LCD TV LED The LED light indicates when the LCD TV is activated. VOL. CH. CH.

MENU INPUT IR Infrared Receiver MENU Press once to display the OSD (on screen display), press again to turn the OSD off. INPUT INPUT Choose from different input signal sources. Turn the LCD TV on and into standby mode. 7 Specifications Troubleshooting Using The DTV Features VOL. + / Adjust the volume up and down. Select the main-menu item and change values for items when in the OSD mode. CH. Scan up and down through channels. Select sub-menu item when in the OSD mode. Connect to the external earphone for private listening.

Using The Features Installing the LCD TV VOL.+ Introducing the LCD TV Front / Right Side View Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 8 Your LCD TV Rear View and Jacks AC IN 100-240V 50/60Hz AC POWER SWITCH VHF/UHF IN PC AUDIO IN 1 AC IN 100-240V 50/60Hz AC POWER SWITCH 6 5 7 9 VHF/UHF IN PC AUDIO IN 4 3 2 8 ITEM 1 AC IN/Power Switch 2 AV1 SCART 3 AV2 S-VIDEO/AUDIO(L/R) 4 AV3 VIDEO/AUDIO(L/R) 5 AV4 Y, Pb, Pr/AUDIO (L/R) 6 AV5 VGA IN/PC AUDIO IN 7 AV6 HDMI IN 8 DIGITAL OUT 9 RF/ANT. VHF/UHF IN DESCRIPTION Connect the AC power cord to this socket. Make sure that this switch is in the ON position. Connect to external equipment with SCART socket. This SCART input allows audio and CVBS / YC / RGB+CVBS, RGB, S-VIDEO from an external device to be shown on your TV. Connect to the S- VIDEO output sockets and Audio output sockets on your video equipment. Connect to the composite A/V output sockets on your video equipment. Connect to the component (Y, Pb, Pr) video sockets and audio (L/R) sockets of your DVD player, HDTV, or video equipment. Connect to a PC or other devices with a VGA interface.

Connect to devices with a HDMI interface. Connect to digital out socket on external digital audio equipment. (Only for DVB-T Input Source) Connect to the VHF/UHF aerial or cable. S-VIDEO and Video have a common audio input, if both devices are being used at the same time audio from both will be heard at same time. Only switch on the required device to stop the mixing of audio.

Your Remote Control Your Remote Control 1 Turn the LCD TV on and into standby mode. 3 4 6 1 2 5 8 2 Mute and restore your LCD TV sound. 7 3 I-II Cycle through the TV Sound options: MONO / DUAL / STEREO. 10 This function is not available for this model. 12 9 11 4 5 6 7 8 / 13 14 9 10 GUIDE / +10 In DTV mode, press GUIDE button to display the Electronic Program Guide.

11 SLEEP Cycle through the LCD TV sleep timer: OFF, 15, 30, or 60 minutes. RCT-1522 12 SUBTITLE Press the SUBTITLE button to display the subtitle which is broadcast with the program on the screen. 13 VOL. +/- Increase and decrease volume. 14 CH. / Change the channels up and down. Not all region supports DVD-please check with your program service provider. 9 Specifications Troubleshooting Using The DTV Features Using The Features 0-9 Select and switch to a channel by using 0-9 buttons. Installing the LCD TV Introducing the LCD TV Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 10 Your Remote Control Your Remote Control 15 INPUT Display the source list, use buttons to select the signal sources: TV / AV1 (SCART) / AV2 (S-VIDEO) / AV3 (CVBS) / AV4 (Y,Pb,Pr) / AV5 (VGA) / AV6 (HDMI) / DTV. 16 EXIT Exit the OSD menu.

(On Screen Display).



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/2814869)

[HIT19WDVB user guide](http://yourpdfguides.com/dref/2814869)

<http://yourpdfguides.com/dref/2814869>

17 MENU Display the OSD menu on the screen. 18 OK Allow you to move, select a variety of information such as the current channel and the input source. 15 16 17 19 INFO Press once to display a variety of information such as the current channel and the input source. 19 20 18 20 Turn Teletext On / Mix / Off. 21 21 22 Display the main index in Teletext mode. * USB/CARD - This function is not available for this model. RCT-1522 Reveal hidden information such as the answer to a quiz in Teletext mode. * AUDIO - This function is not available for this model. 22 Access the TELETEXT items or corresponding pages. The coloured buttons are used to access interactive modes when Display the top, bottom or all of page to easily read in Teletext mode. * ZOOM - This function is not available for this model. using Digital / Freeview TV channels. Freeze a multi-page passage on screen in Teletext mode. * GO TO - This function is not available for this model.

The DVD, Card Reader, and USB Memory Disk function buttons on the remote control are not available for this model. Chapter 2 Installing The LCD TV Refer to the owner's manual of any external equipment for connection procedures. connections are completed. CONNECTING A TV CABLE OR AN ANTENNA Antenna Connection The antenna requirement for good colour TV reception is more important than those for a black & white TV reception. For this reason, a good quality outdoor antenna is strongly recommended.

The following is a brief explanation of the type of connection that is provided with the various antenna systems. A 75-ohm system is generally a round cable (not included) with IEC-type connector that can easily be attached to a terminal without tools. IEC-type connector 75-ohm coaxial cable (round) A 300-ohm system is a flat twin-lead cable (not included) that can be attached to a 75-ohm terminal through a 300-75-ohm adapter (not included). 300-ohm twin-lead cable (flat) 11 Specifications Troubleshooting Using The DTV Features Using The Features Installing the LCD TV Introducing the LCD TV When connecting any external equipment, do not connect any AC power cords to wall outlets until all other Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 12 Connecting a TV Cable or an Antenna Cable TV (CATV) Connection A 75-ohm coaxial cable connector is built into the set for easy hookup. When connecting the 75-ohm coaxial cable to the set, connect the 75-ohm cable into the ANT. terminal. Some cable TV companies offer premium pay channels. Since the signals of these premium pay channels are scrambled, a cable TV converter/descrambler is generally provided to the subscriber by the cable TV company. This converter/descrambler is necessary for normal viewing of scrambled channels. (Set your TV to channel 3 or 4, typically one of these channels is used.

If this is unknown, consult your cable TV company.) For more specific instructions on installing cable TV, consult your cable TV company. One possible method of connecting the converter/descrambler provided by your cable TV company is shown in the diagram below. RF switch (not included) OUT A IN B 2-set signal splitter (not included) Cable TV Line VHF / UHF IN Cable TV converter/ descrambler (not included) The RF switch (not included) is required to provide two inputs (A and B). Setting the RF switch to position A allows viewing of all unscrambled channels by using the TV channel keys. Setting the RF switch to position B allows viewing of all scrambled channels via the converter / descrambler by using the converter channel keys. Connecting a TV Cable or an Antenna The STANDBY button on the right side view of LCD TV and also on the remote control is only used for powering up and switching the TV to standby mode, it does not disconnect the device from the mains supply. To completely disconnect the main voltage, please switch off the power switch on the rear of the TV, or remove the power plug from the socket. INPUT STANDBY Make sure the power switch is switched off Unplug from a wall outlet AC IN 100-240V 50/60Hz AC POWER SWITCH VHF/UHF IN PC AUDIO IN 13 Specifications Troubleshooting Using The DTV Features Using The Features Installing the LCD TV Introducing the LCD TV Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 14 Connecting a TV Cable or an Antenna Refer to the owner's manual of the external equipment to be connected.

When connecting external equipment, do not connect any AC power cords to wall outlets until you have completed all the connections.

Basic Connection: Connecting an aerial Make sure the power switch is switched off Unplug from a wall outlet AC IN 100-240V 50/60Hz AC POWER SWITCH VHF/UHF IN PC AUDIO IN Connects the supplied mains cable to this socket. TV Aerial Aerial/75-ohm coaxial input Connect your existing TV aerial to the Aerial input socket on the TV. The Aerial input socket can be connected with the ATV / DTV Aerial. Insert the supplied mains cable to the mains socket located on the rear of the TV. Connect the other end of this cable to a 3-pin mains socket.

Connect all AC power sources before turning on the power switch at the back of the TV. button on your remote to turn on your LCD TV. Press the STANDBY a. After connecting an aerial to your LCD TV and connecting the mains cable to the TV and mains socket, turn the POWER SWITCH of rear TV on, a red light will show on the front panel of the TV. b.

@@Make sure an aerial is fitted then press OK button on the remote to start the Auto Programme Scan (APS). 2. @@When APS is completed, BBC1 will show, press CH. buttons to view the other channels stored. c. 5 Press the INPUT button and choose TV or DTV mode then press OK to select. If you encounter problems receiving digital signals this may be due to having an inadequate aerial (you may have an old "Analogue" aerial). A replacement "Digital" aerial will be required, contact your local aerial installer for further information. Connecting a DVD Player AC IN 100-240V 50/60Hz AC POWER SWITCH VHF/UHF IN PC AUDIO IN Video Audio Audio (R) (L) A Video/Audio Cable B Pb Pr C D METHOD A (AV3) Use an A/V cable to connect the VCR's/ VIDEO camera's composite output sockets to your LCD TV. METHOD B (AV2) Use an Audio cable to connect the DVD's audio output sockets to your LCD TV.

Use a S-Video cable to connect your LCD TV and DVD player. METHOD C (AV1) Use a SCART cable to connect the DVD's SCART socket to the LCD TV's SCART socket. METHOD D (AV4) Use a Component cable to connect the (Y Pb Pr) sockets on the DVD player to your LCD TV. Use an audio cable to connect the DVD's audio sockets to your LCD TV.



[You're reading an excerpt. Click here to read official HITACHI HIT19WDVB user guide](http://yourpdfguides.com/dref/2814869)
<http://yourpdfguides.com/dref/2814869>

Connect all power sources before turning on the power switch of the LCD TV or other connected equipments. Press the STANDBY button to turn on your LCD TV. To watch DVD, press the INPUT button to select AV1, AV2, AV3, or AV4. 15 Specifications Troubleshooting Using The DTV Features Using The Features DVD PLAYER Installing the LCD TV Introducing the LCD TV Rear View of TV Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 16 Connecting a VCR & Video Camera Rear View of TV AC IN 100-240V 50/60Hz AC POWER SWITCH VHF/UHF IN PC AUDIO IN Video Audio Audio (R) (L) A Video/Audio Cable B C VCR PLAYER VIDEO CAMERA METHOD A (AV3) Use an A/V cable to connect the VCR's / VIDEO CAMERA's composite output sockets to your LCD TV. METHOD B (AV2) Use an Audio cable to connect the VIDEO CAMERA's audio output sockets to your LCD TV. Use a S-Video cable to connect your LCD TV and Video camera. METHOD C (AV1) Use a SCART cable to connect the VCR's SCART socket to the LCD TV's SCART socket. Connect all power sources before turning on the power switch of the LCD TV or other connected equipments. Press the STANDBY button to turn on your LCD TV. To watch video camera, press the INPUT button to select AV2 or AV3. 5 To watch VCR, press the INPUT button to select AV1 or AV3 .

Not all VIDEO CAMERA have the ability to connect to a TV. Please check your video camera user guide for compatibility. Connecting a TV Cable Box or Satellite Receiver Rear View of TV AC IN 100-240V 50/60Hz AC POWER SWITCH VHF/UHF IN PC AUDIO IN Video Audio Audio (R) (L) A Video/Audio Cable B C VGA CABLE D Pb Pr F HDMI CABLE E SATELLITE ANTENNA CABLE SATELLITE RECEIVER TV CABEL BOX Method A (AV3) : Use an A/V cable to connect the TV Cable Box's composite output sockets to your LCD TV. Method B (AV2) : Use an Audio cable to connect the TV Cable Box's audio output sockets to your LCD TV. Use a S-Video cable to connect your LCD TV and TV Cable Box. Method C (AV5) : Use a VGA 15 pins cable to connect the TV Cable Box's RGB output sockets to your LCD TV. Use a 3.5 mm socket to RCA adapter cable for connecting audio. Method D (AV1) : Use a SCART cable to connect the TV Cable Box's SCART socket to the LCD TV's SCART socket. Method E (AV4) : Use a Component cable to connect the Y / Pb / Pr sockets on the TV Cable Box to your LCD TV. Use an Audio cable to connect TV cable box's audio output sockets to LCD TV. Method F (AV6) : Use a HDMI cable to connect the Satellite Receiver HDMI connector to your LCD TV. Connect all power sources before turning on the power switch of the LCD TV or other connected equipments. Press the STANDBY button to turn on your LCD TV. To watch TV cable box, press the INPUT button to select AV1, AV2, AV3, AV4, or AV5.

5 To watch programs satellite receiver, press the INPUT button repeatedly to select AV6 . 17 Specifications Troubleshooting Using The DTV Features Using The Features Installing the LCD TV Introducing the LCD TV Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 18 Connecting an Audio Receiver For better sound quality, you may want to play the LCD TV audio through your stereo system. Rear View of TV AC IN 100-240V 50/60Hz AC POWER SWITCH VHF/UHF IN PC AUDIO IN Digital out Cable Use an audio cable to connect the audio receiver's audio LINE-IN sockets to LCD TV's DIGITAL OUT sockets (Only for DVB-T Input Source). Connect all power sources before turning on the power switch of the LCD TV or other connected equipments. Press the STANDBY button to turn on your LCD TV. HDMI How to connect If Source Devices have HDMI Output , connect to the HDMI socket located at the rear of the TV using the HDMI Cable supplied with your external device. (HDMI sends Digital Video and Audio with one cable.) Cable sample HDMI Cable (not supplied with the product) 19 Specifications Troubleshooting Using The DTV Features Using The Features Installing the LCD TV Introducing the LCD TV This TV can accept High-Definition Multimedia Interface (HDMI). This TV SET supports HDCP (High-Bandwidth Digital Content Protection) Protocol for TV SET (480p, 576p, 720p, 1080i) modes. When you connect to the output of an HD ready player (DVD Player, Set Top Box or PC) switch to the AV6 (HDMI) function and the TV will automatically detect the resolution used by the HDMI source.

To get the best picture quality, adjust the DVD Player or Set Top Box output resolution to 1280 x 720p. To get the best picture quality, adjust the PC graphics card to 1024 x 768, 60Hz. Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 20 Chapter 3 Using The Features BASIC OPERATION Tuning in the TV channels After connecting an aerial to your LCD TV and connecting the mains cable to the TV and 100-240 V AC mains socket, turn the POWER SWITCH of rear TV on, a red light will show on the front centre panel of the TV. @@@@When APS is completed, BBC1 digital TV will show, press the CH. buttons to view the other channels stored. @@Change channels by pressing the CH. buttons. @@@@Select TV Channel Press the CH. buttons on the remote control and the CH. buttons on the LCD TV to change the TV channels.

@@Adjusting the Volume Press the VOL. +/- buttons on the remote control or the VOL. +/- buttons on the LCD TV to adjust the volume. To Mute the Sound Press MUTE and the sound cuts off. @@+/- buttons. @@@Adjust Volume and Balance. @@@@The main menu will appear on the screen. @@buttons to highlight an option of the sub-menu. @@@Recommended for home entertainment. Vivid: Select for enhanced picture contrast and sharpness.

Mild: Select for mild picture settings. @@Adjust to increase or decrease the brightness. Allow to adjust the colour from 0 to 100. Allow you to adjust the colour tint of the picture. @@@@ (Only under the TV / SCART / S-Video / Video /DTV source) Allow you to adjust the (Dynamic Contrast Enhancement) to be Off, Low, Mid, or High. Allow you to turn on or off the Blue Stretch by choosing YES or NO. Choose YES to increase the blue colour intensity of the picture. Choose NO to keep the default blue colour intensity. Allow you to turn on or off the Green Stretch by choosing YES or NO. Choose YES to increase the green colour intensity of the picture.

Choose NO to keep the default green colour intensity. Allow you to adjust the Colour Temperature to be Cool, Warm, or Standard. DCE Colour Temp Blue Stretch Green Stretch Colour Temp AUDIO Use this AUDIO setting menu to adjust the Volume and Balance to your listening requirements.



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/2814869)

[HIT19WDVB user guide](http://yourpdfguides.com/dref/2814869)

<http://yourpdfguides.com/dref/2814869>

OPTION Volume Balance DESCRIPTION Preset the volume to a given setting. Adjust the balance of the left or right speaker.

OSD Menu Operation Setup menu is only available when viewing Analogue TV. Use this Setup menu to select Colour Standard, Sound Standard, APS, Manual Search, Channel Setup. Use the buttons to highlight the required setting. Press OK button to select the function. Use buttons to adjust the settings. Press OK button to save the adjustment. **OPTION Colour Standard Setup DESCRIPTION** Allow you to select the colour standard : AUTO / PAL/ SECAM (For TV mode and PAL is for the UK region.) AUTO/NTSC M/PAL/SECAM/NTSC443/ PAL60 (For AV1, AV2, and AV3) Allow you to select the sound standard : DK, BG, I, and L, L'. DK BG PAL D / K, SECAM D / K (East Europe / China) PAL B / G, SECAM B / G (Europe / East Europe / Asia / New Zealand / M.East / Africa / Australia) PAL I (U.K. / Ireland / Hong Kong / South Africa) SECAM L / L' (This feature is not available for this model.) APS Manual Search Channel Setup Sound Standard L/L' APS Manual Search Allow you to adjust the manual search by hand if signal is too weak or picture is blurry. Channel Setup Press the button to select Sort, Delete, Skip, Finetune, and Save. Setup Channel Setup Sort Delete Finetune Save Allow you to delete the stored programme.

Allow you to skip the stored programme. Allow you to finetune the stored programme. Allow you to save the setup. Skip Finetune Save 23 Specifications Troubleshooting Allow you to manually sort the stored programme. Using The DTV Features Start APS Press OK button to start Auto Search and auto sort process. Note: Auto Sort will only operate in the UK. Country Allow you to select the country: Austria, Belgium, Switzerland, Czech Rep., Germany, Denmark, Spain, France, Finland, UK, Greece, Hungary, Italy, Norway, Netherlands, Portugal, Poland, Sweden, Slovenia, Slovakia, Turkey, and Others. Using The Features I Installing the LCD TV Introducing the LCD TV SETUP (Analogue TV) Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 24 OSD Menu Operation PREFERENCES Use this Preferences setting menu to set up some features: OSD, Blue Screen, Childlock, Sleep Timer, OSD Timer, and OSD Reset. **OPTION OSD DESCRIPTION** Language : Allow you to select the OSD to be English / French / Italian / Danish / Finnish / Swedish / Greek / Polish / Czech / Hungarian / Norwegian. Transparency : Allow you to adjust transparency from 0 to 15. Allow you to select the blue screen to be off or on. Allow you to select the childlock to be yes or no. (Default password is 0000. Golden password is 3796(For Analogue TV only).

) Change Pin: Allow you to change the 4digit password. Allow you to select the sleep timer to be Off, 15 min, 30 min, or 60 min. Allow selection of the display time of the on-screen menu: 5s, 10s, 15s, 20s, and 25s. Allow you to restore the factory settings. Blue Screen Childlock Sleep Timer OSD Timer OSD Reset SCREEN(Only for VGA) **OPTION Horizontal Size Horizontal Position Vertical Position Phase Auto Sync DESCRIPTION** Allow you to adjust the Horizontal Size from 0 to 100.

Allow you to adjust the Horizontal Position of the picture. Allow you to adjust the Vertical Position of the picture. Allow you to improve focus clarity and image stability. Allow to auto synchronize VGA signal. Auto Sync Chapter 4 Using The DTV Features DTV SERVICES If you set DTV as your input source, but your local area does not have digital signal, the TV will display the DTV menu only. To leave the DTV menu, press VOL +/- buttons and then the INPUT button, you will then allow to choose the External Input in the Navigator menu. **OPTION Edit Favourite List Configuration DESCRIPTION** Create, modify or delete a favourite channel list. Channel Installation Allow to do the Channel Installation automatically and manually, and to detect new channels. Set the Audio and Subtitle language under User Settings. Allow to do System Upgrade, to view the System Information, and to reset Factory default setting.

Allow to view the signal quality of the selected channel. Press User Settings System Parameters Signal Information Parental Control Enable or Disable the menu protection system and allows the PIN code to be changed. EPG (Electronic Program Guide) Allow to view the 7-day programs forecast, and set the reminder for the favorite programs. **EDIT FAVOURITE LIST** Highlight the Edit Favourite List option, then press OK button to enter the menu, then you can create, modify, and delete a favourite channel list. There are three options in the menu. Edit favorite list C r eate a fav our ite list M odify a fav our ite list Delete a fav our ite list Confirm OK E XI T **CREATE A FAVOURITE LIST** Highlight the Create a Favourite List option, press OK button, then the menu and the quarter-screen image will display on the screen. Once you enter the Create a Favourite List menu, a new channel list will be created. You can create four favourite lists at most. 25 Specifications Troubleshooting Using The DTV Features Using The Features Installing the LCD TV Introducing the LCD TV Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 26 Using The DTV Features Create a favourite list 1 2 3 4 5 6 F AV 1 B B C O NE B B C TWO B B C THR EE C B B C C hannel B B C NEWS 24 BBCi L ock Sk ip E XI T Sor t M ov e Sk ip A dd A ll Ex i t Scr e e n You can lock or unlock the selected channel by pressing the RED button. By pressing the GREEN button you can skip the channel.

If you want to add back the skipped channel, press the GREEN button again. If you want to skip or add all, first press the BLUE button to skip all, then press the RED button to confirm. To add back all skipped channels, press the BLUE button again and press the GREEN button to confirm. The locked channels will have a lock icon (RED button) against the channel name; The added channels will have an add icon (tick) against the channel name. **MODIFY A FAVOURITE LIST** You can modify the favourite list which you have created.

The list named "TV/RADIO" is the default favourite channel list, and it cannot be modified or deleted. The rest are your created favourite list. Select a favourite list, then press OK button to modify the list. Modify a favourite list TV RA DI O F AV 1 F AV 2 F AV 1 B B C O NE B B C TWO B B C THR EE C B B C C hannel B B C NEWS 24 BBCi Modify a favourite list 1 2 3 4 5 6 L ock Sk ip E XI T Sor t M ov e Sk ip A dd A ll OK E XI T Ex i t Scr e e n (Note: Parental control should be activated to enable channel lock.) By pressing the YELLOW button you can sort the channels in the list. Press the RED button to sort the channels alphabetically or press the BLUE button to sort the channels manually.



You're reading an excerpt. [Click here to read official HITACHI](http://yourpdfguides.com/dref/2814869)

[HIT19WDVB user guide](http://yourpdfguides.com/dref/2814869)

<http://yourpdfguides.com/dref/2814869>

If you want to lock the channel, press the YELLOW button to lock the selected channel. Press the YELLOW button again to unlock the locked channel. If you have locked several channels, the locked channels will be placed at the bottom of the Channel list in alphabetical order. Modify a favourite list 1 2 3 4 5 6 FAV 1 BBC ONE BBC TWO BBC THREE CBBC CHANNEL BBC NEWS 24 BBCi Alphabetical sort Lock Unlock sort EXIT Cancel operation Move Using The DTV Features EXIT OK Enter PIN code On the programme screen, press the OK button to display the FAV menu. For the four FAV menus, the skipped channel name will not be shown unless you add it in the Create/Modify a Favorite List again. FAV2 1 3 4 BBC ONE BBC THREE TH BBC NEWS 24 BBCi OK EXIT DELETE A FAVOURITE LIST Use the buttons to highlight the list name which you want to delete, then press the OK button to delete the favourite list, the pop-up menu will ask you to confirm or cancel the delete operation. (Note: You can only delete the list you created and not the default favourite channel list.) You are going to remove the favourite list press OK to confirm. EXIT OK 27 Specifications Troubleshooting Delete a favourite list Using The DTV Features Using The Features Installing the LCD TV Once the channel is locked, you must enter the PIN Code that is previously set in the Parental Control menu in order to display the channel again.

Otherwise, the menu will pop-up and request to enter the PIN-code again. Introducing the LCD TV When you have completed the edit, press the EXIT button to leave the Modify a Favourite list menu. The pop-up menu will ask whether you want to save the changes you have made. Use the buttons to highlight YES option, and press the OK button to save the changes. (Note: You can only edit four favourite channel lists at most.) Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 28 Using The DTV Features CONFIGURATION Highlight the Configuration option in the DTV menu, then press OK button to enter the selected option. The Configuration menu will display as display as following: Configuration Channel Installation User Settings System Parameters Signal Information Confirm OK EXIT CHANNEL INSTALLATION Use these options (Channel Installation (auto), Channel Installation (manual), and New Detected Channels) if you have moved to another location or want to rescan for new channels. OK EXIT CHANNEL INSTALLATION (AUTO) If you want the TV to do auto search for the channels, use the buttons to highlight the Channel Installation (auto) and press OK button to confirm. You can choose the installation type by using the buttons. Press the OK button to start the installation process.

If you choose 'Add', the new channels will be added in the channel list. If you choose 'New', the new channels will replace the previous channels in the channel list. Full scan channels in station Channel Installation Channels found: CBBC Channel BBCi BBC NEWS 24 BBC THREE 6 Installation type Add BBC TWO BBC ONE Scanning in progress Signal quality OK EXIT EXIT Using The DTV Features PIN code change Channel Installation (manual) Channel 22 Quality OK EXIT Use the buttons to choose the channel, the bar graph of signal quality will indicate whether the channel is likely to be found. You should choose the channel of which the signal quality bar is high, then press the OK button to scan the channel. Full scan channels in station Channels found: CBBC Channel BBCi BBC NEWS 24 BBC THREE BBC TWO BBC ONE Scanning in progress Signal quality 6 Channel Installation Installation completed Please wait

.. " will display on the screen. Full scan channels in station Channels found: 0 Channel Installation Installation failed Please wait Scanning in progress Signal quality EXIT 29 Specifications Troubleshooting Using The DTV Features Using The Features NEW DETECTED CHANNELS Use the buttons to highlight New Detected Channels in the Channel Installation menu, press OK button to confirm. The TV will start searching the programmes, and the programme names will be listed and started.

Once the scanning is completed, the message " Installation completed. Please wait..." will display on the screen. Installing the LCD TV Introducing the LCD TV CHANNEL INSTALLATION (MANUAL) If you want to install the channels by yourself, use the buttons to highlight the Channel Installation (manual) option, and press OK button to install manually. First, you should choose the installation type, then you will see the following menu. Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 30 Using The DTV Features After you added the new channel, use the buttons to highlight the New Detected Channels menu and press OK button to confirm. It will display the following menu. The New Detected Channels menu shows the channels that you add in the channel list recently.

The type icon of the program is displayed against the channel name. EXIT USER SETTING Use the buttons to highlight the User Settings option in the Configuration menu, then press the OK button to display the User Settings menu. Configuration Channel Installation User Settings System Parameters Signal Information OK EXIT AUDIO LANGUAGE This function allows you to select which language you will hear when switching to a channel that has multiple language soundtracks. Use the buttons to choose among the language options, and press the OK button to confirm. SUBTITLE LANGUAGE This function allows you to select the desired subtitle language whenever the subtitle information is available. Use buttons to choose among the language options, and press the OK button to confirm. SYSTEM PARAMETERS Use the buttons to highlight System Parameters in the Configuration menu, then press the OK button to display the System Parameters menu. Configuration System Parameters Channel Installation User Settings System Parameters Signal Information System Upgrade System Information Factory Reset OK EXIT OK EXIT Using The DTV Features System Parameters System Upgrade Configuration System Upgrade System Information Factory Reset Do you want to upgrade your software? Yes EXIT OK OK EXIT EXIT SYSTEM INFORMATION Highlight the System Information option in the System Parameter menu, and press OK button to display the System Information menu.



[You're reading an excerpt. Click here to read official HITACHI HIT19WDVB user guide](http://yourpdfguides.com/dref/2814869)
<http://yourpdfguides.com/dref/2814869>

You can view the system information in this menu; however, you can modify nothing in this menu. Press OK button to exit from the menu. System Parameters System Information Confirmation Device Software Version iDTV5105 Plug in UK_20070403 System Upgrade System Information Factory Reset Highlight the Factory Reset option in the System Parameter menu, and press OK button to display the Re-installation Confirmation menu. This function allows you to reset the DTV configuration back to factory default setting. Use the buttons to highlight the YES/NO option, and press OK button to confirm. System Parameters Re- installation confirmation System Upgrade System Information Factory Reset Warning all settings including previously stored TV channels will be erased DTV Do you want to proceed Yes OK EXIT OK EXIT 31 Specifications Troubleshooting Using The DTV Features Using The Features Installing the LCD TV Introducing the LCD TV SYSTEM UPGRADE Highlight the System Upgrade option in the System Parameter menu, and press OK button to display the System Upgrade menu. Use buttons to choose YES/NO for software upgrade, press OK button to confirm or EXIT button to exit the menu screen.

Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 32 Using The DTV Features SIGNAL INFORMATION Highlight the Signal Information option in the Configuration menu, press OK button to display the Signal Information menu. Cycle through the channel options by pressing the buttons on the remote control. The bar graph of signal quality will give a good indication on whether the selected channel is likely to be found. If the signal quality bar is high, then the digital frequency and digital channel are likely to be found as well. Configuration Signal Information Channel Installation User Settings System Parameters Signal Information

OK EXIT EXIT PARENTAL CONTROL Highlight the Parental Control option in the DTV menu, then press OK button to enter the selected option. The Parental Control menu will display as following: DTV User Settings Content Restrictions Parental Control Audio Language Subtitle Everlock Rec Language Subtitle Display Configuration Menu Dolby Digital Channel Level Pac ity lock Antenna Power Maturity level Enable d Yes Yes Yes None Confirm PIN code change OK EXIT Highlight the Parental Control option in the Parental Control menu and use the buttons to choose the Enable or Disable option. Set this option to enable, and the following items (eg. Receiver Lock, Configuration Menu, Channel Lock, and Maturity Level) can be altered. RECEIVER LOCK Use the buttons to choose between YES and NO. If you choose YES option and press OK button to confirm, you will need to enter the PIN CODE before you can see the DTV program again. (Note: The default PIN Code is 0000. If you forget the PIN CODE, please press RED RED, GREEN GREEN, YELLOW YELLOW, BLUE BLUE buttons for super code.) Parental Control receiver Parental Control Everlock Configuration Menu Channel lock Maturity level Enable d Yes Yes Yes None EXIT PIN code change OK EXIT Using The DTV Features DTV Parental Control Use the buttons to choose between YES and NO. If you choose the YES option, the channels you locked in the edit channel list menu cannot be displayed until you enter the PIN CODE. DTV Parental Control receiver Parental Control Everlock Configuration Menu Channel lock Maturity level Enable d Yes Yes Yes None EXIT PIN code change OK EXIT CHANNEL LOCK Use the buttons to choose between YES and NO. If you choose the YES option, the channels you locked in the edit channel list menu cannot be displayed until you enter the PIN CODE. DTV Parental Control receiver Parental Control Everlock Configuration Menu Channel lock Maturity level Enable d Yes Yes Yes None PIN code change OK EXIT MATURITY LEVEL There are 18 levels total, and you can choose this option from 1 to 18.

For example, 15: If the channels broadcast material that is not suitable for viewers under 15 years old, you must enter the PIN CODE before you can view them (Please refer to the broadcast channel for the program's maturity level information). If you choose NONE, you can view all the maturity levels programs, and there is no need to enter PIN code. DTV User Settings Content Restrictions Parental Control Audio Language Subtitle Everlock Rec Language Subtitle Display Configuration Menu Dolby Digital Channel Level Pac ity lock Antenna Power Maturity level Enable d Yes Yes Yes None PIN code change OK EXIT PIN CODE CHANGE Press OK button to exit the Parental Control menu and save these alteration. Press EXIT button to exit the Parental Control menu without saving these alteration. DTV User Settings Content Restrictions Parental Control Audio Language Subtitle Everlock Rec Language Subtitle Display Configuration Menu Dolby Digital Channel Level Pac ity lock Antenna Power Maturity level Enable d Yes Yes Yes None PIN code change OK EXIT 33 Specifications Troubleshooting Using The DTV Features Using The Features Installing the LCD TV Introducing the LCD TV CONFIGURATION MENU Use the buttons to choose between YES and NO. If you choose the YES option, you will need to enter the PIN CODE before re-entering the Configuration menu. Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 34 Using The DTV Features Press the RED button will to pop-up the PIN code change menu. Enter the previous code by using the 0-9 buttons on the remote control, then enter the new code twice to confirm. This menu will disappear. Press EXIT to quit without saving the new code.

EXIT EPG EPG (Electronic Programme Guide) menu can be accessed by pressing GUIDE button, and can be quitted by pressing GUIDE button again. Highlight the EPG option in the DTV menu, then press OK button to enter the EPG menu. Press the EXIT button to exit the EPG menu. DTV User Settings Content Restrictions Parental Control Audio Language Subtitle Everlock Rec Language Subtitle Display Configuration Menu Dolby Digital Channel Level Pac ity lock Antenna Power Maturity level Enable d Yes Yes Yes None PIN code change OK EXIT 33 Specifications Troubleshooting Using The DTV Features Using The Features Installing the LCD TV Introducing the LCD TV CONFIGURATION MENU Use the buttons to choose between YES and NO. If you choose the YES option, you will need to enter the PIN CODE before re-entering the Configuration menu. Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DTV Features Troubleshooting Specifications 34 Using The DTV Features Press the RED button will to pop-up the PIN code change menu. Enter the previous code by using the 0-9 buttons on the remote control, then enter the new code twice to confirm. This menu will disappear. Press EXIT to quit without saving the new code.



[You're reading an excerpt. Click here to read official HITACHI HIT19WDVB user guide](http://yourpdfguides.com/dref/2814869)
<http://yourpdfguides.com/dref/2814869>

Do not connect the TV to the mains supply until you have completed all the connections.

If you have a SCART lead, connect one end of the lead to the SCART socket on your VCR and connect the other end to the SCART socket marked SCART on the back of your TV. AC POWER SWITCH VHF/UHF IN B GB Other connections Connect one end of another RF lead to the aerial socket marked RF IN on your VCR and the other end to the socket marked RF OUT on the back of your Satellite/Cable box. PC AUDIO IN B PLEASE NOTE: By using a SCART lead (not supplied) you can improve the quality of playback and sound. Remember you must still have the aerial lead (not supplied) connected. If you are using a SCART lead you should not have to tune your TV to your video, instead select the SCART channel by pressing the TV/SCART button on the remote control. Connect one end of the RF lead to the aerial socket on your TV and the other end to the socket marked RF OUT on the back of your VCR. AC IN 100-240V 50/60Hz AC POWER SWITCH VHF/UHF IN PC AUDIO IN D A A VCR C Connect your aerial lead to the socket marked RF IN on the back of your Satellite/Cable box. C Connect your aerial lead to the socket marked RF IN on the back of your VCR. B C B C Satellite/Cable Box D If you have SCART leads connect one end to the socket marked SCART on the back of your TV, and connect the other end to the SCART socket on the back of your VCR. Now go to stage 4.

Now go to stage 4. 1 Insert batteries into Remote Control 4 Use 2 x AAA size batteries. Switch on 5 INPUT Select & Start the APS menu Region Confirm Country UK Start APS 2 OK: Start Searching AC IN 100-240V AC POWER AC IN 100-240V AC POWER 50/60Hz SWITCH 50/60Hz SWITCH VHF/UHF IN VHF/UHF IN Connect aerial A B C PC AUDIO IN PC AUDIO IN Is aerial plugged in Press OK to start APS Press MENU to exit APS Do not connect the TV to the mains supply until you have completed all the connections. If you just want to connect your TV to an aerial connect it as shown opposite. If you want to connect your TV to a VCR go to stage 3a.

If you want to connect your TV to a VCR and a Satellite/Cable box then go to stage 3b. AC IN 100-240V 50/60Hz AC POWER SWITCH VHF/UHF IN Plug your TV and any other equipment that you have connected into the mains. Connect one end of the aerial lead to the aerial socket on the wall and the other end of the lead to the appropriate socket on the back of your TV. Now go to stage 4. Press the AC SWITCH on the back of your TV to switch on your TV's power.

A B C D Turn on the TV. The main menu will appear automatically (as shown above). Then press the screen. button on the right side view of your TV to switch on your TV. The screen will be blue Press to select Country, then press OK to enter menu option. PC AUDIO IN Note: It is recommended to complete the VCR channel set up before the TV tuning process. Connect your VCR to the TV and the antenna, then switch it on. Insert a pre-recorded tape and press PLAY. This can help you to easily find the VCR channel as it will play the pre-recorded tape. Before you start up the TV tuning process, the Satellite/Cable channel set up are recommended to complete prior to the TV tuning process.

Connect your Satellite/Cable box to the TV and the antenna, and then switch it on. Select a channel that you will easily recognise. @@@@Please be patient, the tuning process may take a few minutes. @@Connected your TV to an aerial or VCR and/or VCR Satellite/Cable box. @@Press the MENU button on the remote control to return to the CHANNEL SETUP. Press Press to select the SKIP, press OK to enter menu option. to select the channel, press OK to skip the selected channel. RCT-1522 Press to select SETUP. Press SETUP. to select CHANNEL SETUP, press OK to enter CHANNEL B C Press to select SORT, press OK to display the menu (as shown above).

RCT-1522 Tuned in Channel Channel Channel Channel Channel Channel Channel all available channels. 1

..... BBC1 2

..... BBC2 3 .

.....
.....
... ITV 4

..... CH4 5 ...

.....
.....
. CH5 6

..... Satellite/Cable 7

.....
.... VCR Press to select the channel, press OK to sort the channel.

8 A B C Deleting a channel 9 A B DTV Scan channel Basic functions 1 After connecting the aerial to your LCD TV and connecting the mains cable to the TV and mains socket, press AC SWITCH on the rear panel of the TV. 2 A red LED indicator will show on the front panel of the TV. 3 Press the STANDBY button, and the red LED indicator will change to green. 4 To power off, press the STANDBY button again, and the green LED indicator will change to red. In the interests of safety and to avoid unnecessary energy consumption, never leave your TV in standby while unattended for long periods of time, eg. overnight, while on holiday or while out of the house. Full sca n cha nne ls insta lla tio n Cha nne ls fo und 0 Sca nning in pr o gr e ss Signa l qua lity EXIT Changing channels Press the NUMBER buttons to go directly to a channel e.g. press the number 1 button to go to channel 1. For a channel number above 9, for instance, channel 12 press the number 1 button quickly followed by the number 2 button.

To move up and down the channels in order press the CH. or CH. button. Adjusting the volume Press the VOL.+ button to increase the volume. Press the VOL. - button to decrease the volume. Selecting Teletext Press the button to select Teletext. Press button again to select MIX. This will let you read the Teletext and still see the picture on your TV.

The third time that you press the button, symbol on the product or in the instructions means that your This text will clear from the screen. electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product. RCT-1522 Press the MENU button on the remote control to return to the CHANNEL SETUP.

Press Press to select the delete, press OK to enter menu option. When the APS process has finished, The DTV scan channel menu will appear (as shown above). The TV will automatically search and sort the channel. to select the channel, press OK to be deleted. Your TV is now fully tuned in, and ready to watch.

Note: If you encounter problems receiving digital signals this may be due to having an inadequate aerial (you may have an old "Analogue" aerial). A

replacement "Digital" aerial will be required, contact your local aerial installer for further information. RCT-1522 This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.



[You're reading an excerpt. Click here to read official HITACHI
HIT19WDVB user guide
http://yourpdfguides.com/dref/2814869](http://yourpdfguides.com/dref/2814869)