




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI KC1105D. You'll find the answers to all your questions on the HITACHI KC1105D in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI KC1105D
User guide HITACHI KC1105D
Operating instructions HITACHI KC1105D
Instructions for use HITACHI KC1105D
Instruction manual HITACHI KC1105D

Instruction Manual
KC 1105D
DAB/FM/ CD Alarm Clock Radio

Hitachi
Living Systems

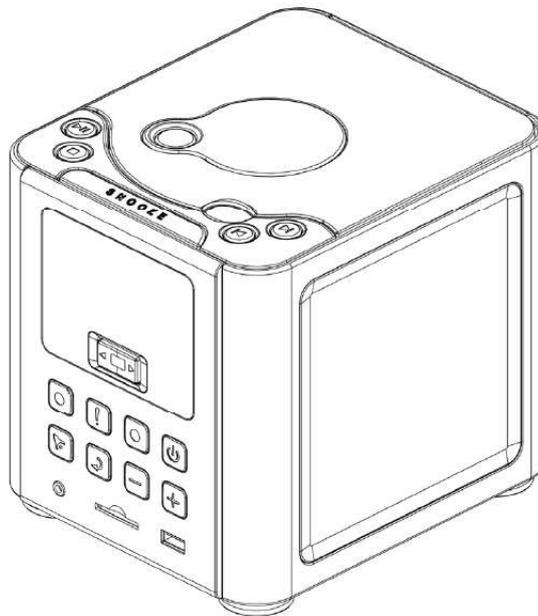

[You're reading an excerpt. Click here to read official HITACHI KC1105D user guide](http://yourpdfguides.com/dref/2814931)
<http://yourpdfguides.com/dref/2814931>

Manual abstract:

Important Notes This safety and operating instruction should be retained for future reference. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus. Avoid installing the unit in locations described below: o Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters. o On top of other stereo equipment that radiate too much heat. o Places blocking ventilation or dusty places. o Places subject to constant vibration. o Humid or moist places. No naked flame sources such as lighted candles should be placed on or near the unit; Please dispose of batteries in an environmentally friendly manner. Make sure not to obstruct the ventilation openings, minimum 10cm should be kept around the apparatus for ventilation. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains, etc. The use of apparatus in moderate climates.

Operate turning controls and switches as instructed in the manual. Before turning on the power for the first time, make sure the power cord is properly installed. For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel. Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside, refer all servicing to qualified service personnel. **CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

DANGEROUS VOLTAGE Dangerous Voltages, that may be of sufficient magnitude to constitute a risk of electric shock to persons is present within this product's enclosure. @@@@Note: This unit will become warm when used for a long period of time. @@@@DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections. DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DON'T remove any fixed cover as this may expose dangerous voltages. **DON'T** obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment. **DON'T** allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the equipment. **DON'T** place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires. **DON'T** use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. **DON'T** listen to headphones at high volume, as such use can permanently damage your hearing. **DON'T** leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation. Switch off using the switch on the equipment and make sure that your family knows how to do this.

Special arrangements may need to be made for infirm or handicapped people. **DON'T** continue to operate the equipment if you are in any doubt about it working normally or if it is damaged in any way, switch off, withdraw the mains plug and consult your dealer. Caution: The power adaptor has a removable plug, please handle with care. Caution: The power adaptor will still be supplying power to the unit when connected, even if the unit appears to be off. The power adaptor must be removed from the mains socket to power off completely. @@@@Press the SELECT button to select the chosen station. @@@@Press MENU button first, then Press < or > button 2. The display will show "press SELECT to confirm reset..."

3. @@@@To change frequency you press and hold the < or > buttons. 2. To search the next active station, press the SCAN button.

Press the > button to scan up through the frequency band. @@To store the current station: 1. @@@@Press < or > button until the name of the option is displayed. 2. @@Fav.

@@1. @@2. @@Display all stations in alphanumeric order. @@Remove inactive stations from the station list. 14 Dynamic Label Segment (DLS): This is scrolling te3/WMA can also using the BACK and NEXT button. 20 Playing a USB Note 1: For your USB devices, please make sure they are charged before connecting to the unit. Otherwise, it may not be detected. Backup your data on this device, then it will be work normally. Note 2: In all play mode, if the filename is not in English, the international character for MP3/WMA tracks replaced with "-". Note 3: Some USB devices may be incompatible.

1. Press the FUNCTION button to select USB mode. 2. Insert the USB Flash disk into the USB socket. During MP3/WMA playback the screen displays folder number, file number and the elapsed time on the display top line and scrolling file information (ID3/ASF text) where available. File name, Album, Title and Artist are located at the bottom. In STOP mode, the total number of folders and files on the disc are also displayed. 21 Play and Pause 1. In STOP mode, press button to begin CD playback. 2.

During CD playback, press to pause playback. Press again to resume. Skip and Search 1. Single Press (Skip Down) or (Skip Up) once to jump to previous or next track. 2.

Press and hold of skip button fast forward or fast rewind of current track to jump to next or previous folder when using an MP3/WMA CD, USB device or SD card. Note 1: In MP3/WMA mode, you can also use the BACK and NEXT button, to go to previous or next folder. Note 2: The SKIP Up/Down and Folder Up/Down are only available on MP3/WMA/CD Playback mode. Stop Playback Press button to stop playback. Playback Mode Press REPEAT button repeatedly to select among: Repeats current track FOLDER-Repeats all files in the current folder.

(MP3/WMA only) ALL-Repeats the entire disc. 22 Setting the Clock 1. Press the MENU button, choose Set Clock, and press the SELECT button. 2. Press < or > button to set the hour. Press the SELECT button to confirm. 3. Press < or > button to set the minute. Press the SELECT button to confirm. 4.

Press < or > button to set the day. Sun, Mon, Tue, Wed, Thu, or, and Sat. Note: The time will keep changing to the correct time, while listening to a DAB station, even if it is changed manually. 23 Setting the Alarm 1. Press the ALARM button and then press the < or > button to select Alarm 1 or Alarm 2 settings. Press the SELECT button. or 2. The Set Alarm option is being displayed. Press the SELECT button. 3.

Press the < or > button to enable or disable the alarm. Press the SELECT button to confirm.



[You're reading an excerpt. Click here to read official HITACHI](#)

[KC1105D user guide](#)

<http://yourpdfguides.com/dref/2814931>

icon will display if it is enabled. or 24 4. Press the SELECT button to set the Time.

5. Press the < or > button to set the hour. Press the SELECT button to confirm. 6. Press the < or > button to set the minute.

Press the SELECT button to confirm. 7. Press the SELECT button to set the Alarm mode. 8. Press the < or > button to change the Alarm mode.

DAB/FM/CD/USB/SD Card/Buzzer are available. Press the SELECT button to confirm. 9. Press < or > button to display Set days. Then, press the SELECT button to set the days.

25 10. Press the < or > button to change Alarm days. Once/Daily/Weekday/weekend are available. Press the SELECT button to confirm. 11. Press Alarm or Standby button to deactivate the Alarm function. Note: 1. The Alarm volume level is default to 10 no matter what the volume has been set to. 2. Ensure that a CD, SD/MMC card or USB device with music files is inserted when selecting either of these modes.

3. Some USB devices may not support in Alarm mode. 4. If the unit does not find a DAB signal, CD, USB device, or SD card, the unit will default as buzzer.

26 Snooze Button When alarm time is up, the screen will be highlighted and blinking.

1. Press the SNOOZE button, and turn the alarm off for 9 minutes. 2. @@@@Press the MENU button. @@@@Press the SELECT button to confirm.

28 Specification General: Audio Output: Frequency Ranges: Antenna: Input Connectors: Output Connectors: LCD Display: Power Supply: Dimension Stereo DAB and FM radio with full Band III reception. CD/SD/USB-MP3/WMA Playback 2W x 2 rms (10% THD) (8ohm) DAB Band III (174 - 240 MHz) FM (87.5 - 108 MHz) Wire antenna DC power socket 3.5mm stereo headphone socket (32 ohm) High resolution display 9V dc 1500mA (AC/DC adaptor supplied)

155mm x183mm x171mm Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories in stock we can deliver direct to your door the very next day. Visit www.partmaster.co.

uk or call 0870 6001 338 (UK customers only) Calls charged at National Rate. For product help or out-of-guarantee support: Dixons customers please call: 08701 54 55 60 Currys customers please call: 08701 54 55 70 (all calls charged at national rates) This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product. 29 .



[You're reading an excerpt. Click here to read official HITACHI](#)

[KC1105D user guide](#)

<http://yourpdfguides.com/dref/2814931>