




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI L19H01UB. You'll find the answers to all your questions on the HITACHI L19H01UB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI L19H01UB
User guide HITACHI L19H01UB
Operating instructions HITACHI L19H01UB
Instructions for use HITACHI L19H01UB
Instruction manual HITACHI L19H01UB

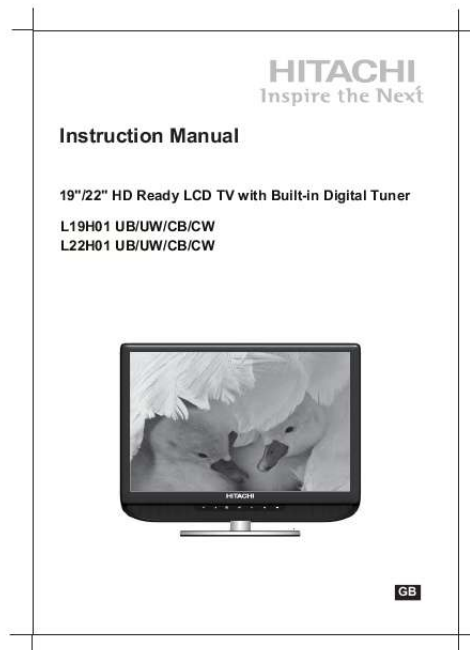

[You're reading an excerpt. Click here to read official HITACHI L19H01UB user guide](http://yourpdfguides.com/dref/1274220)
<http://yourpdfguides.com/dref/1274220>

Manual abstract:

-----DON'T remove any fixed cover as this may expose dangerous voltages. DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment. DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the equipment. DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires. DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. DON'T listen to headphones at high volume, as such use can permanently damage your hearing. DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation. Switch off using the switch on the equipment and make sure that your family knows how to do this.

Special arrangements may need to be made for infirm or handicapped people. DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer. ABOVE ALL NEVER let anyone especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electric shock NEVER guess or take chances with electrical equipment of any kind...

it is better to be safe than sorry! Note: This product is exclusively available through Dixons Stores Group. In the unlikely event of a problem with your product please return to the store where your purchase was made. 1 Specifications Troubleshooting Using The TV Features Using The Features Installing the LCD TV Introducing the LCD TV Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The TV Features Troubleshooting Specifications Safety Warnings Power Source The TV set should be operated only from a 100-240V~, 50/60Hz outlet. Ensure that you select the correct voltage setting for your convenience. Power Cord Do not place the set or a piece of furniture on the power cord (mains lead) or pinch the cord. Handle the power cord by the plug. Do not unplug the appliance by pulling from the power cord and never touch the power cord with wet hands, as this could cause a short circuit or electric shock. Never make a knot in the cord or tie it with other cords. Power cords should be placed in such a way that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electric shock. If it becomes damaged and needs to be replaced, it should be done by qualified personnel. an electric heater. Ensure that no open flame sources, such as lighted candles, are placed on top of the TV. Batteries should not be exposed to excessive heat such as sunshine, fire or the like. Lightning In case of storm and lightning or when going on holiday, disconnect the power cord from the wall outlet.

Replacement Parts When replacement parts are required, make sure that the service technician has used replacement parts, which are specified by the manufacturer or have the same specifications as the original one. Unauthorized substitutions may result in fire, electrical shock or other hazards. Servicing Please refer all servicing to qualified personnel. Do not remove the cover yourself as this may result in an electric shock. Waste Disposal Instructions for waste disposal: Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bags, must be kept away from children. Batteries, including those, which are heavy metal-free, should not be disposed of with household waste. Please dispose of used battery in an environment friendly manner. Find out about the legal regulations, which apply in your area. The cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury; please follow the local laws or regulations for disposal.

Disconnecting the Device The mains plug is used to disconnect TV set from the mains and therefore it must remain readily operable. Moisture and Water Do not use this device in a humid and damp place (avoid the bathroom, the sink in the kitchen, and near the washing machine). Do not expose this device to rain or water, as this may be dangerous and do not place objects filled with liquids, such as flower vases, on top. Avoid from dripping or splashing. If any solid object or liquid falls into the cabinet, unplug the TV and have it checked by qualified personnel before operating it any further.

Cleaning Before cleaning, unplug the TV set from the wall outlet. Do not use liquid or aerosol cleaners. Use soft and dry cloth. Ventilation The slots and openings on the TV set are intended for ventilation and to ensure reliable operation. To prevent overheating, these openings must not be blocked or covered in anyway.

Heat and Flames The set should not be placed near to open flames and sources of intense heat such as 2 Contents Preparation

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

. 1 Safety Warnings

.....

.....

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *1 Chapter 1 Introducing the LCD TV*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *Package Contents* ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *Setting Your LCD TV*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
..... *Your LCD TV*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *Remote Control*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

Chapter 2 Installing the LCD TV

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

Connecting a TV Cable or Anterial

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *Connecting a DVD Player ...*

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....

.. *Connecting a VCR ...*

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *Connecting a TV box or satellite Receive .*

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *Connecting an Audio Receiver ..*

.....
.....
.....

.....
.....
.....

.....

.....
.....
.....
..... *HDMI*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. *Using Conditional Access Module (CAM)*

.....
.....
.....
.....

.....
.....
.....
.....

.... *Chapter 3 Using The Features* .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *Basic Operation* .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

OSD Menu Operation

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....

... The Audio Settings

.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

..... The Picture Setting ..

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....

.... The Setup Settings

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.... *The Option Setting* .

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

Chapter 4 Using The TV Features 4 4 5 6 9

.....

.....
.....
.....
.....

.....
.....
.....
.....

. 25 25 26 27 28 29 *EPG (TV guide)*

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

..... *Channel Installation*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. *Child Lock*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... *Channel Edit*

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

CI Information

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
Troubleshooting

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
30 Specifications

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
... 31 Key Features ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....

 .. 31 Display Modes ..

.....

.....

 .. 32 Specifications ..

.....

.....

.....

.. 33 3 Specifications Troubleshooting Using The TV Features Using The Features 20 20 21 21 22 23 24 Installing the LCD TV 11 11 14 15 16 17 18 19
 Introducing the LCD TV Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The TV Features
 Troubleshooting Specifications Chapter 1 Introducing the LCD TV Package Contents Make sure all of the following contents are included. LCD TV Bottom
 Stand (P.N.
 : FAEBAC05013) Remote Control/ AAA Batteries x 2 Power Cord (for UK model) (for EU model) EJECT DVD MENU TEXT DVD ZOOM AUDIO REPEAT
 ANGLE TITLE (P.N.: DQ795800202) (P.N.: DM333181J45) (P.N.: DM33B181009) LHD01 Screws/zipper bag User's Manual Quick Start Guide Instruction
 Manual Widescreen LCD TV With Intergrated Digital Tuner L19H01 UB/UW/CB/CW L22H01 UB/UW/CB/CW GB (P.N.: HADK9006029) (P.N.
 : HDE9AC02016) (P.N.: HDE9AC02016) These items are all you need to set up and operate the LCD TV i Make sure all of the following contents are
 included.



You're reading an excerpt. Click here to read official HITACHI
[L19H01UB user guide](#)
<http://yourpdfguides.com/dref/1274220>

If there are any missing item, please return this product to the original place of purchase. 4 Setting Your LCD TV Ensure the TV stand is still attached with the bottom foam packaging material in the package. Read all instructions before continuing with the stand installation. a. Open the box, and make sure all necessary parts are in the box. The package contains: LCD TV STAND b. Peel off/ remove the plastic film before installing the TV stand.

c. Cover an even stable surface with a soft cloth. Place the LCD TV unit face-down on the cloth. Fit the stand onto the bottom of the LCD TV unit as shown:
d. Then push until stand into the LCD TV's stand socket.
x 3 pieces e. Attach the base to the TV stand with the 3 screws that are provided and ensure that they are tightened. 5 Specifications Troubleshooting Using The TV Features Using The Features Installing the LCD TV Introducing the LCD TV How to install the TV Stand Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The TV Features Troubleshooting Specifications; HDMI2-> VGA 6 SLEEP 7 WIDE ZOOM AUDIO DVD SUBTITLE Select the view mode: 16:9, Automatic, Full Screen, 4:3 8 0-9 REPEAT ANGLE TITLE Select and switch to a channel by using 0-9 buttons. 9 P.P Return to last source or TV program Display the favorite list menu LHD01 10 FAV 11 VOL.

+/- Increase and decrease volume. 12 CH. Change the channels up and down. 13 AUDIO Change the audio language or audio channel. 14 MUTE Mute and restore your LCD TV sound. 15 MENU Display the OSD menu on the screen. 16 CH.LIST Display the channel list menu. 9 Specifications Troubleshooting Using The DVD Features Using The Features Cycle through the LCD TV sleep timer: OFF, 30, 60, 90 or 120 mins. Installing the LCD TV 3 Introducing the LCD TV Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The DVD Features Troubleshooting Specifications Your Remote Control Your Remote Control 17 OK The TV navigation buttons allow you to move, select a variety of information such as the current channel and the input source.

18 EPG Turn EPG on/off. 19 EXIT Exit the OSD menu (On Screen Display). 20 Access the TELETEXT items or correspond to the differently coloured page numbers. 21 INDEX / REVEAL / HOLD / SIZE 17 18 19 20 21 22 TEXT MIX INDEX Display the main index in Teletext mode. REVEAL Reveal hidden information such as the answer to a quiz in Teletext mode. HOLD To hold the Teletext page when viewing multi-page information. Press Hold again to return to automatic page update. SIZE Display the top, bottom or all of page to easily read in Teletext mode. 22 TEXT ZOOM AUDIO 23 REPEAT ANGLE 24 / SUB PAGE / SUBTITLE / MIX LHD01 TEXT Turn Teletext On / Off or Run/Terminate MHEG application. SUB PAGE Select the sub-page directly in Teletext mode.

SUBTITLE Press the SUBTITLE button to display the subtitle which is broadcast with the program on the screen. MIX Turn Teletext in MIX mode. 23 24 This function is not available for this model. Effective range: The remote can control the LCD TV from up to 5m away when pointed directly at the receiver. 10 Chapter 2 Installing the LCD TV Connecting a TV Cable or an Antenna Refer to the owner's manual of any external equipment for connection procedures. When connecting any external equipment, do not connect any AC power cords to wall outlets until all other connections are completed. Cable TV (CATV) Connection Some cable TV companies offer premium pay channels. Since the signals of these premium pay channels are scrambled, a cable TV converter/descrambler is generally provided to the subscriber by the cable TV company. Your cable TV provider will advise you on how to connect the cable TV box to your TV. 11 Specifications Troubleshooting Using The TV Features Using The Features Installing the LCD TV Introducing the LCD TV Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The TV Features Troubleshooting Specifications Disconnecting from the Mains The STANDBY button on the front view and also on the remote control is only used for turning on the TV to standby mode, it does not disconnect the device from the mains supply.

To completely disconnect the main voltage, please switch off the power switch on the rear of the TV, or remove the power plug from the socket. STANDBY AC IN Unplug from a wall outlet ON/OFF SWITCH AC IN 12 Connecting a TV Cable or an Antenna Basic Connection: Connecting an aerial Connect the AC IN socket at back of the TV. AC IN Unplug from a wall outlet ON/OFF SWITCH TV Aerial Aerial/75-ohm coaxial input Connect your existing TV aerial to the Aerial input socket on the TV. The Aerial input socket can be connected with the ATV/DTV Aerial. A good quality outdoor aerial is recommended. Insert the supplied mains cable to the mains socket located on the rear of the TV. Connect the other end of this cable to the mains socket. Connect all AC power sources before turning on the power switch at the back of the TV. Turn the POWER SWITCH of rear TV on, and the red light will show on the front panel of the TV. Press the STANDBY button on your remote to turn on your LCD TV.

The red light will change to blue light. a. Press MENU button on the remote to enter Control Menu. Press or to select SetUp. b. Press the OK button to confirm the entry of the submenu. Auto Installation will highlight in red, then press OK button to confirm and input the PIN "0000" to the submenu. Press or to select your chosen country, and press OK to confirm the selection. Press button again to start the search. Press OK to enter the submenu, then select YES and OK to start the scanning.

d. To power off press the STANDBY button, and the blue illuminated symbol will change to red. 13 Specifications Troubleshooting Using The TV Features Using The Features Installing the LCD TV Introducing the LCD TV Refer to the owner's manual of the external equipment to be connected. When connecting external equipment, do not connect any AC power cords to wall outlets until you have completed all the connections. Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The TV Features Troubleshooting Specifications Connecting an External DVD Player Rear View of TV ON/OFF SWITCH AC IN Pb Pr A VGA CABLE B C D HDMI CABLE DVD PLAYER After connecting an aerial to your LCD TV and connecting the mains cable to the TV METHOD A Use a VGA 15 pins cable to connect the TV Cable Box's RGB output sockets to your LCD TV. Use a 3.5mm socket to RCA adapter cable for connecting audio. METHOD B Use a Component cable to connect the AV (Y Pb Pr) sockets on the DVD player to your LCD TV.



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/1274220)

[L19H01UB user guide](http://yourpdfguides.com/dref/1274220)

<http://yourpdfguides.com/dref/1274220>

Use an Audio cable to connect the DVD's audio output sockets to your LCD TV. METHOD C Use a SCART cable to connect the DVD's SCART socket to the LCD TV's SCART socket.

METHOD D Use a HDMI cable to connect the Satellite Receiver HDMI connector to your LCD TV. Connect all AV power sources before turning on the power switch of the LCD TV or other connected equipments. Press the STANDBY button to turn on your LCD TV. To watch DVD, press the INPUT button to select SCART, AV (Y Pb Pr), HDMI1, and HDMI2. 14 Connecting a VCR Rear View of TV ON/OFF SWITCH AC IN VCR PLAYER METHOD (AV1) Use a SCART cable to connect the VCR's SCART socket to the LCD TV's SCART socket. Connect all AV power sources before turning on the power switch of the LCD TV or other connected equipments. Press the STANDBY button to turn on your LCD TV. To watch VCR, press the INPUT button to select SCART. 15 Specifications Troubleshooting Using The TV Features Using The Features Installing the LCD TV Introducing the LCD TV Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The TV Features Troubleshooting Specifications Connecting a TV Cable Box or Satellite Receiver Rear View of TV ON/OFF SWITCH AC IN A VGA CABLE Pb Pr B C D HDMI CABLE SATELLITE ANTENNA CABLE SATELLITE RECEIVER TV CABLE BOX Method A : Use a VGA 15 pins cable to connect the TV Cable Box's RGB output sockets to your LCD TV. Use a 3.

5mm socket to RCA adapter cable for connecting audio. Method B : Use a Component cable to connect the Y/Pb/Pr sockets on the TV Cable Box to your LCD TV. Use an Audio cable to connect TV cable box's audio output sockets to LCD TV. Method C : Use a SCART cable to connect the TV Cable Box's SCART socket to the LCD TV's SCART socket. Method D : Use a HDMI cable to connect the Satellite Receiver HDMI connector to your LCD TV. Connect all AV power sources before turning on the power switch of the LCD TV or other connected equipments. Press the STANDBY button to turn on your LCD TV. To watch TV cable box, press the INPUT button to select SCART, AV (Y Pb Pr), HDMI1, HDMI2, and VGA. 16 Connecting an Audio Receiver For better sound quality, you may want to play the LCD TV audio through your stereo system. Rear View of TV ON/OFF SWITCH AC IN Use coaxial cable to connect the audio receiver's coaxial LINE-IN sockets to LCD TV's SPDIF OUT sockets (Only for DVB-T).

Connect all AV power sources before turning on the power switch of the LCD TV or other connected equipments. @@@@ (HDMI sends Digital Video and Audio with one cable. @@@@2. Switch off the TV. Some modules come with a viewing card.

@@@@ Switch on the TV. Press the MENU key to display the OSD menu. 4. 5. 6.

Use the 7. @@@@@@ (The default PIN is "0000") stored in the memory. @@ Select TV Channel Press the CH. @@@@ button pad.

@@@@ Adjust picture setting such as Picture Mode, Contrast, Brightness, Colour, Hue(NTSC), Sharpness, Phase, Colour Temp, Digital Processing. Adjust Channel setting such as Auto Installation, Manual Installation, Update Installation, Child Lock, Digital subtitle, Digital language, Edit Channel, Time Base and CI information. Adjust preferences such as OSD language, Sleep Timer and Default. Audio Picture Setup Option 2 Press the MENU button on the remote control. The main menu will appear on the screen. 3 Use Use buttons to highlight your main menu option, then press OK button to enter your selected option.

buttons to highlight an option of the sub-menu. Use buttons to change the value of the item. Press the EXIT button to exit menu. Audio Use the Audio setting menu to adjust the audio quality which best corresponds to your listening requirements. The Audio Menu includes the following options: Audio Mode There are five options available: Movie/ Multimedia/ Music /Speech/Personal. Treble Bass Balance Adjust treble for enhancement of high frequency output. Adjust Bass for enhancement of low frequency output. Adjust the balance of the left or right speaker. Headphone Adjust the Headphone volume. Volume AVC Auto Volume control 21 Specifications Troubleshooting Using The TV Features Using The Features Installing the LCD TV Introducing the LCD TV To Mute the Sound Press MUTE and the sound cuts off.

To turn mute off, press the MUTE button again, or simply press the VOL. +/- buttons. Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The TV Features Troubleshooting Specifications OSD Menu Operation Picture Use the Picture setting menu to adjust the picture quality which best corresponds to your viewing requirements. The Picture Menu includes the following options: OPTION DESCRIPTION Custom: Select for user's settings. The items of video can be adjusted when the picture mode is for user's settings except advanced item.

There are six options available: ECO Brilliant and sharp picture settings with economical energy consumption. Brilliant and sharp picture settings suitable for bright environment. Reference mode for living room conditions and average signals. Intended for bad-quality signals. Suitable for living room viewing.

Best for multimedia graphical applications. Pictures settings are set to your preference. Picture Mode Rich Natural Soft Multimedia Personal Contrast Brightness Colour Hue (NTSC) Sharpness Colour TEMP Digital Processing Adjust the difference between the brightness and darkness regions of the picture. Adjust to increase or decrease the brightness. Allows to adjust the colour from 0 to 100. Allows you to adjust the colour tint of the picture.(Only for NTSC) Adjust to sharpen or soften the picture. Allows you to adjust the Colour Temperature to be Cool, Warm, Normal. Allows you to adjust the following to be Off, Min, Mid, or Max.: Dynamic Contrast DNR (Dynamic Noise Reduction) Colour Enhancement 22 OSD Menu Operation Use this Setup menu to Setup Channel.

Use the buttons to highlight the required setting. Press OK button to select the function. Use buttons to adjust the settings. Press OK button to save the adjustment. Allows to do the Channel Installation automatically. Country: Belgium, Czech Rep, Denmark, Finland, France, Germany, Greece, Hungary, Italy, Netherlands, Norway, Poland, Portugal, Slovakia, Spain, Sweden, Switzerland, UK, and Others. Allows you to adjust the manual search by hand if signal is too weak or picture is blurry. Country: Please refer to the above Country listing in Auto Installation section. System: Allow you to select the sound standard : DK, BG, I, L. PAL D/K, SECAM D/K (East Europe / China) BG PAL B/G, SECAM B/G (Europe / East Europe / Asia / New Zealand / M. East / Africa /Australia) I PALI (U.K. / Ireland / Hong Kong / South Africa) L SECAM L(France). Programme Analog search Digital search Allows you to update the channel.



[You're reading an excerpt. Click here to read official HITACHI](#)

[L19H01UB user guide](#)

<http://yourpdfguides.com/dref/1274220>

DK Auto Installation Update Installation Child Lock Digital subtitle Audio language Set the Audio and Subtitle language under User Settings. Set the Audio and Subtitle language under User Settings. Allows you to edit the channel list: Time Base Allows you to set the Date and Time. The Daylight Savings feature will allow you to observe the Summer Time, and the TV will calculate the clock adjustment for it. CI Allows to view the CI information. Information Digital Pref- Allows you to set up preferred Audio / Subtitle erred Setting 23 Specifications Troubleshooting ATV Edit Channel Rename: Allow you to rename the channel Uninstall: Allow you to skip the channel Using The TV Features Allows you to select the childlock to be on or off. (Default password is 0000.) Allow you to select the Age Rating and to change Password. Using The Features Installing the LCD TV Manual Installation Introducing the LCD TV Setup Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The TV Features Troubleshooting Specifications OSD Menu Operation (Only for VGA) Auto Adjust H-Position V-Position Frequency Phase Allows to auto synchronize VGA signal. Allows you to adjust the Horizontal Position of the picture. Allows you to adjust the Vertical Position of the picture. Allows you to improve focus clarity and image stability. Allows you to improve focus clarity and image stability. Option Use this Option setting menu to set up some features: OSD language, Sleep Timer, and OSD Reset. Allows you to select the OSD to be English / French / Language Italian / Danish / Finnish / Slovak / Swedish / Greek / Polish / Czech / Hungarian / Norwegian. Sleep Default Allows you to select the sleep timer to be Off, 30 min, 60 min, 90 min, or 120 min.

Allows you to restore back to the factory settings. 24 Chapter 4 Using The TV Features EPG (TV Guide) The TV guide is an Electronic Programme Guide that provides you with a quick and easy way to view a complete list of digital programmes as you would in a newspaper or TV magazine. You can navigate through the list of digital programmes and obtain detailed information on the programmes. 1 Press the EPG key on Remote Control to display the TV guide: ON/OFF LHD01 A list of all the digital programmes in the currently selected channel list is displayed. 2 Use the / keys to select a programme. 3 The TV guide features are displayed at the bottom of the screen. Use the coloured keys Red and Blue on the remote control to activate them. (EPG is an information system broadcast by certain channels which can be consulted like a newspaper. It also offers access to subtitles for viewers for more details.) 4 Press the EPG key or EXIT key to exit the menu.

Setting up your list of Favourite Channels This menu enables you to create a Favourite List. with your preferred TV channels and radio stations. 1 Press FAV button on the Remote Control to enter into the favourites list menu. 2 Use to add this programme into the Favourite List. (ATV means analogue channels) 3 Use to delete the programme from the Favourite List.

ON/OFF LHD01 4 Press OK to confirm section. 5 Press the FAV key or EXIT key to exit the menu. 25 Specifications Troubleshooting Using The TV Features Using The Features Installing the LCD TV Introducing the LCD TV Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The TV Features Troubleshooting Specifications Using The TV Features CHANNEL INSTALLATION Use these options (Auto Installation, Manual Installation, and Update Installation) if you have moved to another location or want to rescan for new channels. Press the MENU button on the remote control or the MENU button on the control panel. Use the Setup function.

keys to select Auto Installation This menu allows you to automatically search for all the programmes available in your region. If you want the TV to do auto search for the channels, use the buttons to highlight the Auto Installation and press OK button to confirm. You can choose the installation type by using the buttons. Press the OK button to start the installation process. The new channels will be listed in the channel list. (The default PIN is "0000") Manual Installation If you want to install the channels by yourself, use the buttons to highlight the Manual Installation option, and press OK button to install manually. First, you should choose the installation type - Manual Installation, then you will see the following menu. (The default PIN is "0000") Slovakia Update Installation If you want to update current channels and would like to keep existing channels. First, you should choose the installation type - Update Installation, then you will see the following menu. (The default PIN is "0000") 26 Using The TV Features Child Lock The program will be locked when you select the On option in the Child Lock menu.

1 To display the channel that you would like to Lock. 2 Press the MENU button on the remote control or the MENU button on the control panel. Use the keys to select Setup function then press OK key to access. 3 Press the keys to select the "Child Lock" then press OK key to access. 4 Enter the Default PIN number "0000". 5 Press and OK keys to select On or Off option. 6 Press OK key again to activate/deactivate your chosen option. 7 To return to previous menu, press the EXIT key. 8 To exit the menu, press the EXIT key. The TV can still be operated by using the remote control.

Please enter the PIN. (The default PIN is "0000") Or you can select the Change Password mode to change the password. Note Record your password in some secure, easy-to-find place. We assume no responsibility for lost, misplaced or forgotten passwords. Digital Subtitle Allow you to select the subtitle language in digital channels.

27 Specifications Troubleshooting Using The TV Features (The default PIN is "0000") Using The Features Installing the LCD TV Introducing the LCD TV Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The TV Features Troubleshooting Specifications Using The TV Features Audio Language Allow you to select the audio language in digital channels. Channel List When you finish CHANNEL INSTALLATION, you can press CH LIST key on the Remote Control to view all channels Use the keys to select a programme. (ATV means analogue channels) CHANNEL EDIT First, you should choose the Setup menu and highlight Edit Channel, then you will see the following menu. Press OK to enter. Naming of Channel If preferred, you can assign a name to the TV channel.

1 2 3 4 5 Press the keys to select the channel you want to rename. Press the RED key to enter Rename mode. Press again to Cancel the Rename mode Press the keys to select the characters and press the keys to move around the name display area.



[You're reading an excerpt. Click here to read official HITACHI L19H01UB user guide](http://yourpdfguides.com/dref/1274220)
<http://yourpdfguides.com/dref/1274220>

Press OK key to store the new name. To return to previous menu, press the EXIT key. (ATV means analogue channels) 5 five 15 Ch 15 16 QVC UK GO! d 23 bid-up.tv 25 TCM 26 UK Style 27 Discovery Uninstall of Channel This feature allows you to skip programmes that you do not watch. 1 2 4 5 keys to select the channel you want to Uninstall. Press the Press the GREEN key to uninstall. Press the GREEN key again to cancel the uninstallation.

Press OK key to store the new setting. To return to previous menu, press the EXIT key. 28 Using The TV Features Time Base Allow you to set the system time: Date and Time: User Settings. Time zone: Allow you to adjust and offset local time CI Information Note: CAM Module and Card must be inserted prior viewing the CI information. Allow you to view the CI information. 1. Press the MENU key to display the OSD menu. 2. Use the / key to highlight "Setup" menu and press the OK key. 3.

Press the / key to enter into the "CI information" menu. 4. Press OK key as indicated on the screen to access the CAM's functions 29 Specifications Troubleshooting Using The TV Features Using The Features Installing the LCD TV Introducing the LCD TV Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The TV Features Troubleshooting Specifications Troubleshooting Before consulting service personnel, check the following chart for a possible cause of problem and for a possible solution. TV will not turn on Make sure the power cord is plugged in. The batteries in the remote control may be exhausted.

Replace new and same brand batteries. No picture, no sound Check the interface cable between TV and antenna / cable TV. Press the STANDBY button on the remote. Press the INPUT button repeatedly on the remote to select the connected video sources. Poor picture, sound OK Check the interface cable between TV and antenna / cable TV.

Adjust the Brightness / Contrast options in the Picture Menu. Picture OK, poor sound Sound may be muted. Press the MUTE button on the remote. Press the VOL. + button to increase the volume. Audio noise Move any infrared equipment away from the TV. 30 Specifications Various Audio/Video terminals for external equipment connection 1 SCART input terminals 1 set of component Video input terminals 1 VGA / Audio input terminal 2 HDMI / Audio input terminals 1 Headphone terminal High Definition Multimedia Interface (HDMI) HDTV Component Video Inputs 1 connections. Built-in ATV and DTV Tuners 2 Teletext Function NICAM/FM Mono Function Manual search Sleep-Timer Support CI function HD Ready 31 Specifications Troubleshooting Using The TV Features Using The Features Installing the LCD TV Introducing the LCD TV KEY FEATURES Preparation Preparation Introducing the LCD TV Installing the LCD TV Using The Features Using The TV Features Troubleshooting Specifications Specifications DISPLAY MODES The screen resolution has been optimized during production for the display modes listed below. If the signal from the system equals the standard signal mode, the screen adjusts automatically. If the signal from the system is not equal to the standard signal mode, adjust the screen resolution by referring to your Video Card's user guide, otherwise there may be no video.

Y Pb Pr Mode Resolution 480P: 720 x 480 60 480I: 720 x 480 576P: 720 x 576 50 576I: 720 x 576 50 720P: 1280 x 720 60 50 1080I: 1920 x 1080 60 16:10 (Wide), 4:3 16:10 (Wide), 4:3 16:10 (Wide), 4:3 16:10 (Wide), 4:3 16:10 (Wide), 4:3 16:10 (Wide), 4:3 Vertical Frequency (Hz) Aspect Ratio 16:10 (Wide), 4:3 VGA Mode Resolution Vertical Frequency (Hz) 60 640 x 480 75 60 800 x 600 75 60 1024 x 768 70 75 16:10 (Wide), 4:3 16:10 (Wide), 4:3 16:10 (Wide), 4:3 Aspect Ratio HDMI Mode Resolution 480P: 720 x 480 576P: 720 x 576 720P: 1280 x 720 60 50 1080I: 1920 x 1080 60 16:10 (Wide) Vertical Frequency (Hz) 60 50 50 16:10 (Wide) Aspect Ratio 16:10 (Wide) 16:10 (Wide) 32 Specifications Panel System 144 19 900 pixels (vertical PAL I, B/G, D/K SECAM L 300 cd/m² 1000:1 1680 22 1050 pixels (vertical PAL I, B/G, D/K SECAM L 300 cd/m² 1000:1 Inputs / Output SCART HDMI VGA 1 2 1 2 1 1 1 1 1 1 1 1 1 SPDIF Out ANT In 1 1 3 W+3 W 100-2 100-2 mm 1 1 1 1 3 W+3 W 450 x 181 x 53 x 181 x 64 mm 33 Specifications Troubleshooting Using The TV Features Using The Features Installing the LCD TV Introducing the LCD TV MODE L19H01 UB/UW/CB/CW L22H01 UB/UW/CB/CW Preparation This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product. Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.

uk or call 0870 6001 338 (UK customers only) Calls charged at National Rate. NOTE: For a replacement Remote Control for this product, please quote part number 845-045-TM3XBH For a replacement Power cord for this product, please quote part number 600-151-5000-SIH For a replacement SCART Adapter for this product, please quote part number 412-SCA-0001H For a replacement Video cables for this product, please quote part number 621-151-2000H For a replacement Audio cables for this product, please quote part number 621-151-60002H NOTE: This product is exclusively available through Dixons Stores Group. In the unlikely event of a problem with your product please return to the store where your purchase was made. For product help or out of guarantee support: Dixons customers please call: 08701 54 55 60 Currys customers please call: 08701 54 55 70 (All calls charged at national rates) Quick Start Guide L19H01 UB/UW/CB/CW L22H01 UB/UW/CB/CW 3a A Connecting to a VCR OR Do not connect the TV to the mains supply until you have completed all the connections. Note: 2-pin adapter for EU market; 3-pin adapter for UK market.

3b B C Connecting to a VCR and a Satellite/Cable box A Connect one end of an RF lead to the aerial socket marked on your TV and the other end to the socket marked RF OUT on the back of your VCR. Other connections GB If you have a SCART lead, connect one end of the lead to the SCART socket on your VCR and connect the other end to the SCART socket marked SCART on the back of your TV. B Connect one end of another RF lead to the aerial socket marked RF IN on your VCR and the other end to the socket marked RF OUT on the back of your Satellite/Cable box. PLEASE NOTE: By using a SCART lead (not supplied) you can improve the quality of playback and sound.



[You're reading an excerpt. Click here to read official HITACHI L19H01UB user guide](http://yourpdfguides.com/dref/1274220)
<http://yourpdfguides.com/dref/1274220>

Remember you must still have the aerial lead (not supplied) connected.

If you are using a SCART lead you should not have to tune your TV to your video, instead select the SCART channel by pressing the TV/Input button on the remote control. B Connect one end of the RF lead to the aerial socket on your TV and the other end to the socket marked RF OUT on the back of your VCR. D A VCR VCR C Connect your aerial lead to the socket marked RF IN on the back of your Satellite/Cable box. 1 a: b: C a. Insert batteries into Remote Control b. Install TV Stand Connect your aerial lead to the socket marked RF IN on the back of your VCR. A C B D Satellite/Cable Satellite/Cable Box Box If you have SCART leads connect one end to the socket marked SCART on the back of your TV, and connect the other end to the SCART socket on the back of your VCR. Now go to stage 4. Now go to stage 4. Use 2 x AAA size batteries.

1. Open the box, and make sure all necessary parts are in the box. 2. Peel off/ remove the plastic film before installing the TV stand. 3. Cover an even stable surface with a soft cloth. Place the LCD TV unit face-down on the cloth. Fit the stand onto the bottom of the LCD TV unit as shown: 4. Then push until stand into the LCD TV's stand socket. 4 A B C Switch on 5 A B C D Select & Start Auto installation menu x 3 pieces 5.

Attach the base to the TV stand with the 3 screws that are provided and ensure that they are tightened. 2 2 Connect aerial Plug your TV and any other equipment that you have connected into the mains. Press the AC SWITCH on the back of your TV to switch on your TV's power. Turn on the TV. Press the MENU button on the remote control to enter the menu option.

EJECT DVD MENU Do not connect the TV to the mains supply until you have completed all the connections. If you just want Connect one end of the aerial lead to the aerial to connect your socket on the wall and the other end of the lead TV to an aerial to the appropriate socket on the back of your TV. connect it as shown Now go to stage 4. opposite. If you want to connect your TV to a VCR go to stage 3a.

@@@ Connect your VCR to the TV and the antenna, then switch it on. Insert a pre-recorded tape and press PLAY. This can help you to easily find the VCR channel as it will play the pre-recorded tape. Before you start up the TV tuning process, the Satellite/Cable channel set up are recommended to complete prior to the TV tuning process. Connect your Satellite/Cable box to the TV and the antenna, and then switch it on. Select a channel that you will easily recognise. This can help you to easily find the satellite/cable channel since the TV will play that selected channel. REPEAT ANGLE Press button to select the Start Search, and press OK to confirm. Press the button to select "YES". The unit will start Auto Search.

Please be patient as this process will take a few minutes. When Auto Installation is completed, press EXIT to exit the screen. LHD01 E 6 Skip(Uninstall) a channel Checklist... You should have... A B C D E Press the MENU button on the remote control to enter the menu option. Press to select SETUP, and press OK to enter the SETUP screen.

to select Edit Channel, press OK to enter Edit Channel screen. Put the two AAA size batteries in your remote control. Connected your TV to an aerial or VCR and/or VCR Satellite/Cable box. Switched on your TV and any other connected equipment. EJECT DVD MENU Press Press to select the channel which you want to skip (uninstall).

Press the Green button to skip(uninstall) that channel. Press green key again to unskip the selected channel. TEXT DVD SUBTITLE ZOOM AUDIO REPEAT ANGLE LHD01 Tuned in all available channels. This is an example of the channel order in digital TV mode. Channel 1 .

.....
... BBC1 Channel 2
.....
.. BBC2 Channel 3 ...
.....
. ITV Channel 4
.....
CH4 Channel 5
..... CH5 Channel 6 .
.....
... Satellite/Cable Channel 7 ..
.....

..... VCR 7 Rename a channel Basic functions 1 After connecting the aerial to your LCD TV and connecting the mains cable to 2 A red LED indicator will show on the front panel of the TV. 3 Press the STANDBY button, and the red LED indicator will change to blue. 4 To power off, press the STANDBY indicator will change to red.

button again, and the blue LED the TV and mains socket, press AC SWITCH on the rear panel of the TV. A B C D E Press the MENU button on the remote control to enter the menu option. Press to select SETUP, and press OK to enter the SETUP screen. to select Edit Channel, press OK to enter Edit Channel screen. to enter the RENAME 5 five 15 Ch 15 16 QVC UK GO 1 d In the interests of safety and to avoid unnecessary energy consumption, never leave your TV in standby while unattended for long periods of time, eg. overnight, while on holiday or while out of the house. 23 bid-up.tv 25 TCM 26 UK Style 27 Discovery Press Changing channels Press the NUMBER buttons to go directly to a channel e.g. press the number 1 button to go to channel 1.

For a channel number above 9, for instance, channel 12 press the number 1 button quickly followed by the number 2 button. To move up and down the channels in order press the CH. or CH. button. Adjusting the volume Press the VOL.

+ () button to increase the volume. Press the VOL. - () button to decrease the volume.) button Press to select the channel, then press Red Key MENU screen. Press and to set channel name.

Then, press OK to confirm and store the channel name. EJECT DVD MENU TEXT DVD SUBTITLE ZOOM AUDIO REPEAT Selecting Teletext Press the TEXT button to select Teletext function. Press the button again to deactivate the function. After you pressed the TEXT button, and the TV is in Teletext function, press MIX to allow you to read the Teletext and still see the picture on your TV. Note: MIX function is only operative on analogue TV. This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product. ANGLE LHD01 .

[You're reading an excerpt. Click here to read official HITACHI](#)



[L19H01UB user guide](http://yourpdfguides.com/dref/1274220)
<http://yourpdfguides.com/dref/1274220>