



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI MCG25. You'll find the answers to all your questions on the HITACHI MCG25 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HITACHI MCG25**  
**User guide HITACHI MCG25**  
**Operating instructions HITACHI MCG25**  
**Instructions for use HITACHI MCG25**  
**Instruction manual HITACHI MCG25**

MICROWAVE OVEN  
MODEL MCG25

**HITACHI**  
Inspire the Next



Important - Please read these instructions fully before installing or operating and keep for future reference.  
These instructions contain important information which will help you get the best from your microwave oven and ensure safe and correct installation and operation.



[You're reading an excerpt. Click here to read official HITACHI MCG25 user guide](http://yourpdfguides.com/dref/5526366)  
<http://yourpdfguides.com/dref/5526366>

### Manual abstract:

These instructions contain important information which will help you get the best from your microwave oven and ensure safe and correct installation and operation. **1 GB WARNINGS IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE** This appliance is intended for domestic household use only and should not be used for any other purpose or in any other application, such as for non-domestic use or in a commercial environment. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. The rear surface of appliance shall be placed against a wall. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years. The appliance is not intended to be operated by means of an external timer or separate remote-control system. The temperature of accessible surfaces may be high when the appliance is operating.

Do not place the appliance in or near hot gas or electric burner, or permit to touch a heated oven or mini oven. **2 GB** Keep a minimum free space 30 cm above the top surface of the oven. Only use utensils that are suitable for use in microwave ovens. **3 GB** The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container. **4 GB** The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended. For the details for cleaning door seals, cavities and adjacent parts, please see section **Cleaning and Maintenance** on pages 20 & 21.

The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation. The microwave oven is intended to be used freestanding. The appliance must not be placed in a cabinet. **5 GB Group 2, Class B equipment** This equipment is Group 2 equipment as it intentionally generates radio-frequency energy for treating material and is designed to be used in domestic premises or an establishment directly connected to the low voltage electricity distribution network supplying buildings used for domestic purposes (Class B). These surfaces can get hot. Caution: If the device operates in combination mode, it is recommended that children use the oven only under the supervision of adults because the temperature may be high. **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.

**6 GB WARNING:** Accessible parts may become hot during use. Young children should be kept away. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface which may result in shattering of the glass. A steam cleaner is not to be used. The door should preferably be closed in all cooking modes. After each cooking cycle, the cooling fan will continue to run for a while to ensure quick cooling and safe operation of the oven. Do not hang any cloth or garment to the handle of the oven. Do not line the oven's cavity with aluminium foil for easier cleaning: The oven may overheat and the enamel coating of the cavity may be damaged. **7 GB IMPORTANT SAFETY INSTRUCTIONS PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY** The oven cannot be operated with the door open due to the safety interlocks built in the door mechanism which switch off cooking functions when the door is opened. Operating the oven with the door open could result in harmful exposure to microwave energy.

It is important not to tamper with the door mechanism. Do not let water or any other liquid enter the oven through the ventilation slots. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces. Do not operate the oven if it does not work as expected or the mains lead is damaged or the unit is damaged in any way. It is particularly important that the oven door closes properly and that there is no damage to the door (bent), or hinges and latches (broken or loosened), or the door seals and sealing surfaces.

The oven should not be adjusted or repaired by anyone except qualified personnel. This product is intended to be used free standing. Avoid using straight-sided containers with narrow necks. Stir the liquid before placing the container in the oven and again halfway through the heating time. After heating, allow to stand in the oven for a short time.

Stir or shake the contents (especially feeding bottles and baby foods) and carefully check the temperature before use. Install or locate this oven only in the accordance with the installation instructions provided. Do not store or use this appliance outdoors. **8 GB COOKING UTENSILS** Utensils should be checked to ensure that they are suitable for use in the microwave oven. Materials you can use in microwave oven Utensils Remarks Aluminium foil Shielding only.

Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 2. The bottom of browning dish must be at least 5mm above the turntable. Incorrect usage may cause the turntable to break.

Use only to heat food until it is warm. Most glass jars are not heat resistant and may break. glassware Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not close with metal bags tie. Make slits to allow steam to escape. Paper plates Use for short-term cooking/warming only. Do not leave oven and cups unattended while cooking. Paper towels Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only. **9 GB** Some plastic containers soften, as the food inside gets hot. **10 GB** plastic wrap Microwave-safe only. Use to cover food during cooking to retain moisture.

Do not allow plastic wrap to touch food.



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/5526366)

[MCG25 user guide](http://yourpdfguides.com/dref/5526366)

<http://yourpdfguides.com/dref/5526366>

thermometers Microwave-safe only (meat and candy thermometers).

**Wax paper** Use as a cover to prevent splattering and retain moisture. Food carton with May cause arcing. transfer food into microwave-safe dish. metal trim trimmed utensils may cause arcing. Metal twist ties May cause arcing and could cause a fire in the oven.

**Paper bags** May cause a fire in the oven. Mica waveguide cover (do not remove) I. grill rack 10 GB TURNTABLE INSTALLATION a. Never place the glass tray upside down. The glass tray should never be restricted. b. c. Examine the oven for any damage such as dents or broken door. Do not install if the oven is damaged. MICROWAVE OVEN INSTALLATION 1.

(4) Do not remove the feet from the bottom of the oven. (5) Blocking the intake and/or outlet openings can damage the oven. (6) Place the oven as far away from radios and TV as possible. 2. Plug your oven into a standard household outlet. Defrosting by weight or time Press to defrost food by weight or time. Clock/Kitchen timer Press to set the clock time or kitchen timer. It is also used for setting child lock. 12 GB OPERATION When the oven is plugged in, the display will show 00:00 and a beep will be heard. general 1.

Press once to temporarily stop cooking and you can start the cooking again by pressing , or press twice to cancel the cooking program. 2. After the cooking time has elapsed, the oven will beep five times and return to the standby state. Turn to adjust the hour digits, the input hour should be a 24-hour time value. If the clock is not set, the oven will not function when powered on.

During clock setting, if you press state. The maximum cooking time is 95 minutes. to confirm setting. The clock indicator light will flash. , the oven will return to the previous 4.

When the kitchen time has been reached, the clock indicator light will go out. The buzzer will sound 5 times. 13 GB Microwave Cooking The maximum cooking time is 95 minutes. You can select a power level by pressing . Press once twice 3 times 4 times 5 times Display P100 P80 P50 P30 P10 Cooking Power 100% 80% 50% 30% 10% Example: Choose 80% power for cooking 20 minutes. To set the cooking time until 20:00 is shown on the display. Press again or turn shown on the display. You can check the cooking power during cooking by pressing . During microwave cooking, each press of seconds of cooking time. To set the cooking time until 10:00 shows on the display. to start cooking.

**NOTE:** If half the grill time passes, the oven will beep twice, and this is normal. In order to have a better effect of grilling food, you should turn the food over, close the oven door then press operation, it will continue working. to continue cooking. If no 14 GB Convection Cooking The convection cooking can let you cook the food as a traditional oven. microwave is not used. It is recommended that you should preheat the oven to the appropriate temperature before placing the food in the oven. During convection cooking, hot air is circulated throughout the oven cavity rs during cooking and also sparking in the oven cavity and around the door seal. Do not let food deposits or grease accumulate inside the oven cavity or on the door seal. If your microwave oven is fitted with a waveguide cover (usually located inside the oven cavity on the right side wall) it must be kept clean at all times, should food deposits or grease be allowed to accumulate on the cover, sparking will occur and may damage your oven invalidating the warranty. Before any maintenance or cleaning, disconnect the oven from the mains supply and wait for it to cool to room temperature.

**Oven Door** Remove any food deposits and grease between the door seal and oven cavity using a damp cloth, it is important to keep this area clean at all times. **Interior Walls** Remove any grease splashes from the oven cavity walls with soap and water, then rinse and dry. The door seal and oven cavity have to be particularly well cleaned to ensure the door will close properly and to avoid sparking between the oven cavity and door assembly. Do not use abrasive products such as scouring pads which will damage the surfaces of the oven cavity and door. Only warm soapy water must be used to clean stainless steels surfaces.

**Outer Surfaces** To clean the outside surface, use a damp cloth. Avoid using abrasive products such as scouring pads that may damage the cosmetic surfaces. Make sure water does not seep into the ventilation slots. accessories should be washed in warm soapy water by hand. 20 GB CAUTION Some waveguide covers can be easily damaged take care when cleaning.

do not wash accessories in a dishwasher. **WARNINGS:** If the inside of the oven cavity and door seal are not kept scrupulously clean there is a danger of damage due to sparking inside the oven cavity invalidating the warranty. Never scrape the oven cavity walls with sharp objects. Never immerse the appliance, its cord or plug in water or any other liquid. Never clean this product with a steam cleaner. it is normal. it is normal. Air out of vents Most steam will escape from the vents. But some steam may accumulate on a cool place like the oven door. it is normal.

Oven started accidentally with It is forbidden to run the appliance without no food in. Glass turntable makes noise when microwave oven operates. Then plug in again after 10 seconds. 22 GB Information for Users in European Union Countries The above mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If this equipment display the chemical of more than 0. 0005% Mercury , or than , 0. 004% Lead, batteries or accumulators included with symbol Hg, Cd, or Pb, then it means that the battery has a heavy metal content more than 0. 002% Cadmium or more. We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

This instruction book is also available at <http://www.>



**[You're reading an excerpt. Click here to read official HITACHI MCG25 user guide](http://yourpdfguides.com/dref/5526366)**  
<http://yourpdfguides.com/dref/5526366>