



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI MDE25. You'll find the answers to all your questions on the HITACHI MDE25 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI MDE25
User guide HITACHI MDE25
Operating instructions HITACHI MDE25
Instructions for use HITACHI MDE25
Instruction manual HITACHI MDE25



[You're reading an excerpt. Click here to read official HITACHI MDE25 user guide](http://yourpdfguides.com/dref/5915759)
<http://yourpdfguides.com/dref/5915759>

Manual abstract:

These instructions contain important information which will help you get the best from your microwave oven and ensure safe and correct installation and operation. **BE IMPORTANT WARNINGS IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE** This appliance is intended for domestic household use only and should not be used for any other purpose or in any other application, such as for non-domestic use or in a commercial environment. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames. **BE GB** Only use utensils that are suitable for use in microwave ovens.

BE GB The microwave oven is intended for heating food and beverages. **BE GB** The oven should be cleaned regularly and any food deposits removed. Keep a free space 30 cm minimum above the top surface of the oven. For the details for cleaning door seals, cavities and adjacent parts, please see section "Cleaning and Maintenance" on page 17. The rear surface of appliance shall be placed against a wall.

The temperature of accessible surfaces may be high when the appliance is operating. **BE GB** Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation. **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person. **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy. **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.

The microwave oven is intended to be used freestanding. The appliance must not be placed in a cabinet. The appliance is not intended to be operated by means of an external timer or separate remotecontrol system. Group 2, Class B equipment This equipment is Group 2 equipment as it intentionally generates radio-frequency energy for treating material and is designed to be used in domestic premises or an establishment directly connected to the low voltage electricity distribution network supplying buildings used for domestic purposes (Class B). **BE GB** Do not use **IMPORTANT SAFETY INSTRUCTIONS PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY** The oven cannot be operated with the door open due to the safety interlocks built in the door mechanism which switch off cooking functions when the door is opened. Operating the oven with the door open could result in harmful exposure to microwave energy. It is important not to tamper with the door mechanism. Do not let water or any other liquid enter the oven through the ventilation slots. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces. Do not operate the oven if it does not work as expected or the mains lead is damaged or the unit is damaged in any way.

It is particularly important that the oven door closes properly and that there is no damage to the door (bent), or hinges and latches (broken or loosened), or the door seals and sealing surfaces. The oven should not be adjusted or repaired by anyone except qualified personnel. Only use utensils that are suitable for use in microwave ovens. Avoid using straight-sided containers with narrow necks. Stir the liquid before placing the container in the oven and again halfway through the heating time. After heating, allow to stand in the oven for a short time. Stir or shake the contents (especially feeding bottles and baby foods) and carefully check the temperature before use. **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.

WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use. **BE GB** If the lamp needs replacing please contact your dealer. **BE GB** Do not use this appliance outdoors. **BE GB** Arcing can occur if foil is too close to oven walls.

The foil should be at least 2. **BE GB** Incorrect usage may cause the turntable to break. Use only to heat food until it's warm. Glass jars Most glass jars are not heat resistant and may break. heat-resistant oven glassware only.

Make sure there is Glassware no metallic trim. Do not close with Oven cooking metal tie. Make slits to allow steam to escape. bags Use for short-term cooking/warming only. Do not leave Paper plates oven unattended while cooking. And cups Use to cover food for reheating and absorbing fat. Use Paper towels with supervision for a short-term cooking only. **BE GB** Some plastic containers soften, as the food inside gets hot. **BE GB** microwave-safe only. Use to cover food during cooking to Plastic wrap retain moisture.

Do not allow plastic wrap to touch food. Food carton with May cause arcing. transfer food into microwave-safe metal handle dish. Metal or metalMetal shields the food from microwave energy. metal trim trimmed utensils may cause arcing. Metal twist ties May cause arcing and could cause a fire in the oven. Paper bags May cause a fire in the oven. **BE GB** Ensure the turntable is in place when you operate the oven. Never place the glass tray upside down. The glass tray should never be restricted.

b. **BE GB** c. **BE GB** Examine the oven for any damage such as dents or broken door. Do not install if the oven is damaged. **BE GB** **mICROWAVE OVEN INSTALLATION 1.**

BE GB the intake and/or outlet vents. (5) Blocking the intake and/or outlet openings can damage the oven. **BE GB** 2. Plug your oven into a standard household outlet. **BE GB** More than 850 mm above the floor.

BE GB (3) A minimum height of free space above the top surface on the oven is 30cm. **WARNING:** Do not install the oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void. Clock/Pre-Set Press to set the clock time or preset function.



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/5915759)

[MDE25 user guide](http://yourpdfguides.com/dref/5915759)

<http://yourpdfguides.com/dref/5915759>

Weight/Time defrost Press to defrost food by weight or time. B e / Auto Menu/ (Dial) Time /Auto Menu/Weight Rotate to select auto cook menus or enter time or weight. Stop/Clear Press to cancel setting or reset the oven before setting a cooking program. Press once to temporarily stop cooking or press twice to cancel cooking. It is also used for setting child lock. 11 GB D ow o nl ad OPERATION When the oven is plugged in, the display will show "0:00" and a beep sound will be heard.

Press once to temporarily stop cooking and you can start the cooking again by pressing , or press twice to cancel the cooking program. 2. After the cooking time has elapsed, the oven beeps five times and returns to the standby mode. To adjust the hour digits, the input hour should be a 24-hour time an n de bo rre .

NOTE: If the clock is not set, the oven will not function when powered on. During clock setting, if you press status. , the oven will return to the previous Microwave Cooking The longest cooking time is 95 minutes. You can select a power level by pressing . Press once twice 3 times 4 times 5 times Display P100 P80 P50 P30 P10 Cooking Power 100% 80% 50% 30% 10% 12 GB Example: Choose 80% power for cooking 20 minutes. Again or turn to choose 80% microwave power.

Press NOTE: You can check the cooking power during cooking by pressing During microwave cooking, each press of seconds of cooking time. Speed Cooking In standby state, press to cook with 100% power level for 30 . can increase 30 to confirm. To set the cooking time until "20:00" is shown on the display. Each press of the button will increase the cooking time by 30 seconds.

The longest cooking time is 95 minutes. In standby state, turn anticlockwise to choose cooking time then press to cook with 100% microwave power. Defrosting by Weight The oven could be used to defrost food based on the weight selected. @@The frozen food weight ranges from 100g to 2000g. To select the desired food weight.

The default power level is P30. Repeatedly press or turn to select the weight of food. Repeatedly press or turn to select the weight of food. @@Defrosting can only be set in the first stage. nOTE: Auto cooking cannot be selected in a cooking program. @@@@To select the microwave power level bo rre . B e to select the cooking time until "7:00" displays. to start cooking. NOTE: After one cooking stage is finished, a beep sound is heard, indicating the next cooking stage has begun. Set a cooking program with up to two stages.

Defrost cannot be set as the cooking program. To adjust hour digits, the input hour should be a 24-hour time , ttive 2002/96/EC (WEEE). The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment display the chemical symbol Hg, Cd, or Pb, then it means that the battery has a heavy metal content of more than 0. We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development. This instruction book is also available at <http://www.supportdesrouleaux.com>. Enlevez le support des rouleaux et nettoyez-le avec de l'eau savonneuse au moins une fois par semaine pour empêcher que la graisse accumulée ne gêne la rotation des roues. .



[You're reading an excerpt. Click here to read official HITACHI](#)

[MDE25 user guide](#)

<http://yourpdfguides.com/dref/5915759>