



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI MGE25. You'll find the answers to all your questions on the HITACHI MGE25 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI MGE25
User guide HITACHI MGE25
Operating instructions HITACHI MGE25
Instructions for use HITACHI MGE25
Instruction manual HITACHI MGE25

MICROWAVE OVEN

HITACHI
Inspire the Next

MODEL MGE25



INSTRUCTION MANUAL



[You're reading an excerpt. Click here to read official HITACHI MGE25 user guide](http://yourpdfguides.com/dref/4208546)
<http://yourpdfguides.com/dref/4208546>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 7 TURNTABLE INSTALLATION

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 7 COUNTERTOP INSTALLATION

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 8 MICROWAVE OVEN INSTALLATION

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 8 CONTROL PANEL.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 9 OPERATION ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

10 CLEANING AND MAINTENANCE

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 14 SPECIFICATIONS.

.....
.....
.....

.....
.....
.....

.....
.....

.....
.....
.....
.....
.....
.....
.... 15 QUESTIONS AND ANSWERS

.....
.....
.....
.....
.....
.....
.....

.....
.....
.....
..... 16 TROUBLESHOOTING .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.....
.. 17 BEFORE YOU CALL FOR SERVICE..
.....

.....
.....
.....
.....
.....
.....
.....

.....
.. 18 IMPORTANT DISPOSAL INSTRUCTIONS..
.....
.....

.....
.....
.....
.....

.....
.....
.....
..... 18 WARRANTY ..

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

19 1 GB ELECTRICAL CONNECTION (UK ONLY) For your safety please read the following information. Warning: This appliance must be earthed. The appliance must be connected to a 230 volts 50 cycle AC supply. @@@@The mains plug must not be cut off. If you wish to extend the lead, obtain an appropriate safety approved extension lead or consult your dealer. Observe the manufacturers instructions when connecting extension leads to the set. Check the fuse rating on the new plug; this should be fitted with a 13 Amp fuse which conforms to either ASTA or BSI (BS1362) approvals, these are easily identifiable by either the or symbols. If you are in any doubt about the installation of an extension lead, please consult a competent electrician. Power Cord Do not place the appliance, a piece of furniture, etc. on the power cord (mains lead) or pinch the cord.

Handle the power cord by the plug. Do not unplug the appliance by pulling from the power cord and never touch the power cord with wet hands as this could cause a short circuit or electric shock. Never make a knot in the cord or tie it with other cords. The power cords should be placed in such a way that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electric shock.

When it is damaged and needs to be replaced, it should be done by qualified personnel in order to prevent a hazard. **2 GB IMPORTANT SAFETY INSTRUCTIONS PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY** The oven cannot be operated with the door open due to the safety interlocks built in the door mechanism which switch off cooking functions when the door is opened. Operating the oven with the door open could result in harmful exposure to microwave energy. It is important not to tamper with the door mechanism. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the door (bent), or hinges and latches (broken or loosened), or the door seals and sealing surfaces. The oven should not be adjusted or repaired by anyone except qualified personnel. Read these instructions carefully and keep them for future reference. Only use utensils that are suitable for use in microwave ovens. When heating food in plastic or paper containers keep an eye on the oven due to the possibility of ignition. @@@@The oven should be cleaned regularly and any food deposits removed. @@Only use a temperature probe recommended for this oven. Avoid using straight-sided containers with narrow necks. @@@@

WARNINGS: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy. Liquids and other foods must not be heated in sealed containers since they are liable to explode. Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use. This appliance is intended for domestic use only; any other use may invalidate the warranty and might be dangerous. When the microwave is switched off it is NOT disconnected from the mains, to do this you must remove the plug from the mains supply outlet. The plug shall be the main disconnect device and shall remain operable at all times. The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet. Please refer to the installation instructions on page 8. The appliances are not intended to be operated by means of an external timer or separate remote-control system. **COOKING UTENSILS** Utensils should be checked to ensure that they are suitable for use in the microwave oven.

Materials you can use in microwave oven Utensils Remarks Shielding only. Small smooth pieces can be used to cover Aluminium foil thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil 4 GB Browning dish should be at least 2.5cm away from oven walls.

Follow manufacturer's instructions. The bottom of browning dish must be at least 5mm above the turntable. Incorrect usage may cause the turntable to break. Microwave-safe only. Follow manufacturer's instructions.

Do not use cracked or chipped dishes. Always remove lid. Use only to heat food until it's warm. Most glass jars are not heat resistant and may break. Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.

Use for short-term cooking/warming only. Do not leave oven unattended while cooking. Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only. Use as a cover to prevent splattering or a wrap for steaming. Microwave-safe only. Follow the manufacturer's instructions. Should be labelled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.

Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. Microwave-safe only (meat and candy thermometers). Use as a cover to prevent splattering and retain moisture.

Dinnerware Glass jars Glassware Oven cooking bags Paper plates and cups Paper towels Parchment paper Plastic Plastic wrap Thermometers Wax paper Materials to be avoided in microwave oven @@Utensils Remarks May cause arcing. Transfer food into microwave-safe Aluminium tray dish. Food carton

with May cause arcing. Transfer food into microwave-safe dish. metal handle Metal shields the food from microwave energy.
Metal trim Metal or metaltrimmed utensils may cause arcing. May cause arcing and could cause a fire in the oven. Metal twist ties May cause a fire in the oven. Paper bags Plastic foam may melt or contaminate the liquid inside Plastic foam when exposed to high temperature. Wood will dry out when used in the microwave oven and Wood may split or crack. 5 GB Notes: Care should be taken when removing utensils or the glass turntable, as they may become hot during cooking. @@@@For Best Results: 1. @@It is easy to overcook food because microwaves cook very quickly. 2. @@Defrosting Frozen Food: 1.

@@(Be certain to remove any metallic ties or wraps). 2.



[You're reading an excerpt. Click here to read official HITACHI](#)

[MGE25 user guide](#)

<http://yourpdfguides.com/dref/4208546>

@@3. @@This helps slow down or stop the defrosting process. 4. Some foods should not be completely thawed before cooking. @@5. @@Note: Air from the vent may become warm during cooking. @@@@Never place the glass tray upside down. The glass tray should never be restricted.
b. @@c. @@d. @@@@If no operation, it will continue working. @@The longest cooking time is 95 minutes.

Example: Use combination C-1 to cook for 40 minutes. 1. Press and 2. Press 3. Turn 4.

Press repeatedly until "C-1" shows on the display. indicator lights will come on. to confirm. to set the cooking time until "40:00" shows on the display. to start cooking. Press once twice three times and indicator lights will flash. @@@@The frozen food weight ranges from 100g to 2000g. 1. Press . " dEF1 " will show on the display.

and 2. @@ "g" will come on. and to start defrosting. "g" will go out , 3. @@1. Press and 2. Turn 3. Press " dEF2 " will show on the display. @@to start defrosting. @@The longest cooking time is 95 minutes.

@@@@Take the following steps: 1. In standby state, turn to choose the desired menu. 2. Press 3. Turn to confirm.

to choose weight. 4. @@@@Defrosting can only be set in the first stage. @@Press 2. Turn 3.

Press 4. Press , " dEF2 " appears on the display. to select the defrosting time until "5inside the yolk membrane. @@Never cook eggs without piercing their shells. Q. @@A. Standing time is very important. With microwave cooking, the heat is in the food, not in the oven. Many foods build up enough internal heat to allow the cooking process to continue, even after the food is removed from the oven. Standing time for joints of meat, large vegetables and cakes is to allow the inside to cook completely, without overcooking the outside.

Q. Why does my oven not always cook fast as the microwave cooking guide says? A. Check your cooking guide again, to make sure you've followed directions exactly and to see what might cause variations in cooking times. @@@@Q. Why do sparks and crackling (arcing) occur in the oven? A. @@@* You have left a fork or other metal utensils in the oven. * You are using dishes with metal parts or trim (silver or gold). * You are using a large amount of metal foil. *

You are using a metal twist tie. TROUBLESHOOTING Normal Radio and TV reception may be affected when the microwave oven is operating.

It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner and electric fan. It is normal. Dim oven light In low power microwave cooking, the oven light may become dim. It is normal. Steam accumulating on door, In cooking, steam may come out of food.

hot air out of vents Most will escape from the vents. But some may accumulate on a cool place like the oven door. It is normal. Oven started accidentally It is forbidden to run the unit without any with no food in. food inside.

It is very dangerous. Microwave oven interfering TV reception Remedy Unplug. Then plug in again after 10 seconds. Replace fuse or reset circuit breaker Oven can not be (repaired by started. professional personnel of authorised agent) (3) Trouble with outlet. Test outlet with other electrical appliances. Oven does not heat. Door not closed well. Close door well. Glass turntable makes Dirty roller rest and oven Refer to CLEANING bottom.

AND CARE' to clean noise when dirty parts. microwave oven operates. Trouble Possible Cause (1) Power cord not plugged in tightly. (2) Fuse blowing or circuit breaker works. 17 GB BEFORE YOU CALL FOR SERVICE Refer to the following short checklist. @@A couple of quick checks may save you an unnecessary service call. Problem The oven doesn't work at all. @@- The door is firmly closed and the door hooks are not broken. - The cooking time is set on the timer selector control. - The mains circuit breaker in the home has tripped.

Problem "Arcing" or sparking in the oven interior. @@@@If "arcing" occurs again, remove skewers until food is cooked. - Remove any other metal cookware. IMPORTANT DISPOSAL INSTRUCTIONS As a responsible retailer we care about the environment. As such we urge you to follow the correct disposal procedure for your product and packaging materials.

This will help conserve natural resources and ensure that it is recycled in a manner that protects health and the environment. You must dispose of this product and its packaging according to local laws and regulations. Because this product contains electronic components, the product and its accessories must be disposed of separately from household waste when the product reaches its end of life. Contact your local authority to learn about disposal and recycling. The product should be taken to your local collection point for recycling.

Some collection points accept products free of charge. The above mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. 18 GB MGE25 Warranty Kesa Electricals UK, HU1 3AU 18/05/2010 19 .



[You're reading an excerpt. Click here to read official HITACHI](http://yourpdfguides.com/dref/4208546)

[MGE25 user guide](http://yourpdfguides.com/dref/4208546)

<http://yourpdfguides.com/dref/4208546>