



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI MICRODRIVE 3K6. You'll find the answers to all your questions on the HITACHI MICRODRIVE 3K6 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HITACHI MICRODRIVE 3K6
User guide HITACHI MICRODRIVE 3K6
Operating instructions HITACHI MICRODRIVE 3K6
Instructions for use HITACHI MICRODRIVE 3K6
Instruction manual HITACHI MICRODRIVE 3K6

HITACHI

Inspire the Next



Quick Installation Guide

Hitachi 3K6 Microdrive

CF+ Type II
Models: HMS360606D5CF00
HMS360604D5CF00
HMS300603D5CF00

Quick installation procedure

Note: Back up all data before beginning installation!
Refer to the manual that came with your computer, camera, or other device to determine if it is compatible with the CF+ Type II or the PC card type II drive/Interface adapter and to find instructions on inserting and removing the Hitachi Microdrive.

- Using the Hitachi Microdrive with a PC card adapter
With a PC card adapter the Hitachi Microdrive can be installed in devices such as digital cameras or PCs that have a PC card type II slot. If your Microdrive did not come with a PC card, it can be purchased separately.

With both facing upward (the arrow at the upper left corner of the Microdrive), slide the Hitachi Microdrive firmly along the track into the PC card adapter. [If either is not facing upward, the Microdrive will not fit into the track.]

Note: When inserting or removing the PC card, hold the PC card, not the Hitachi Microdrive.

- Using the Hitachi Microdrive without a PC card adapter
The Hitachi Microdrive is compatible with the CF+ Type II standard and can be used in devices with the CF+ Type II slot without a card adapter. Refer to the manual shipped with the device to determine its slot type.

If your PC does not recognize the Hitachi Microdrive
With the Plug & Play feature of Windows® XP and 2000 your PC should automatically recognize the Hitachi Microdrive. If it does not do so, do the following:

- In Windows select Start and Settings.
- Click Control Panel.
- Click the Hardware icon, click Next.
- Select No in the Hardware Wizard, click Next.
- Select Hard disk controller as the hardware type, click Next.
- Specify Standard (IDE/ESD) hard disk controller.

Page 1version 1.0



[You're reading an excerpt. Click here to read official HITACHI MICRODRIVE 3K6 user guide](http://yourpdfguides.com/dref/2839425)
<http://yourpdfguides.com/dref/2839425>

Manual abstract:

· Do not press on the drive! Do not apply any force to the drive during handling or installation. · Always handle the drive with care to prevent damage from shock, vibration, or electrostatic discharge (ESD). · Handle the drive carefully by the edges. Do not touch any exposed printed circuit board. · Do not write on the label or remove it. Do not apply additional labels. · Always carry the drive in its plastic case. · Do not drop the drive. · Do not expose the drive to wet conditions. · Do not place the drive near a strong magnetic field.

· Do not expose the drive to extreme temperatures. · Do not use the drive in CF+TM Type II slots without an ejection mechanism. · The Microdrive may become hot during operation. Be careful when removing the drive from the host device immediately after operation. Quick installation procedure Note: Back up all data before beginning installation! Refer to the manual that came with your computer, camera, or other device to determine if it is compatible with the CF+ Type II or the PC card type II drive/interface adapter and to find instructions on inserting and removing the Hitachi Microdrive.

Using the Hitachi Microdrive with a PC card adapter With a PC card adapter the Hitachi Microdrive can be installed in devices such as digital cameras or PCs that have a PC card type II slot. @@@@If it does not do so, do the following: 1. 2. 3. 4.

5. 6. In Windows select Start and Settings. Click Control Panel. Click the Hardware icon, click Next. Select No in the Hardware Wizard, click Next. Select Hard disk controller as the hardware type, click Next. @@@@References in this publication to Hitachi Global Storage Technologies products, programs or services do not imply that Hitachi Global Storage Technologies intends to make these available in all countries in which Hitachi Global Storage Technologies operates. Product information is provided for information purposes only and does not constitute a warranty. Information is true as of the date of publication and is subject to change.

Actual results may vary. This publication is for general guidance only. Photographs may show design models. .



[You're reading an excerpt. Click here to read official HITACHI MICRODRIVE 3K6 user guide](http://yourpdfguides.com/dref/2839425)
<http://yourpdfguides.com/dref/2839425>