



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HITACHI TRAVELSTAR 5K160. You'll find the answers to all your questions on the HITACHI TRAVELSTAR 5K160 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HITACHI TRAVELSTAR 5K160**  
**User guide HITACHI TRAVELSTAR 5K160**  
**Operating instructions HITACHI TRAVELSTAR 5K160**  
**Instructions for use HITACHI TRAVELSTAR 5K160**  
**Instruction manual HITACHI TRAVELSTAR 5K160**

Hitachi Global Storage Technologies

## HITACHI

Inspire the Next

Quick Installation Guide  
**Hitachi Travelstar™ (E)5K160**  
2.5-inch ATA/IDE & SATA Hard Disk Drive

Models:

HTS(E)541616J9AT00	HTS(E)541616J9SA00
HTS(E)541612J9AT00	HTS(E)541612J9SA00
HTS(E)541660J9AT00	HTS(E)541660J9SA00
HTS(E)541660J9AT00	HTS(E)541660J9SA00
HTS(E)541640J9AT00	HTS(E)541640J9SA00

**Handling precautions**

- Wear a grounded wrist strap while handling the drive to prevent damage from Electrostatic Discharge (ESD).
- Set the drive down gently to prevent damage from impact or vibration.
- Do not open the ESD bag containing the drive until needed.
- Handle the drive carefully by the edges. Do not touch the exposed printed circuit board or any electronic components.
- Do not press on the top or bottom of the drive.
- Do not cover the drive's breather hole.

**Quick installation**

Installation of this Hitachi Travelstar drive in some notebooks may require use of unique hardware (such as mounting trays, connecting cable, insulating material). If you are uncertain if hardware is needed, consult your notebook manufacturer as this operation may require a qualified technician.

Back up all data before proceeding with installation.

**1. Set the jumpers (ATA/IDE only)**

- **Master drive.** No jumper is required if the drive is the only drive in a system or the Master drive in a two-drive system.
- **Slave drive.** If this is the Slave drive in a system, place a jumper in setting A2. (See the A2 setting in the illustration.)
- **Cable Select.** Setting A3 in the illustration. Consult the system manual to see if your computer supports Cable Select.

**Jumper settings (ATA/IDE only)**

**2. Attach the drive**

For assistance on the physical installation of the drive, consult your system manual.

**3. Configure the computer**

1. Turn on the computer.
2. Enter Setup.

Page 1

Travelstar (E)5K160



[You're reading an excerpt. Click here to read official HITACHI TRAVELSTAR 5K160 user guide](http://yourpdfguides.com/dref/2839349)  
<http://yourpdfguides.com/dref/2839349>

**Manual abstract:**

· Do not open the ESD bag containing the drive until needed. · Handle the drive carefully by the edges. Do not touch the exposed printed circuit board or any electronic components. · Do not press on the top or bottom of the drive. · Do not cover the drive's breather hole. 1. Set the jumpers (ATA/IDE only) · Master drive. No jumper is required if the drive is the only drive in a system or the Master drive in a two-drive system. · Slave drive. If this is the Slave drive in a system, place a jumper in setting A2.

(See the A2 setting in the illustration.) · Cable Select. Setting A3 in the illustration. Consult the system manual to see if your computer supports Cable Select. Jumper settings (ATA/IDE only) Quick installation \_\_\_\_\_ Installation of this Hitachi Travelstar drive in some notebooks may require use of unique hardware (such as mounting trays, connecting cable, insulating material).

If you are uncertain if hardware is needed, consult your notebook manufacturer as this operation may require a qualified technician. Back up all data before proceeding with installation. 2. Attach the drive For assistance on the physical installation of the drive, consult your system manual. 3.

Configure the computer 1. Turn on the computer. 2. @@Go to Hard Disk Drive Configuration. 4. Select Autodetect if it is available. 5. @@6. Save the settings and exit. 7.

@@Travelstar™ is a trademark of Hitachi Global Storage Technologies. @@@@Actual results may vary. This publication is for general guidance only. Photographs may show design models. 20 September 2006 4. Partition and format · FDISK.EXE and FORMAT.EXE (or a similar partitioning software from the operating system) Follow the instructions provided with your operating system to partition the drive. If FDISK.EXE recognizes only 8.4 GB of a drive, the BIOS may not support Interrupt 13 Extensions. Format the drive by following the instructions provided with FORMAT.EXE. Formatting will verify the hard disk media and create file allocation tables for the partition. 5.

Boot up the computer If the system does not boot up after the installation of the drive, check all the settings. .



[You're reading an excerpt. Click here to read official HITACHI TRAVELSTAR 5K160 user guide](http://yourpdfguides.com/dref/2839349)  
<http://yourpdfguides.com/dref/2839349>