



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HONEYWELL FR124. You'll find the answers to all your questions on the HONEYWELL FR124 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HONEYWELL FR124**  
**User guide HONEYWELL FR124**  
**Operating instructions HONEYWELL FR124**  
**Instructions for use HONEYWELL FR124**  
**Instruction manual HONEYWELL FR124**


**Honeywell**

## FR124

### Combustion Regulator

FOR SOLID FUEL AND MULTI-FUEL BOILERS

PRODUCT DATA



**Application**  
The FR124 Combustion Regulator opens and closes the air intake flap of solid fuel boilers in proportion to the low temperature.

**Features**

- Design tested to DIN 3440 (Test No. FR 108701)
- Scale for horizontal and vertical installation.
- 120 mm lever rod fitted as standard
- Compact construction

**Range of Application**  
For solid fuel and multi-fuel heating installations to DIN 4751

**Specifications**

Setting range	35-90 °C (86-194 °F)
Permissible sensor temperature	max. 115 °C (239 °F)
Connection size	G 3/4"
Chain length	1 m

**Design**  
The FR 124 Combustion Regulator consists of:

- Housing
- Adjuster knob
- Sensor pocket
- Lever rod
- Chain
- Wax thermostat
- Return spring

**Materials**

- High-quality synthetic material housing and adjuster knob
- Brass sensor pocket
- Galvanized steel lever rod
- Galvanized steel chain

Copyright ©2002 Honeywell AG - All rights reservedENQH-01793E25 R0002



[You're reading an excerpt. Click here to read official HONEYWELL FR124 user guide](http://yourpdfguides.com/dref/3072606)  
<http://yourpdfguides.com/dref/3072606>

