



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT AML 125. You'll find the answers to all your questions on the HOTPOINT AML 125 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT AML 125
User guide HOTPOINT AML 125
Operating instructions HOTPOINT AML 125
Instructions for use HOTPOINT AML 125
Instruction manual HOTPOINT AML 125

Instructions for use

WASHER-DRYER

GB

English,1

AML 125

Contents

GB

Installation, 2-3

Unpacking and leveling, 2
Electric and water connections, 2-3
The first wash cycle, 3
Technical details, 3

Washer-dryer description, 4-5

Control panel, 4
Leds, 5

Starting and Programmes, 6

Briefly, how to start a programme, 6
Programme table, 6

Personalisations, 7

Setting the temperature, 7
Set the drying cycle, 7
Functions, 7

Detergents and laundry, 8

Detergent dispenser, 8
Preparing your laundry, 8
Special items, 8
Woolmark Platinum Care, 8

Precautions and advice, 9

General safety, 9
Disposal, 9
Saving energy and respecting the environment, 9

Care and maintenance, 10

Cutting off the water or electricity supply, 10
Cleaning your appliance, 10
Cleaning the detergent dispenser, 10
Caring for your appliance door and drum, 10
Cleaning the pump, 10
Checking the water inlet hose, 10

Troubleshooting, 11

Service, 12
Before calling for Assistance, 12



[You're reading an excerpt. Click here to read official HOTPOINT AML 125 user guide](http://yourpdfguides.com/dref/4691712)
<http://yourpdfguides.com/dref/4691712>

Manual abstract:

Should the appliance be sold, transferred or moved, make sure the instruction manual accompanies the Washer-dryer to inform the new owner as to its operation and features. Read these instructions carefully: they contain vital information on installation, use and safety. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. If it is placed on a fitted or loose carpet, adjust the feet in such a way as to allow enough room for ventilation beneath the Washerdryer. Unpacking and levelling Unpacking Electric and water connections Connecting the water inlet hose 1. Unpack the Washer-dryer. 2. Check whether the Washer-dryer has been damaged during transport. If this is the case, do not install it and contact your retailer. 3.

Remove the four protective screws and the rubber washer with the respective spacer, situated on the rear of the appliance (see figure). 1. Both pipes may be connected to the cold water tap using the special Y connection with multiple attachments, supplied with the appliance (see figure). Before making the connection, allow the water to run freely until it is perfectly clear. 2.

Connect the other end of the water inlet hose to the Washer-dryer, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure). 3. Make sure there are no kinks or bends in the hose. 4. Seal the gaps using the plastic plugs provided.

5. The power supply cable must only be replaced by an authorised serviceman. Warning! The company denies all liability if and when these norms are not respected. 65 - 100 cm Description The first wash cycle alternatively, place it over the edge of a basin, sink or tub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, setting the 90°C programme without a pre-wash cycle. Programmes case of absolute need, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Electric connection We advise against the use of hose extensions; in Technical details Model AML 125 59.

5 cm wide 85 cm high 53.5 cm deep from 1 to 5 kg for the wash programme; from 1 to 4 kg for the drying programme voltage 230/240 Volts 50 Hz maximum absorbed power 2050 W maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 46 litres Detergents Dimensions Capacity Electric connections Water connections Spin speed Precautions Before plugging the appliance into the mains socket, make sure that: the socket is earthed and in compliance with the applicable law; the socket is able to sustain the appliance's maximum power load indicated in the Technical details table (on the right); the supply voltage is included within the values indicated on the Technical details table (on the right); the socket is compatible with the washer dryer's plug. If this is not the case, replace the socket or the plug. outdoor environment, not even when the area is sheltered, because it may be very dangerous to leave it exposed to rain and thunderstorms. Care up to 1200 rpm Wash: programme 3; temperature 60°C; run with a load of 5 kg. LEADS: to find out which wash cycle phase is under way. DRYING knob: to set the desired drying cycle (see page 7). FUNCTION buttons: to select the functions available.

START/STOP button: to turn the Washer-dryer on and off. ON-OFF/DOOR LOCK Led: to find out whether the Washer-dryer is on and if the appliance door can be opened (see page 5). PROGRAMME knob: to select the wash programmes. The retractable control knob: press the centre of the knob for it to pop out. The knob stays still during the cycle.

4 Leds The LEADS provide important information. This is what they can tell you: Delay set: If the Delay Timer function has been enabled (see page. 7), once you have started the programme, the LED corresponding to the delay set will begin to flash: Cycle phase under way: During the wash cycle, the LEADS gradually illuminate on to indicate the cycle phase under way: Prewash / Wash Rinse Spin cycle Drying Note: - during draining, the LED corresponding to the Spin cycle phase will be turned on. - when the drying cycle is complete, the indicator light will flash, to indicate that the relative to phase DRYING knob needs to be set back to the 0 setting. Function buttons The FUNCTION BUTTONS also act like LEADS.

When a function is selected, the corresponding button is illuminated. If the function selected is incompatible with the programme set, the button will flash and the function will not be enabled. If you set a function that is incompatible with another function you selected previously, only the last one selected will be enabled. GB Installation Description Programmes As time passes, the remaining delay will be displayed, and the corresponding LED will flash: Detergents Once the set delay is complete, the flashing LED will turn off and the programme set will start. Precautions Care Troubleshooting ON-OFF/DOOR LOCK led: If this LED is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damages, wait for the LED to flash before you open the appliance door. Service The rapid flashing of the ON-OFF/DOOR LOCK Led together with the flashing of at least one other LED indicates there is an abnormality. Call for Technical Assistance. 5 Starting and Programmes GB Briefly: starting a programme 1. Switch the Washer-dryer on by pressing button . All the LEADS will light up for a few seconds and the ON-OFF/DOOR LOCK Led will begin to flash.

2. Load your laundry into the Washer-dryer and shut the appliance door. 3. Set the PROGRAMME knob to the programme required. 4. Set the wash temperature (see page 7). 5. Detergent Prewash Wash 6. Add the detergent and any fabric softener (see page 8). 7.

Start he programme by pressing the START/RESET button. The information contained in the table is purely indicative. By setting this programme (8 at 30°C), you can wash different fabrics together (except for woollen and silk items), with a maximum load of 3 kg. We recommend the use of liquid detergent.

6 Personalisations Setting the temperature GB Installation Turn the TEMPERATURE knob to set the wash temperature (see Programme table on page 6). The temperature can be lowered, or even set to a cold wash (). Turn the DRYING knob to set the desired use a specific detergent, taking care not to exceed a load of 1 kg. Woolmark Platinum Care compartment 1: Detergent for pre-wash (powder) compartment 2: Detergent for the wash cycle (powder or liquid) Liquid detergent should only be poured in immediately prior to the wash cycle start. As gentle as a hand wash.

- the colours: separate coloured garments from whites. Empty all pockets and check for loose buttons.



[You're reading an excerpt. Click here to read official HOTPOINT AML 125 user guide](http://yourpdfguides.com/dref/4691712)
<http://yourpdfguides.com/dref/4691712>

@@It is enabled in programmes 5 - 6 - 7 - 10 and Delicate rinse cycle. To conclude the cycle, press the START/RESET button.

@@@@@@@@@@@@@@@@Pull the plug out yourself. @@@@@@@@@@@@@@The appliance door tends to get quite hot during the wash cycle. @Never try to do this alone, because the appliance is very heavy. @During the drying phase, the door tends to get quite hot. @trichlorethylene). Do not use the appliance to dry foam rubber or similar elastomers.

@@@Saving on detergent, water, energy and time To avoid wasting resources, the Washer-dryer should be used with a full load. A full load instead of two half loads allows you to save up to 50% on energy. The pre-wash cycle is only necessary on extremely soiled items between 65 and 100 cm from the floor (see page 3). The free end of the hose is underwater (see page 3). The wall drainage system doesn't have a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and call for Assistance. @@@@@@@@@The drain hose is bent (see page 3). The drain duct is clogged. @The Washer-dryer is not level (see page 2). @The water inlet hose is not screwed on correctly (see page 2).

The detergent dispenser is obstructed (to clean it, see page 10). The drain hose is not secured properly (see page 3). Call for Assistance because this means there is an abnormality. Detergents The Washer-dryer does not drain or spin. Precautions The Washer-dryer vibrates too much during the spin cycle.

Care The Washer-dryer leaks. The ON-OFF/DOOR LOCK Led flashes rapidly at the same time as at least one other LED. There is too much foam.

Troubleshooting The detergent is not suitable for machine washing (it should bear the definition "for Washing-machine" or "hand and machine wash", or the like). You used too much detergent.

□□□□ The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The appliance door is not shut properly. A delayed start has been set (using the Delay Timer, see page 7), the DRYING knob is on the 0 setting. The washer-dryer does not dry. Service 11 Service GB 195042276.01 02/2004 - Xerox Business Services Before calling for Assistance: □ Check whether you can solve the problem on your own (see page 11); □ Restart the programme to check whether the problem has been solved; □ If this is not the case, contact an authorised Technical Service Centre on the telephone number provided on the guarantee certificate. □ Always request the assistance of authorised servicemen. Notify the operator of: □ the type of problem; □ the appliance model (Mod.

); □ the serial number (S/N); This information can be found on the data plate situated on the rear of the Washer-dryer. Service 12 .



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[AML 125 user guide](#)

<http://yourpdfguides.com/dref/4691712>