



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT AML105K S 60 HZ. You'll find the answers to all your questions on the HOTPOINT AML105K S 60 HZ in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT AML105K S 60 HZ  
User guide HOTPOINT AML105K S 60 HZ  
Operating instructions HOTPOINT AML105K S 60 HZ  
Instructions for use HOTPOINT AML105K S 60 HZ  
Instruction manual HOTPOINT AML105K S 60 HZ

## Instructions for use

WASHER DRYER

**GB**  
English, 1

**F**  
Français, 13

**AR**  
عربي, 25

AML 105 K S

### Contents

#### Installation, 2-3

Unpacking and levelling  
Connecting the electricity and water supplies  
The first wash cycle  
Technical data

#### Description of the washer-dryer and starting a wash cycle, 4-5

Control panel  
Indicator lights  
Starting a wash cycle

#### Wash cycles, 6

Table of wash cycles

#### Personalisation, 7

Setting the temperature  
Setting the drying cycle  
Functions

#### Detergents and laundry, 8

Detergent dispenser drawer  
Bleach cycle  
Preparing the laundry  
Garments requiring special care  
Load balancing system

#### Precautions and tips, 9

General safety  
Disposal  
Opening the porthole door manually

#### Care and maintenance, 10

Cutting off the water or electricity supply  
Cleaning the washer-dryer  
Cleaning the detergent dispenser drawer  
Caring for the door and drum of your appliance  
Cleaning the pump  
Checking the water inlet hose

#### Troubleshooting, 11

#### Service, 12

 ARISTON

1



[You're reading an excerpt. Click here to read official HOTPOINT AML105K S 60 HZ user guide](http://yourpdfguides.com/dref/4686157)  
<http://yourpdfguides.com/dref/4686157>

### Manual abstract:

Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washer-dryer from its packaging. 2. Make sure that the washer-dryer has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). a 1. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded opening (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear.

2. Connect the inlet hose to the washer-dryer by screwing it onto the corresponding water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure). 4. Close off the holes using the plastic plugs provided. 5.

Keep all the parts in a safe place: you will need them again if the washer-dryer needs to be moved to another location. 3. Make sure that the hose is not folded over or bent.  Packaging materials should not be used as toys for children. Levelling  The water pressure at the tap must fall within the values indicated in the Technical details table (see next page).

If the inlet hose is not long enough, contact a specialised shop or an authorised technician.  Never use second-hand hoses.  Use the ones supplied with the machine. 1. Install the washer-dryer on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. 2 Connecting the drain hose  Do not use extension cords or multiple sockets. @@@@ warning! @@@@The free end of the hose should not be underwater. Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle I.

We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. electrical connections Technical data Model AML 105 K S width 59. 5 cm height 85 cm depth 53,5 cm from 1 to 7 kg for the wash programme; from 1 to 5 kg for the drying programme please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 52 litres up to 1000 rotations per minute Wash: programme 6; temperature 60°C; using a load of 7 kg. Drying: first drying cycle performed with a 2 kg load, by selecting the dryness level. The second drying cycle is performed with a 5 kg load, by selecting the dryness level. This appliance conforms to the following EC Directives: - 89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications - 2002/96/EC - 2006/95/EC (Low Voltage) Before plugging the appliance into the electricity socket, make sure that:  the socket is earthed and complies with all applicable laws;  the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite);  the power supply voltage falls within the values indicated in the Technical data table (see opposite);  the socket is compatible with the plug of the washer-dryer. If this is not the case, replace the socket or the plug. Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 50229  The washer-dryer must not be installed outdoors, even in covered areas.

It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions.  When the washer-dryer has been installed, the electricity socket must be within easy reach. 3 Description of the washer-dryer and starting a wash cycle GB Control panel WASH CYCLE PROGRESS/ DELAY TIMER indicator lights ON/OFF button DRYING TEMPERATURE knob knob DOOR LOCKED indicator light Detergent dispenser drawer FUNCTION WASH CYCLE knob buttons with indicator lights START/PAUSE button with indicator light Detergent dispenser drawer: used to dispense detergents and washing additives (see Detergents and laundry). During the wash cycle, the knob does not move. FUNCTION buttons with indicator light: used to select the available functions.

The indicator light corresponding to the selected function will remain lit. @@@@The illuminated indicator light shows which phase is in progress. @@@@This is what they can tell you: Delayed start If the DELAY TIMER function has been activated (see Personalisation), after the wash cycle has been started the indicator light corresponding to the selected delay period will begin to flash: Wash cycle phase indicator lights Once the desired wash cycle has been selected and has begun, the indicator lights switch on one by one to indicate which phase of the cycle is currently in progress.

Wash Rinse Spin Drying End of wash cycle Note: as soon as a drying level or time period has been set, this indicator light illuminates to indicate that the selected wash cycle will be followed by a drying phase. GB Note: during the "Drain" phase, the indicator light corresponding to the "Spin" cycle phase will illuminate.

Function buttons and corresponding indicator lights When a function is selected, the corresponding indicator light will illuminate. If the selected function is not compatible with the programmed wash cycle, the corresponding indicator light will flash and the function will not be activated. If a function which is incompatible with another function selected previously, only the most recent selection will remain active. Door locked indicator light If this indicator light is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damage, wait for the indicator light to switch off before you open the appliance door. If the DELAY TIMER function is activated, the door cannot be opened; pause the machine by pressing the START/PAUSE button if you wish to open it. As time passes, the remaining delay will be displayed and the corresponding indicator light will flash: Once the set delay has elapsed, the flashing indicator light will switch off and the selected wash cycle will begin.  If the START/PAUSE indicator light (orange) flashes rapidly at the same time as the function indicator light, this indicates a problem has occurred (see Troubleshooting). Starting a wash cycle 1. Switch the washer-dryer on by pressing the ON/OFF button. All indicator lights will switch on for a few seconds, then they will switch off and the START/PAUSE indicator light will pulse.

2. Load the laundry and close the door.



[You're reading an excerpt. Click here to read official HOTPOINT AML105K S 60 HZ user guide](http://yourpdfguides.com/dref/4686157)  
<http://yourpdfguides.com/dref/4686157>

3. Set the WASH CYCLE knob to the desired programme. Set the drying cycle if necessary (see □Personalisation□). Start the wash cycle by pressing the START/PAUSE button and the corresponding indicator light will remain lit in a fixed manner, in green. To cancel the set wash cycle, pause the machine by pressing the START/PAUSE button and select a new cycle. indicator light will switch on. The DOOR LOCKED indicator light will switch 9. At the end of the wash cycle the off, indicating that the door may be opened.

Take out your laundry and leave the appliance door ajar to make sure the drum dries completely. Switch the washer-dryer off by pressing the ON/OFF button.

5 Wash cycles GB Table of wash cycles Wash cycles Description of the wash cycle Max. Mix 30': To refresh lightly soiled garments quickly (not suitable for wool, 4 silk and clothes which require washing by hand). Mix 15': To refresh lightly soiled garments quickly (not suitable for wool, 5 silk and clothes which require washing by hand).

@@@The information contained in the table is intended as a guide only. specials wash cycles Sanitizing cycle (wash cycle 6). @@@ goodnigt cycle (wash cycle 7). @@The wash cycle is designed for cottons and synthetics. @@ baby cycle (wash cycle 8).

@@@@@How much does your laundry weigh? @@@@ Curtains: these should be folded and placed inside the bag provided. use wash cycle 9. @@@@@ compartment 2: Additives (fabric softeners , etc. ) The fabric softener should not overflow the grid. @@@@@@To complete the cycle press the START/PAUSE button. @@@@This option is recommended only for very soiled cotton garments. @@ Empty all garment pockets and check the buttons. @@@@@@ Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. GB General safety □ This appliance was designed for domestic use only. □ The washer-dryer must only be used by adults, in accordance with the instructions provided in this manual.

□ Do not touch the machine when barefoot or with wet or damp hands or feet. □ Do not pull on the power supply cable when unplugging the appliance from the electricity socket. hold the plug and pull. □ Do not open the detergent dispenser drawer while the machine is in operation. □ Do not touch the drained water as it may reach extremely high temperatures. Never force the porthole door. This could damage the safety lock mechanism designed to prevent accidental opening. □ If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself. □ Always keep children well away from the appliance while it is operating. □ The door can become quite hot during the wash cycle.

□ If the appliance has to be moved, work in a group of two or three people ae □Installation□). □ The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Assistance Service. @@@@@@ □ The drum was not unlocked correctly during installation (see □Installation□). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again.

If the problem persists, contact the Technical Assistance Service. □ The detergent is not suitable for machine washing (it should display the text □for washer-dryers□ or □hand and machine wash□, or the like). Too much detergent was used. □ □ □ □ The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure.

The appliance door is not shut properly. The DRYING knob is on the The washer-dryer does not drain or spin. The washer-dryer vibrates a lot during the spin cycle. the washer-dryer leaks. The START/PAUSE indicator light (orange) and the function indicator lights flash rapidly. There is too much foam. The washer-dryer does not dry. 11 Service GB Before calling for Assistance: □ Check whether you can solve the problem alone (see □Troubleshooting□); □ Restart the programme to check whether the problem has been solved; □ If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. □ Always request the assistance of authorised technicians. Have the following information to hand: □ the type of problem; □ the appliance model (Mod.

); □ the serial number (S/N). This information can be found on the data plate applied to the rear of the washer-dryer, and can also be found on the front of the appliance by opening the door. FR 65 - 100 cm Raccorder le tuyau d'Évacuation, sans le plier, à un conduit d'Évacuation ou à une évacuation murale placés à une distance du sol comprise entre 65 et 100 cm; Premier cycle de lavage ou bien l'Accrocher à un évier ou à une baignoire, dans ce cas, fixer le support en plastique fourni avec l'Appareil au robinet (voir figure). .



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[AML105K S 60 HZ user guide](#)

<http://yourpdfguides.com/dref/4686157>