



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT AQ113D 697 EU/A. You'll find the answers to all your questions on the HOTPOINT AQ113D 697 EU/A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT AQ113D 697 EU/A
User guide HOTPOINT AQ113D 697 EU/A
Operating instructions HOTPOINT AQ113D 697 EU/A
Instructions for use HOTPOINT AQ113D 697 EU/A
Instruction manual HOTPOINT AQ113D 697 EU/A

Instructions for installation and use

WASHING MACHINE

EN

English,1

IT

italiano,13

AQUALTIS

AQ113D 697

Contents

EN

Installation, 2-3

Unpacking and leveling
Connecting the electricity and water supplies
Technical data

Description of the machine, 4-5

Touch control panel

Running a wash cycle, 6

Wash cycles and options, 7

Table of wash cycles
Wash options

Detergents and laundry, 8

Detergent
Preparing the laundry
Washing recommendations

Precautions and advice, 9

General safety
Load balancing system
Disposal
Opening the porthole door manually

Care and maintenance, 10

Cutting off the water and electricity supplies
Cleaning the machine
Cleaning the detergent dispenser drawer
Caring for your appliance drum
Cleaning the pump
Checking the water inlet hose

Trouble shooting, 11

Assistance, 12



[You're reading an excerpt. Click here to read official HOTPOINT AQ113D 697 EU/A user guide](http://yourpdfguides.com/dref/4643163)
<http://yourpdfguides.com/dref/4643163>

Manual abstract:

! If the appliance is levelled correctly, it will be more stable and much less likely to cause vibrations and noise while it is operating, particularly during the spin cycle. ! If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the washing machine.

Connecting the electricity and water supplies

Connecting the water inlet hose ! @ @ 1. @ @ unpacking and levelling Unpacking 1. @ @ @ @ 2. Remove the 4 protective screws (used during transportation) and the corresponding spacer, located on the rear part of the appliance (see figure). 2. Connect the inlet hose by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). 3. Close off the holes using the plastic plugs supplied in the pack.

4. Keep all the parts in a safe place; they will be needed again if the washing machine is moved to another location, to prevent the inside of the appliance being damaged. ! Packaging materials should not be used as toys for children. 3. Make sure that the hose is not folded over or bent.

! The water pressure at the tap must fall within the values indicated in the Technical data table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. ! Never use second-hand or old inlet hoses; use the products supplied with the machine.

levelling 1. Place the washing machine on a flat sturdy floor, without resting it up against walls or cabinets.

2. If the floor is uneven, the front feet of the machine may be adjusted until it reaches a horizontal position (the angle of inclination must not exceed 2 degrees).

2 Connecting the drain hose Connect the drain hose to drain duct piping or a wall drain located between 65 and 100 cm above the floor, making sure it is not bent at all. The cable should not be bent or compressed. ! The power supply cable and plug must only be replaced by authorised technicians.

warning! The company shall not be held responsible in the event that these regulations are not respected. EN 65 - 100 cm Alternatively, rest the drain hose on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length.

technical data Model AQ113D 697 width 59.

5 cm height 85 cm depth 64,5 cm from 1 to 11 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 71 litres up to 1600 rotations per minute

Electrical connections Before plugging the appliance into the electricity socket, make sure that: â the socket is earthed and complies with all applicable laws; â the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); â the power supply voltage falls within the values indicated in the Technical data table (see opposite); â the socket is compatible with the plug of the appliance. If this is not the case, have the socket or the plug replaced. ! The machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! The mains socket must remain within easy reach after the washing machine has been installed.

dimensions Capacity Electrical connections Water connections Spin speed Test Programmes according to 2010/1061 programme programme ; temperature 60Â°C; ; temperature 40Â°C. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC 3 Description of the machine EN PORTHOLE DOOR PORTHOLE DOOR HANDLE CONTROL PANEL KICK STRIP PORTHOLE DOOR Always use the handle to open the porthole door (see figure). washing additives compartment: for fabric softener or liquid additives.

We recommend that the maximum level indicated by the grille is not exceeded, and that concentrated fabric softeners are diluted.

TOUCH CONTROL PANEL To adjust the settings, gently press the icon inside the sensitive (touch control) area as illustrated in the figure.

DETERGENT DISPENSER DRAWER The detergent dispenser drawer is located inside the machine and can be accessed by opening the door. For more information on detergent measures, please refer to the chapter entitled âDetergents and laundryâ.

Standby mode This washing machine, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected.

Press the ON-OFF button briefly and wait for the machine to start up again. Main wash compartment: If liquid detergent is used, it is recommended that the removable plastic partition A (supplied) be used for proper dosage. If powder detergent is used, place the partition into slot B.

4 Touch control panel WASH CYCLE SELECTOR knob M2 M1 START/PAUSE button SPIN button with indicator light TEMPERATURE ECO indicator light WASH CYCLE PHASE icons EN button DISPLAY Button with ON/OFF indicator light M3 OPTION buttons CONTROL PANEL LOCK DELAYED START button button with indicator light DOOR LOCKED indicator light Button with ON/OFF indicator light: press this briefly to switch the machine on or off. The green indicator light indicates that the machine is switched on.

To switch off the washing machine during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled.

WASH CYCLE SELECTOR knob: may be turned in either direction. To select the most suitable wash cycle, please refer to the âTable of wash cyclesâ. The knob will not move during the wash cycle. M1-M2-M3 buttons: press and hold one of the buttons to store a cycle with your own set preferences in the memory of the machine. to recall a previously-stored cycle, press the corresponding button. TEMPERATURE button: press to modify or exclude the temperature setting; the value selected will appear on the display above (see âRunning a wash cycleâ). SPIN CYCLE button: press to modify or exclude the spin cycle; the value selected will appear on the display above (see âRunning a wash cycleâ). DELAYED START button: press to set a delayed start for the selected wash cycle; the set delay time will appear on the display above (see âRunning a wash cycleâ).

oPTION buttons: press to select the available options. The indicator light corresponding to the selected option will remain lit (see âRunning a wash cycleâ). WASH CYCLE PHASE icons: these illuminate to indicate the progress of the wash cycle (Wash â Rinse â Spin â Drain).



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/4643163)

[AQ113D 697 EU/A user guide](http://yourpdfguides.com/dref/4643163)

<http://yourpdfguides.com/dref/4643163>

The text lights up when the cycle is complete. START/PAUSE button with indicator light: when the green indicator light flashes slowly, press the button to start a wash cycle. Once the cycle has begun the indicator light will remain lit in a fixed manner. To pause the wash cycle, press the button again; the indicator light will flash in an orange colour. If the Door locked indicator light is switched off, the door may be opened. To start the wash cycle from the point at which it was interrupted, press the button again. DOOR LOCKED indicator light: indicates that the porthole door is locked.

To open the door, pause the wash cycle (see Running a wash cycle). When the indicator light is illuminated, the control panel is locked. cHANGE LANGUAGE. Press the buttons next to the OK and V symbols to change the language. Use the button next to the OK symbol to confirm the language, which will be set after 2.

If no buttons are pressed, the language set previously will be displayed after 30. switch on the machine. 5 Running a wash cycle EN WARNING: before you use the washing machine for the first time, run a wash cycle with detergent and no laundry, using the 90° cottons cycle without pre-wash. All the indicator lights will illuminate for 1 second and the text AQUALTIS will appear on the display; the indicator light corresponding to the button will then remain lit in a constant manner and the START/PAUSE indicator light will flash. Turn the PROGRAMME KNOB left or right, until the required programme has been selected; the name of the programme will appear on the display.

A temperature and spin speed is set for each programme; these may be adjusted. The cycle duration will also appear on the display. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of wash cycles on the following page. Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments as described in Description of the machine. Use the relevant buttons on the control panel: Modify the temperature and/or spin speed. The machine automatically displays the maximum temperature and spin speed values set for the selected cycle, or the most recently-used settings. Table of wash cycles Icon Description of the wash cycle Cotton Coloureds (2-3): lightly soiled whites and delicate colours. Rinse Spin and Pump out Anti Allergy Ultradelicates Wool: for wool, cashmere, etc. Mix 30': to refresh lightly soiled garments quickly (not suitable for wool, silk and clothes which require washing by hand). Load (kg) 11 5 5 6 6 6 2 3,5 11 11 11 6 1 2,5 4 11 11 Cycle duration (*) The duration of the wash cycles can be checked on the display. EN The length of cycle shown on the display or in this booklet is an estimation only and is calculated assuming standard working conditions.

The actual duration can vary according to factors such as water temperature and pressure, the amount of detergent used, the amount and type of load inserted, load balancing and any wash options selected. (*) Note: 10 minutes after the START, the machine will recalculate the time remaining until the end of the wash cycle on the basis of the load inside it; this value will then be shown on the display. For all Test Institutes: 1) Test wash cycle in compliance with regulation 2010/1061: set wash cycle with a temperature of 60°C. 2) Test wash cycle in compliance with rell woollen garments may be washed in the washing machine, even those which state hand wash only on the label. The Wool wash cycle can be used to wash all woollen garments in the washing machine while guaranteeing optimum performance. Stubborn stains: it is wise to treat stubborn stains with solid soap before washing, and to use the Cottons with pre-wash cycle. 8 Precautions and tips ! The machine was designed and constructed in accordance with international safety regulations. The following information is provided for safety reasons and must therefore be read carefully. hold the plug and pull. Never force the porthole door.

If it must be moved, proceed with the help of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy. Before loading laundry into the washing machine, make sure the drum is empty. Opening the porthole door manually In the event that it is not possible to open the porthole door due to a powercut, and if you wish to remove the laundry, proceed as follows: 1. Remove the plug from the electrical socket.

2. Make sure the water level inside the machine is lower than the door opening; if it is not, remove excess water using the drain hose, collecting it in a bucket as indicated in the figure. 3. Remove the cover panel on the lower front part of the washing machine (see overleaf). 4.

Pull outwards using the tab as indicated in the figure, until the plastic tie-rod is freed from its stop position; pull downwards until you hear a click, which indicates that the door is now unlocked. Load balancing system Before every spin cycle, to avoid excessive vibrations before every spin and to distribute the load in a uniform manner, the drum rotates continuously at a speed which is slightly greater than the washing rotation speed. If, after several attempts, the load is not balanced correctly, the machine spins at a reduced spin speed. If the load is excessively unbalanced, the washing machine performs the distribution process instead of spinning. To encourage improved load distribution and balance, we recommend small and large garments are mixed in the load. 5. Open the door; if this is still not possible repeat the procedure. Disposal Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. The European Directive 2002/96/EC relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the cost of re-using and recycling the materials inside the machine, while preventing potential damage to the atmosphere and to public health.

6. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. 9 Care and maintenance EN Cutting off the water and electricity supplies Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system in the machine and help to prevent leaks. Unplug the appliance when cleaning it and during all maintenance work. to access the pre-chamber: 1 2 1. Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures); 2.



[You're reading an excerpt. Click here to read official HOTPOINT AQ113D 697 EU/A user guide](http://yourpdfguides.com/dref/4643163)
<http://yourpdfguides.com/dref/4643163>

Position a container so that it will collect the water which flows out (approximately 1.5 l) (see figure); 3. Unscrew the lid by rotating it in an anti-clockwise direction (see figure); Cleaning the machine The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water.

do not use solvents or abrasives. Cleaning the detergent dispenser drawer 1 1 2 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure). Wash it under running water; this procedure should be repeated frequently. Screw the lid back on; 6. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance.

Caring for your appliance drum Always leave the door ajar to prevent unpleasant odours from forming. ! Make sure the wash cycle has finished and unplug the appliance. 10 Trouble shooting Your washing machine could occasionally fail to work. Before contacting the Technical Assistance Centre (see Assistance), make sure that the problem cannot be solved easily using the following list. Problem: The washing machine does not switch on.

The wash cycle does not start. Possible causes / Solutions: The appliance is not plugged into the socket fully, or not enough to make contact. There is no power in the house. The door is not closed properly. The START/PAUSE button has not been pressed. The water tap has not been opened. a delayed start has been set. The water inlet hose is not connected to the tap. the hose is bent. The water tap has not been opened.

There is no water supply in the house. The pressure is too low. The START/PAUSE button has not been pressed. The machine continuously fills with water and drains. The free end of the hose is under water (see Installation). If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously. Special anti-draining valves are available in shops and help to prevent this inconvenience. The wall drainage system is not fitted with a breather pipe. The wash cycle does not include draining: Some wash cycles require the drain phase to be started manually (see Wash cycles and options). The Easy iron option is enabled: to complete the wash cycle, press the START/PAUSE button (Wash cycles and options).

The drum was not unlocked correctly during installation (see Installation). The machine is not level (see Installation). The machine is trapped between cabinets and walls (see Installation), the load is unbalanced (see Detergents and laundry). The washing machine does not drain or spin.

The machine vibrates a lot during the spin cycle. The detergent dispenser is blocked (to clean it, see Care and maintenance). The drain hose is not fixed in place properly (see Installation). Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service.

The detergent is not suitable for machine washing (it should display the text for washing machines or hand wash, or the like). The icons corresponding to the Phase in progress flash rapidly at the same time as the ON/OFF indicator light. There is too much foam. Note: to exit Demo mode, switch machine off, press and hold the two START/PAUSE buttons simultaneously for 3 seconds. And ON/OFF buttons Assistance EN Before calling for Assistance: Check whether you can solve the problem by yourself (see Trouble shooting); Restart the wash cycle to check whether the problem has been solved; If it has not, contact the Authorised Technical Assistance Service. ! If the washing machine has been installed or used incorrectly, you will have to pay for the call-out service. ! Always request the assistance of authorised technicians. Please have the following information to hand: the type of problem; the appliance model (Mod.); the serial number (S/N). The above information can be found on the data plate located on the appliance itself.



[You're reading an excerpt. Click here to read official HOTPOINT AQ113D 697 EU/A user guide](http://yourpdfguides.com/dref/4643163)
<http://yourpdfguides.com/dref/4643163>