



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT AQ114D 697D EU/B. You'll find the answers to all your questions on the HOTPOINT AQ114D 697D EU/B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT AQ114D 697D EU/B  
User guide HOTPOINT AQ114D 697D EU/B  
Operating instructions HOTPOINT AQ114D 697D EU/B  
Instructions for use HOTPOINT AQ114D 697D EU/B  
Instruction manual HOTPOINT AQ114D 697D EU/B

## Instructions for installation and use

WASHING MACHINE

### Contents

EN

EN

English,1

PL

Polski,13

CZ

Česky,25

RO

Română,37

### AQUALTIS

AQ114D 697D

#### Installation, 2-3

Unpacking and levelling  
Connecting the electricity and water supplies  
Technical data

#### Description of the machine, 4-5

Touch control panel

#### Running a wash cycle, 6

Wash cycles and options, 7  
Table of wash cycles  
Wash options

#### Detergents and laundry, 8

Detergent  
Preparing the laundry  
Washing recommendations

#### Precautions and advice, 9

General safety  
Load balancing system  
Disposal  
Opening the porthole door manually

#### Care and maintenance, 10

Cutting off the water and electricity supplies  
Cleaning the machine  
Cleaning the detergent dispenser drawer  
Caring for your appliance drum  
Cleaning the pump  
Checking the water inlet hose

#### Trouble shooting, 11

#### Assistance, 12



[You're reading an excerpt. Click here to read official HOTPOINT AQ114D 697D EU/B user guide](http://yourpdfguides.com/dref/4643226)  
<http://yourpdfguides.com/dref/4643226>

### Manual abstract:

! If the appliance is levelled correctly, it will be more stable and much less likely to cause vibrations and noise while it is operating, particularly during the spin cycle. ! If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the washing machine.

Connecting the electricity and water supplies

Connecting the water inlet hose ! @@ 1. @@ unpacking and levelling Unpacking 1. @@@@ 2. Remove the 4 protective screws (used during transportation) and the corresponding spacer, located on the rear part of the appliance (see figure). 2. Connect the inlet hose by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). 3. Close off the holes using the plastic plugs supplied in the pack.

4. Keep all the parts in a safe place; they will be needed again if the washing machine is moved to another location, to prevent the inside of the appliance being damaged. ! Packaging materials should not be used as toys for children. 3. Make sure that the hose is not folded over or bent.

! The water pressure at the tap must fall within the values indicated in the Technical data table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. ! Never use second-hand or old inlet hoses; use the products supplied with the machine.

levelling 1. Place the washing machine on a flat sturdy floor, without resting it up against walls or cabinets.

2. If the floor is uneven, the front feet of the machine may be adjusted until it reaches a horizontal position (the angle of inclination must not exceed 2 degrees).

2 Connecting the drain hose Connect the drain hose to drain duct piping or a wall drain located between 65 and 100 cm above the floor, making sure it is not bent at all. The cable should not be bent or compressed. ! The power supply cable and plug must only be replaced by authorised technicians.

warning! The company shall not be held responsible in the event that these regulations are not respected. EN 65 - 100 cm Alternatively, rest the drain hose on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length.

technical data Model AQ114D 697D width 59.

5 cm height 85 cm depth 64,5 cm from 1 to 11 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 71 litres up to 1600 rotations per minute Electrical connections Before plugging the appliance into the electricity socket, make sure that:

- the socket is earthed and complies with all applicable laws;
- the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite);
- the power supply voltage falls within the values indicated in the Technical data table (see opposite);
- the socket is compatible with the plug of the appliance.

If this is not the case, have the socket or the plug replaced. ! The machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! The mains socket must remain within easy reach after the washing machine has been installed.

Dimensions Capacity Electrical connections Water connections Spin speed Test wash cycles in accordance with directives 1061/2010 and 1015/2010 programme programme ; Cotton standard 60°C; ; Cotton standard 40°C.

This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC 3

Description of the machine EN PORTHOLE DOOR PORTHOLE DOOR HANDLE CONTROL PANEL DIRECT INJECTION SYSTEM The washing machine features the innovative "Direct Injection" technology that quickly solubilises the detergent and efficiently activates all the various components. The system guarantees the complete use and dissolution of the detergent, which is mixed with water before reaching the garments.

This ensures better cleaning results already at low temperatures, providing significant energy savings while perfectly protecting colours and fibres. The "Direct Injection" technology is activated automatically in all the cycles.

KICK STRIP ADJUSTABLE FEET PORTHOLE DOOR Always use the handle to open the porthole door (see figure).

TOUCH CONTROL PANEL To adjust the settings, gently press the icon inside the sensitive (touch control) area as illustrated in the figure.

DETERGENT DISPENSER DRAWER The detergent dispenser drawer is located inside the machine and can be accessed by opening the door.

For more information on detergent measures, please refer to the chapter entitled "Detergents and laundry".

Standby mode This washing machine, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected. Press the ON-OFF button briefly and wait for the machine to start up again.

Main wash compartment: 1 If liquid detergent is used, it is recommended that the 2 B removable plastic partition A (supplied) be used for proper dosage. If powder detergent is used, place the partition into slot B.

washing additives compartment: for fabric softener or liquid additives. We recommend that the maximum level indicated by the grille is not exceeded, and that concentrated fabric softeners are diluted.

A 210 180 150 120 90 60 4 Touch control panel WASH CYCLE SELECTOR knob M2 M1 START/PAUSE button SPIN button with indicator light TEMPERATURE ECO indicator light WASH CYCLE PHASE icons EN button DISPLAY Button with ON/OFF indicator light M3 OPTION buttons CONTROL PANEL LOCK DELAYED START button with indicator light DOOR LOCKED indicator light Button with ON/OFF indicator light: press this briefly to switch the machine on or off. The green indicator light indicates that the machine is switched on. To switch off the washing machine during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled.

WASH CYCLE SELECTOR knob: may be turned in either direction. To select the most suitable wash cycle, please refer to the "Table of wash cycles". The knob will not move during the wash cycle.

M1-M2-M3 buttons: press and hold one of the buttons to store a cycle with your own set preferences in the memory of the machine.

to recall a previously-stored cycle, press the corresponding button. TEMPERATURE button: press to modify or exclude the temperature setting; the value selected will appear on the display above (see "Running a wash cycle").



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[AQ114D 697D EU/B user guide](#)

<http://yourpdfguides.com/dref/4643226>

**SPIN CYCLE button:** press to modify or exclude the spin cycle; the value selected will appear on the display above (see “Running a wash cycle”). **DELAYED START button:** press to set a delayed start for the selected wash cycle; the set delay time will appear on the display above (see “Running a wash cycle”). **OPTION buttons:** press to select the available options. The indicator light corresponding to the selected option will remain lit (see “Running a wash cycle”). **WASH CYCLE PHASE icons:** these illuminate to indicate the progress of the wash cycle (Wash – Rinse – Spin – Drain ). The text lights up when the cycle is complete. **START/PAUSE button with indicator light:** when the green indicator light flashes slowly, press the button to start a wash cycle. Once the cycle has begun the indicator light will remain lit in a fixed manner.

To pause the wash cycle, press the button again; the indicator light will flash in an orange colour. If the “Door locked” indicator light is switched off, the door may be opened. To start the wash cycle from the point at which it was interrupted, press the button again. **DOOR LOCKED indicator light:** indicates that the porthole door is locked. To open the door, pause the wash cycle (see “Running a wash cycle”).

**CONTROL PANEL LOCK button with indicator light:** to activate or deactivate the control panel lock, press and hold the button for approximately 2 seconds. When the indicator light is illuminated, the control panel is locked. This means it is possible to prevent wash cycles from being modified accidentally, especially where there are children in the home. **CHANGE LANGUAGE.** If no buttons are pressed, the language set previously will be displayed after 30”.

**switch on the machine. 5 Running a wash cycle EN WARNING:** before you use the washing machine for the first time, run a wash cycle with detergent and no laundry, using the 90° cottons cycle without pre-wash. All the indicator lights will illuminate for 1 second and the text **AQUALTIS** will appear on the display; the indicator light corresponding to the button will then remain lit in a constant manner and the **START/PAUSE** indicator light will flash. Turn the **PROGRAMME KNOB** left or right, until the required programme has been selected; the name of the programme will appear on the display. A temperature and spin speed is set for each programme; these may be adjusted. The cycle duration will also appear on the display. Load the laundry, making sure you do not exceed the maximum load value indicated. The washing machine makes it easier for you to wash even the most valuable and delicate garments in complete confidence thanks to the special bag which protects the laundry (this is supplied with the machine). We recommend that the bag is used every time you wash quilts and padded items with an outer layer made using synthetic material. **6 Wash cycles and options**

Table of wash cycles	Residual dampness %	Energy consumption kWh	Prewash	Description of the wash cycle	Fabric softener	Max. Load (kg)	Synthetics	Resistant Synthetics	Resistant (4)	Coloureds	Intensive
Multi Colour											
Darks											
Steam Refresh											
Duvets:											

for down-stuffed garments.

**bed&Bath for bedlinen and towels. Rinse Spin and Pump out Anti Allergy Plus Anti Allergy Delicate Ultradelicates Wool:** for wool, cashmere, etc. **Mix 30':** to refresh lightly soiled garments quickly (not suitable for wool, silk and clothes which require washing by hand). **90°** - Total water lt Detergent and additives Wash EN Icon - - 110' 160' a 40° performance at just 20°. We recommend using detergents that are suitable for coloured washes and active already at low temperatures. ! We always recommend a separate wash for running garments and the first time you wash a new coloured item. **darks:** Use cycle to wash dark-coloured garments. This programme is designed to maintain dark colours over time. We recommend using a liquid detergent for the best results when washing dark-coloured garments. **steam Refresh:** This programme refreshes garments by removing bad odours and relaxing the fibres (2 kg , roughly 3 items).

**Insert dry items only (that are not dirty) and select programme “ “.** The garments will be damp once the cycle is completed, so we recommend hanging them to dry. The “ “ programme makes ironing easier. Moreover, with the “Steam Perfume” laundry balls, your favourite perfume can be added to your laundry. Place a **Quilts:** to wash quilts with a synthetic outer layer, use the bag provided and set the wash cycle to .

**Bedlinen and towels:** Use programme to wash bed linen and towels in one single cycle: it optimises softener performance and helps you save time and energy. We recommend the use of powder detergent **Anti Allergy Plus** : cycle studied for cotton laundry and other resistant fabrics to guarantee the removal of the main allergens such as pollen, mites, cat and dog hair. **Anti Allergy Delicate** : cycle studied for cotton laundry and other resistant fabrics to guarantee the removal of pollen and cat and dog hair already at 40°. Use liquid detergent on delicate garments for best results. (M1135) 8

**Precautions and tips !** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance. Do not touch the machine when barefoot or with wet or damp hands or feet. Do not pull on the power supply cable when unplugging the appliance from the electricity socket. hold the plug and pull. Do not touch the drained water as it may reach extremely high temperatures. • Never force the porthole door. This could damage the safety lock mechanism designed to prevent accidental opening. If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself. If Always keep children well away from the appliance while it is operating. If it must be moved, proceed with the help of two or three people and handle it with the utmost care.

Never try to do this alone, because the appliance is very heavy. Before loading laundry into the washing machine, make sure the drum is empty. Opening the porthole door manually In the event that it is not possible to open the porthole door due to a powercut, and if you wish to remove the laundry, proceed as follows: 1. Remove the plug from the electrical socket. 2. Make sure the water level inside the machine is lower than the door opening; if it is not, remove excess water using the drain hose, collecting it in a bucket as indicated in the figure.



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/4643226)

[AQ114D 697D EU/B user guide](http://yourpdfguides.com/dref/4643226)

<http://yourpdfguides.com/dref/4643226>

3. Remove the cover panel on the lower front part of the washing machine (see overleaf). 4. Pull outwards using the tab as indicated in the figure, until the plastic tie-rod is freed from its stop position; pull downwards until you hear a "click", which indicates that the door is now unlocked.

**Load balancing system** Before every spin cycle, to avoid excessive vibrations before every spin and to distribute the load in a uniform manner, the drum rotates continuously at a speed which is slightly greater than the washing rotation speed. If, after several attempts, the load is not balanced correctly, the machine spins at a reduced spin speed. If the load is excessively unbalanced, the washing machine performs the distribution process instead of spinning. To encourage improved load distribution and balance, we recommend small and large garments are mixed in the load. 5.

Open the door; if this is still not possible repeat the procedure. **Disposal** • Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. □ The European Directive 2002/96/EC relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the cost of re-using and recycling the materials inside the machine, while preventing potential damage to the atmosphere and to public health. 6.

@@9 **Care and maintenance** EN **Cutting off the water and electricity supplies** • Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system in the machine and help to prevent leaks. □ Unplug the appliance when cleaning it and during all maintenance work. to access the pre-chamber: 1 2 1. Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures); 2. Position a container so that it will collect the water which flows out (approximately 1.5 l) (see figure); 3. Unscrew the lid by rotating it in an anti-clockwise direction (see figure); **Cleaning the machine** The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. do not use solvents or abrasives. **Cleaning the detergent dispenser drawer** 1 2 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure).

@@ Screw the lid back on; 6. @@@@ If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. **Cleaning the pump** The washing machine is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the protective pre-chamber at the base of the pump. ! Make sure the wash cycle has finished and unplug the appliance. 10 **Trouble shooting** Your washing machine could occasionally fail to work. @@ eN **Problem: The washing machine does not switch on. The wash cycle does not start.** @@ □ There is no power in the house. •••• The door is not closed properly.

The START/PAUSE button has not been pressed. The water tap has not been opened. a delayed start has been set. The water inlet hose is not connected to the tap. the hose is bent.

The water tap has not been opened. There is no water supply in the house. The pressure is too low. The START/PAUSE button has not been pressed. The washing machine does not fill •• with water.

@@ The machine continuously fills with water and drains. @@ □ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see "Installation"). □ The free end of the hose is under water (see "Installation"). □ If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously. Special anti-draining valves are available in shops and help to prevent this inconvenience. □ The wall drainage system is not fitted with a breather pipe. □ The wash cycle does not include draining: Some wash cycles require the drain phase to be started manually (see "Wash cycles and options"). □ The option is enabled: to complete the wash cycle, press the START/ PAUSE button ("Wash cycles and options"). The drum was not unlocked correctly during installation (see "Installation"). The machine is not level (see "Installation").

The machine is trapped between cabinets and walls (see "Installation"). the load is unbalanced (see "Detergents and laundry"). The washing machine does not drain or spin. The machine vibrates a lot during •• the spin cycle. □ The detergent dispenser is blocked (to clean it, see "Care and maintenance"). • The drain hose is not fixed in place properly (see "Installation"). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. □ The detergent is not suitable for machine washing (it should display the text "for washing machines" or "hand and machine wash"; or the like). The icons corresponding to the "Phase in progress" flash rapidly at the same time as the ON/OFF indicator light.

There is too much foam. Note: to exit "Demo mode", switch machine off, press and hold the two and buttons simultaneously for 3 seconds. 11 **Assistance EN** Before calling for Assistance: • Check whether you can solve the problem by yourself (see "Trouble shooting"); • Restart the wash cycle to check whether the problem has been solved; • If it has not, contact the Authorised Technical Assistance Service. ! If the washing machine has been installed or used incorrectly, you will have to pay for the call-out service. ! Always request the assistance of authorised technicians.

Please have the following information to hand: • the type of problem; • the appliance model (Mod. ); • the serial number (S/N). The above information can be found on the data plate located on the appliance itself. În cazul în care mașina este instalată pe mochetă sau covor, reglați picioarele la o înălțime care să asigure mașinii de spălat un spațiu suficient pentru ventilare. □ Aparatul nu trebuie utilizat de către persoane (inclusiv copii) cu capacități fizice, senzoriale sau mentale reduse și cu experiență sau cunoștințe insuficiente, exceptând cazul în care această utilizare are loc sub supravegherea sau instrucțiunile unei persoane responsabile cu securitatea lor.



[You're reading an excerpt. Click here to read official HOTPOINT AQ114D 697D EU/B user guide](http://yourpdfguides.com/dref/4643226)  
<http://yourpdfguides.com/dref/4643226>