



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT AQR1071D 69 EU/A. You'll find the answers to all your questions on the HOTPOINT AQR1071D 69 EU/A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT AQR1071D 69 EU/A
User guide HOTPOINT AQR1071D 69 EU/A
Operating instructions HOTPOINT AQR1071D 69 EU/A
Instructions for use HOTPOINT AQR1071D 69 EU/A
Instruction manual HOTPOINT AQR1071D 69 EU/A

Instructions for installation and use

WASHER-DRYER

This symbol reminds you to read this instruction manual.

EN

EN

English,1

FR

Français,13

ES

Español,25

PT

Português,37

NL

Nederlands,49

DE

Deutsch,61

AQUALTIS

AQR1071D 69

Contents

Installation, 2-3

Unpacking and leveling
Connecting the electricity, and water supplies
Technical data

Care and maintenance, 4

Cutting off the water and electricity supplies
Cleaning the machine
Cleaning the detergent dispenser drawer
Caring for your appliance drum
Cleaning the pump
Checking the water inlet hose

Precautions and advice, 5

General safety
Disposal
Opening the porthole door manually

Description of the machine, 6-7

Touch control panel

How to run a wash cycle or a drying cycle, 8

Wash cycles and options, 9

Table of wash cycles
Wash options

Detergents and laundry, 10

Detergent
Preparing the laundry
Washing recommendations
Load balancing system

Trouble shooting, 11

Assistance, 12



[You're reading an excerpt. Click here to read official HOTPOINT AQR1071D 69 EU/A user guide](http://yourpdfguides.com/dref/5512918)
<http://yourpdfguides.com/dref/5512918>

Manual abstract:

! If the appliance is levelled correctly, it will be more stable and much less likely to cause vibrations and noise while it is operating, particularly during the spin cycle. ! If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the Washer-dryer. Connecting the electricity and water supplies Connecting the water inlet hose ! Before connecting the inlet hose to the water supply, run the water until it is perfectly clear. 1. Connect the inlet hose to the machine by screwing it onto the cold water inlet of the appliance, which is situated on the top right-hand side of the rear part of the appliance (see figure). 2. Connect the inlet hose by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). unpacking and levelling Unpacking 1. Once you have removed all the packaging from the Washer-dryer, make sure it has not been damaged during transportation. If it has been damaged, contact the retailer and do not proceed any further with the installation process.

2. Remove the 4 protective screws (used during transportation) and the corresponding spacer, located on the rear part of the appliance (see figure). 3. Close off the holes using the plastic plugs supplied in the pack. 4.

Keep all the parts in a safe place; they will be needed again if the Washer-dryer is moved to another location, to prevent the inside of the appliance being damaged. ! Packaging materials should not be used as toys for children. levelling 1. Place the Washerdryer on a flat sturdy floor, without resting it up against walls or cabinets. 2.

If the floor is uneven, the front feet of the machine may be adjusted until it reaches a horizontal position (the angle of inclination must not exceed 2 degrees).

3. Make sure that the hose is not folded over or bent. ! The water pressure at the tap must fall within the values indicated in the Technical data table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. ! Never use second-hand or old inlet hoses; use the products supplied with the machine. 2 Connecting the drain hose Connect the drain hose to drain duct piping or a wall drain located between 65 and 100 cm above the floor, making sure it is not bent at all. The cable should not be bent or compressed. ! The power supply cable and plug must only be replaced by authorised technicians. warning! The company shall not be held responsible in the event that these regulations are not respected.

EN 65 - 100 cm Alternatively, rest the drain hose on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. ! If this is not the case, have the socket or the plug replaced. ! The machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! The mains socket must remain within easy reach after the Washer-dryer has been installed. 5 bar) drum capacity 71 litres Spin speed up to 1600 rotations per minute Wash: programme ; temperature 60°C; using a load of 10 kg. Energy raDrying: the smaller load ted (3kg) must be dried by seprogrammes lecting the Hanger dryness according to level. The load must consist regulation of 3 sheets, 2 pillowcases EN 50229 and 2 hand towels; the remainder of the load must be dried by selecting the Extra dryness level.

This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2012/19/EU 3 Care and maintenance EN Cutting off the water and electricity supplies Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system in the machine and help to prevent leaks. Unplug the appliance when cleaning it and during all maintenance work. to access the pre-chamber: 1 2 1. Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures); 2.

Position a container so that it will collect the water which flows out (approximately 1. Screw the lid back on; 6. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Cleaning the machine The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. do not use solvents or abrasives.

Cleaning the detergent dispenser drawer 1 2 2 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure). Wash it under running water; this procedure should be repeated frequently. Caring for your appliance drum Always leave the door ajar to prevent unpleasant odours from forming. Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Cleaning the pump The Washer-dryer is fitted with a selfcleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the protective pre-chamber at the base of the pump. ! Make sure the wash cycle has finished and unplug the appliance. 4 Precautions and tips ! The machine was designed and constructed in accordance with international safety regulations. The following information is provided for safety reasons and must therefore be read carefully.

Make sure that the water tap is turned on during the drying cycles. EN Disposal General safety This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Do not dry unwashed items in the tumble dryer. Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer. Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer. Fabric softeners, or similar products, should be used as specified by the fabric softener instructions. The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.



[You're reading an excerpt. Click here to read official HOTPOINT AQD1071D 69 EU/A user guide](http://yourpdfguides.com/dref/5512918)
<http://yourpdfguides.com/dref/5512918>

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
This appliance was designed for domestic use only.

Do not touch the machine when barefoot or with wet or damp hands or feet. Do not pull on the power supply cable when unplugging the appliance from the electricity socket. hold the plug and pull. Do not touch the drained water as it may reach extremely high temperatures. Never force the porthole door.

This could damage the safety lock mechanism designed to prevent accidental opening. If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself. Always keep children well away from the appliance while it is operating. If it must be moved, proceed with the help of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy.

Before loading laundry into the washer dryer, make sure the drum is empty. During the drying phase, the door tends to get quite hot. Do not use the appliance to dry clothes that have been washed with flammable solvents (e.g. Do not use the appliance to dry foam rubber or similar elastomers.

Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. The European Directive 2012/19/EU relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the cost of re-using and recycling the materials inside the machine, while preventing potential damage to the atmosphere and to public health. The crossed-out dustbin is marked on all products to remind the owner of their obligations regarding separated waste collection. For more information relating to the correct disposal of household appliances, owners should contact their local authorities or appliance dealer. Opening the porthole door manually In the event that it is not possible to open the porthole door due to a powercut, and if you wish to remove the laundry, proceed as follows: 1.

Remove the plug from the electrical socket. 2. Make sure the water level inside the machine is lower than the door opening; if it is not, remove excess water using the drain hose, collecting it in a bucket as indicated in the figure. 3. Remove the cover panel on the lower front part of the washer dryer (see overleaf).

4. Pull outwards using the tab as indicated in the figure, until the plastic tie-rod is freed from its stop position; pull downwards until you hear a click, which indicates that the door is now unlocked. 5. Open the door; if this is still not possible repeat the procedure. 6.

Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. 5 Description of the machine EN PORTHOLE DOOR PORTHOLE DOOR HANDLE CONTROL PANEL KICK STRIP ADJUSTABLE FEET PORTHOLE DOOR Always use the handle to open the porthole door (see figure). The use of extra compartment 3 excludes the prewash function. washing additives compartment: for fabric softener or liquid additives. We recommend that the maximum level indicated by the grille is not exceeded, and that concentrated fabric softeners are diluted.

TOUCH CONTROL PANEL To adjust the settings, gently press the icon inside the sensitive (touch control) area as illustrated in the figure. DETERGENT DISPENSER DRAWER The detergent dispenser drawer is located inside the machine and can be accessed by opening the door. For more information on detergent measures, please refer to the chapter entitled "Detergents and laundry". Before pouring in the detergent, make sure that extra compartment 3 has been removed. Standby mode This Washer-dryer, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected.

Press the ON-OFF button briefly and wait for the machine to start up again. consumption in off-mode: 0,5 W Consumption in Left-on: 8 W 2. Main wash compartment: If liquid detergent is used, it is recommended that the removable plastic partition A (supplied) be used for proper dosage. If powder detergent is used, place the partition into slot B. 6 Touch control panel WASH CYCLE SELECTOR knob M2 M1 START/PAUSE button SPIN button with indicator light TEMPERATURE ECO indicator light WASH CYCLE PHASE icons EN button DISPLAY Button with ON/OFF indicator light DRYING button OPTION buttons CONTROL PANEL LOCK DELAYED START button with indicator light LOCK indicator light Button with ON/OFF indicator light: press this briefly to switch the machine on or off. The green indicator light indicates that the machine is on the buttons next to the "OK" and "V" symbols to change the language. Use the button next to the "OK" symbol to confirm the language, which will be set after 2". If no buttons are pressed, the language set previously will be displayed after 30". switch on the machine. 7 How to run a wash cycle or a drying cycle EN WARNING: before you use the Washer-dryer for the first time, run a wash cycle with detergent and no laundry, using the 90° cottons cycle without pre-wash.

All the indicator lights will illuminate for 1 second and the text AQUALTIS will appear on the display; the indicator light corresponding to the button will then remain lit in a constant manner and the START/PAUSE indicator light will flash. A temperature and spin speed is set for each programme; these may be adjusted. The cycle duration will also appear on the display. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of wash cycles on the following page. Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments as described in "Description of the machine". Use the relevant buttons on the control panel: Modify the temperature and/or spin speed. If these buttons are pressed again, the maximum values are restored. ! setting the drying cycle. If these buttons are pressed again, the maximum values are restored. The remaining dampness softens creases, making them easier to remove.

Hanger: ideal for clothes which do not need to be dried fully. Repeat this procedure for the remainder of the load. setting a delayed start. modify the cycle settings. Press the button to activate the option; the name of the option will then appear on the display and the corresponding indicator light will illuminate.



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/5512918)

[AQD1071D 69 EU/A user guide](http://yourpdfguides.com/dref/5512918)

<http://yourpdfguides.com/dref/5512918>

! Do not use hand washing detergents because these create too much foam. garments. The display will show the level **Hanger**. Hotpoint-Ariston is the first Washer-dryer brand to be approved by The Woolmark Company for Apparel Care Platinum for its washing performance and consumption of energy and water. (M1135) Preparing the laundry **Shake** out the garments before loading them into the machine. **Divide** the laundry according fabric type (symbol on the washing instruction label) and colour, making sure you separate the coloured garments from the white ones; **Empty** all pockets and check the buttons; **Do not exceed** the values listed in the **Table of wash cycles**, which refer to the weight of the laundry when dry. How much does 1 sheet 1 pillowcase 1 tablecloth 1 bathrobe 1 towel 1 pair of jeans 1 shirt your laundry weigh? 400-500 g 150-200 g 400-500 g 900-1200 g 150-250 g 400-500 g 150-200 g Washing recommendations Whites: use this cycle to wash white clothes.

The programme is designed to maintain the brightness of white clothes over time. If the drying function is selected, a drying cycle automatically activates at the end of the wash cycle that resembles open-air drying, with the added advantages of preserving garments from yellowing due to sunlight exposure and preventing loss of whiteness caused by the possible presence of dust in the air. Drying cycles can only be selected on a level basis. Coloureds: use this cycle to wash bright coloured clothes. The programme is designed to maintain bright colours over time.

Darks: Use cycle to wash dark-coloured garments. This programme is designed to maintain dark colours over time. We recommend using a liquid detergent for the best results when washing dark-coloured garments. When you select the drying function, at the end of the washing cycle the machine will automatically perform a delicate drying cycle that preserves the colours of the In UK, Eire, Hong Kong and India the Woolmark trade mark is a Certification trade mark.

Ultradelicates: use programme to wash very delicate garments having strasses or sequins.

We recommend turning the garments inside out before washing and placing small items into the special bag for washing delicates. Use liquid detergent on delicate garments for best results. To wash Silk garments and Curtains select cycle and then option (in this case it will also be possible to enable the **Extra Rinse** option); the machine will end the cycle while the laundry is soaking and the indicator light will flash. To drain the water so that the laundry may be removed, press the START/PAUSE button or the button. When selecting an exclusively time-based drying function, a drying cycle is performed at the end of the wash cycle that is particularly delicate, thanks to light handling and appropriate temperature control of the water jet. The recommended durations are: 1 kg of synthetic garments --> 160 min 1 kg of synthetic and cotton garments --> 180 min 1 kg of cotton garments --> 180 min The degree of dryness depends on the load and fabric composition. **anti Allergy:** use programme to remove major allergens such as pollen, mites, cat's and dog's hair. **Wash&Dry:** select programme for washing and drying lightly soiled garments (Cotton and Synthetic) in a short time. This cycle may be used to wash and dry a laundry load of up to 1 kg in just 45 minutes. to achieve optimum results, use liquid detergent and pre-treat cuffs, collars and stains.

Stubborn stains: it is wise to treat stubborn stains with solid soap before washing, and to use the Cottons with pre-wash cycle. **Load balancing system** Before every spin cycle, to avoid excessive vibrations before every spin and to distribute the load in a uniform manner, the drum rotates continuously at a speed which is slightly greater than the washing rotation speed. If, after several attempts, the load is not balanced correctly, the machine spins at a reduced spin speed. If the load is excessively unbalanced, the Washer-dryer performs the distribution process instead of spinning. To encourage improved load distribution and balance, we recommend small and large garments are mixed in the load. **10 Trouble shooting** Your Washer-dryer could occasionally fail to work. **@@eN Problem:** The Washer-dryer does not switch on. The wash cycle does not start. **@@** There is no power in the house. **@@** The START/PAUSE button has not been pressed.

The water tap has not been opened. a delayed start has been set. **@@** The pressure is too low. **^** If you have selected the function, at the end of the cycle the Washer-dryer drum will rotate slowly; to end the cycle press the START/PAUSE button or the button. The machine continuously fills with **The drain hose is not fitted at a height between 65 and 100 cm from the floor (see Installation).**

water and drains. **^** The free end of the hose is under water (see **Installation**). **^** If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the Washer-dryer to fill with water and drain continuously. Special anti-draining valves are available in shops and help to prevent this inconvenience. **^** The wall drainage system is not fitted with a breather pipe.

The Washer-dryer does not drain or **The wash cycle does not include draining:** Some wash cycles require the drain phase to be started manually (see **Wash cycles and options**). **spin.** **^** The **Easy iron** option is enabled: to complete the wash cycle, press the START/PAUSE button (**Wash cycles and options**). The machine vibrates a lot during **The drum was not unlocked correctly during installation (see Installation).** **^** The detergent dispenser is blocked (to clean it, see **Care and maintenance**). **^** The drain hose is not fixed in place properly (see **Installation**). The icons corresponding to the **Phase in progress** flash rapidly at the same time as the ON/OFF indicator light. There is too much foam. **^** Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service.

^ **^** **^** **^** **^** The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The appliance door is not shut properly. The washer-dryer does not dry. **11 Assistance EN** Before calling for Assistance: **^** Check whether you can solve the problem by yourself (see **Trouble shooting**); **^** Restart the wash cycle to check whether the problem has been solved; **^** If it has not, contact the Authorised Technical Assistance Service.



[You're reading an excerpt. Click here to read official HOTPOINT AQD1071D 69 EU/A user guide](http://yourpdfguides.com/dref/5512918)
<http://yourpdfguides.com/dref/5512918>

! If the Washer-dryer has been installed or used incorrectly, you will have to pay for the call-out service. ! Always request the assistance of authorised technicians. Please have the following information to hand: • the type of problem; • the appliance model (Mod.); • the serial number (S/N). The above information can be found on the data plate located on the appliance itself.

! Note: to exit • Demo mode•, switch machine off, press and hold the two •START/PAUSE• simultaneously for 3 seconds. Vermeld: • het type storing; • het model Wasdroogmachine (Mod. .



[You're reading an excerpt. Click here to read official HOTPOINT
AQD1071D 69 EU/A user guide
http://yourpdfguides.com/dref/5512918](http://yourpdfguides.com/dref/5512918)