



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT AQD1071D 69 EU/B. You'll find the answers to all your questions on the HOTPOINT AQD1071D 69 EU/B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT AQD1071D 69 EU/B
User guide HOTPOINT AQD1071D 69 EU/B
Operating instructions HOTPOINT AQD1071D 69 EU/B
Instructions for use HOTPOINT AQD1071D 69 EU/B
Instruction manual HOTPOINT AQD1071D 69 EU/B

Instructions for installation and use

WASHER-DRYER

This symbol reminds you to read this instruction manual.

EN

EN

English,1

PL

Polish,13

CZ

Česky,25

QR

EAHHKKA, 37

TR

Türkçe,49

AQUALTIS

AQD1071D 69

Contents

Installation, 2-3

Unpacking and leveling
Connecting the electricity, and water supplies
Technical data

Care and maintenance, 4

Cutting off the water and electricity supplies
Cleaning the machine
Cleaning the detergent dispenser drawer
Caring for your appliance drum
Cleaning the pump
Checking the water inlet hose

Precautions and advice, 5

General safety
Disposal
Opening the porthole door manually

Description of the machine, 6-7

Touch control panel

How to run a wash cycle or a drying cycle, 8

Wash cycles and options, 9
Table of wash cycles
Wash options

Detergents and laundry, 10

Detergent
Preparing the laundry
Washing recommendations
Load balancing system

Trouble shooting, 11

Assistance, 12



[You're reading an excerpt. Click here to read official HOTPOINT AQD1071D 69 EU/B user guide](http://yourpdfguides.com/dref/5512950)
<http://yourpdfguides.com/dref/5512950>

Manual abstract:

! Inside the pack containing this manual, you will also find the guarantee and all the details necessary for installation. ! If the appliance is levelled correctly, it will be more stable and much less likely to cause vibrations and noise while it is operating, particularly during the spin cycle. ! If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the Washer-dryer. @@@@ 1. @@ 2. @@ unpacking and levelling

Unpacking 1. Once you have removed all the packaging from the Washer-dryer, make sure it has not been damaged during transportation. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 2. Remove the 4 protective screws (used during transportation) and the corresponding spacer, located on the rear part of the appliance (see figure).

3. Close off the holes using the plastic plugs supplied in the pack. 4. Keep all the parts in a safe place; they will be needed again if the Washer-dryer is moved to another location, to prevent the inside of the appliance being damaged. ! Packaging materials should not be used as toys for children.

levelling 1. Place the Washerdryer on a flat sturdy floor, without resting it up against walls or cabinets. 2. If the floor is uneven, the front feet of the machine may be adjusted until it reaches a horizontal position (the angle of inclination must not exceed 2 degrees). 3.

Make sure that the hose is not folded over or bent. ! The water pressure at the tap must fall within the values indicated in the Technical data table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. ! Never use second-hand or old inlet hoses; use the products supplied with the machine. 2 Connecting the drain hose Connect the drain hose to drain duct piping or a wall drain located between 65 and 100 cm above the floor, making sure it is not bent at all. The cable should not be bent or compressed. ! The power supply cable and plug must only be replaced by authorised technicians. warning! The company shall not be held responsible in the event that these regulations are not respected. EN 65 - 100

Alternatively, rest the drain hose on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater.

! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Electrical connections Before plugging the appliance into the electricity socket, make sure that: • the socket is earthed and complies with all applicable laws; • the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); • the power supply voltage falls within the values indicated in the Technical data table (see opposite); • the socket is compatible with the plug of the appliance.

If this is not the case, have the socket or the plug replaced. ! The machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! The mains socket must remain within easy reach after the Washer-dryer has been installed. 5 cm from 1 to 10 kg for the wash programme Capacity from 1 to 7 kg for the drying programme please refer to the technical Electrical connections data plate fixed to the machine maximum pressure 1 MPa (10 bar) Water conimumum pressure nections 0. 05 MPa (0. 5 bar) drum capacity 71 litres Spin speed up to 1600 rotations per minute Wash: programme ; temperature 60°C; using a load of 10 kg. Energy raDrying: the smaller load ted (3kg) must be dried by programmes selecting the "HANGER" according to dryness level.

The load must regulation consist of 3 sheets, 2 pilEN 50229 lowcases and 2 hand towels; the remainder of the load must be dried by selecting the "EXTRA" dryness level. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2012/19/EU 3 Care and maintenance EN Cutting off the water and electricity supplies • Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system in the machine and help to prevent leaks. □ Unplug the appliance when cleaning it and during all maintenance work. to access the pre-chamber: 1 2 1.

Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures); 2. Position a container so that it will collect the water which flows out (approximately 1. Screw the lid back on; 6. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Cleaning the machine The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water.

do not use solvents or abrasives. Cleaning the detergent dispenser drawer 1 1 2 2 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure). Wash it under running water; this procedure should be repeated frequently. Caring for your appliance drum • Always leave the door ajar to prevent unpleasant odours from forming. Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Cleaning the pump The Washer-dryer is fitted with a selfcleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the protective pre-chamber at the base of the pump. ! Make sure the wash cycle has finished and unplug the appliance. 4 Precautions and tips ! The machine was designed and constructed in accordance with international safety regulations.

The following information is provided for safety reasons and must therefore be read carefully. □ Make sure that the water tap is turned on during the drying cycles. EN Disposal General safety • This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. □ Do not dry unwashed items in the tumble dryer. □ Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer. □ Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.



[You're reading an excerpt. Click here to read official HOTPOINT AQD1071D 69 EU/B user guide](http://yourpdfguides.com/dref/5512950)
<http://yourpdfguides.com/dref/5512950>

Hotpoint-Ariston is the first Washer-dryer brand to be approved by The Woolmark Company for Apparel Care Platinum for its washing performance and consumption of energy and water. (M1135) Preparing the laundry • Shake out the garments before loading them into the machine. □ Divide the laundry according fabric type (symbol on the washing instruction label) and colour, making sure you separate the coloured garments from the white ones; • Empty all pockets and check the buttons; • Do not exceed the values listed in the "Table of wash cycles", which refer to the weight of the laundry when dry. How much does 1 sheet 1 pillowcase 1 tablecloth 1 bathrobe 1 towel 1 pair of jeans 1 shirt your laundry weigh? 400-500 g 150-200 g 400-500 g 900-1200 g 150-250 g 400-500 g 150-200 g Washing recommendations Whites: use this cycle to wash white clothes. The programme is designed to maintain the brightness of white clothes over time. If the drying function is selected, a drying cycle automatically activates at the end of the wash cycle that resembles open-air drying, with the added advantages of preserving garments from yellowing due to sunlight exposure and preventing loss of whiteness caused by the possible presence of dust in the air. Drying cycles can only be selected on a level basis. Coloureds: use this cycle to wash bright coloured clothes. The programme is designed to maintain bright colours over time. darks: Use cycle to wash dark-coloured garments. This programme is designed to maintain dark colours over time. We recommend using a liquid detergent for the best results when washing dark-coloured garments. When you select the drying function, at the end of the washing cycle the machine will automatically perform a delicate drying cycle that preserves the colours of the In UK, Eire, Hong Kong and India the Woolmark trade mark is a Certification trade mark. Ultradelicates: use programme to wash very delicate garments having strasses or sequins. We recommend turning the garments inside out before washing and placing small items into the special bag for washing delicates. Use liquid detergent on delicate garments for best results. To wash Silk garments and Curtains select cycle and then option (in this case it will also be possible to enable the "Extra Rinse" option); the machine will end the cycle while the laundry is soaking and the indicator light will flash. To drain the water so that the laundry may be removed, press the START/PAUSE button or the button.

When selecting an exclusively time-based drying function, a drying cycle is performed at the end of the wash cycle that is particularly delicate, thanks to light handling and appropriate temperature control of the water jet. The recommended durations are: 1 kg of synthetic garments --> 160 min 1 kg of synthetic and cotton garments --> 180 min 1 kg of cotton garments --> 180 min The degree of dryness depends on the load and fabric composition.

@@@@@ Stubborn stains: it is wise to treat stubborn stains with solid soap before washing, and to use the Cottons with pre-wash cycle. Load balancing system Before every spin cycle, to avoid excessive vibrations before every spin and to distribute the load in a uniform manner, the drum rotates continuously at a speed which is slightly greater than the washing rotation speed. If, after several attempts, the load is not balanced correctly, the machine spins at a reduced spin speed. If the load is excessively unbalanced, the Washer-dryer performs the distribution process instead of spinning. @@@@ eN Problem: The Washer-dryer does not switch on. The wash cycle does not start. @ @ □ There is no power in the house. • • • • The door is not closed properly. The START/PAUSE button has not been pressed. The water tap has not been opened. a delayed start has been set. The Washer-dryer does not fill with • The water inlet hose is not connected to the tap. □ The pressure is too low.

□ If you have selected the function, at the end of the cycle the Washer-dryer drum will rotate slowly; to end the cycle press the START/PAUSE button or the button. The machine continuously fills with • The drain hose is not fitted at a height between 65 and 100 cm from the floor (see "Installation"). water and drains. □ The free end of the hose is under water (see "Installation"). □ If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the Washer-dryer to fill with water and drain continuously.

Special anti-draining valves are available in shops and help to prevent this inconvenience. □ The wall drainage system is not fitted with a breather pipe. The Washer-dryer does not drain or • The wash cycle does not include draining: Some wash cycles require the drain phase to be started manually (see "Wash cycles and options"). spin. □ The "Easy iron" option is enabled: to complete the wash cycle, press the START/PAUSE button ("Wash cycles and options"). The machine vibrates a lot during • The drum was not unlocked correctly during installation (see "Installation"). □ The detergent dispenser is blocked (to clean it, see "Care and maintenance"). • The drain hose is not fixed in place properly (see "Installation"). The icons corresponding to the "Phase in progress" flash rapidly at the same time as the ON/OFF indicator light. There is too much foam.

□ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. □ The detergent is not suitable for machine washing (it should display the text "for Washer-dryer" or "hand and machine wash", or the like). □ • • • • The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The appliance door is not shut properly. The washer-dryer does not dry. II Assistance EN Before calling for Assistance: • Check whether you can solve the problem by yourself (see "Trouble shooting"); • Restart the wash cycle to check whether the problem has been solved; • If it has not, contact the Authorised Technical Assistance Service. ! If the Washer-dryer has been installed or used incorrectly, you will have to pay for the call-out service. ! Always request the assistance of authorised technicians.

Please have the following information to hand: • the type of problem; • the appliance model (Mod.); • the serial number (S/N). The above information can be found on the data plate located on the appliance itself. ! Note: to exit "Demo mode", switch machine off, press and hold the two "START/PAUSE" simultaneously for 3 seconds. .



[You're reading an excerpt. Click here to read official HOTPOINT AQD1071D 69 EU/B user guide](http://yourpdfguides.com/dref/5512950)
<http://yourpdfguides.com/dref/5512950>