



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT AQD970D 49 EU/B. You'll find the answers to all your questions on the HOTPOINT AQD970D 49 EU/B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT AQD970D 49 EU/B
User guide HOTPOINT AQD970D 49 EU/B
Operating instructions HOTPOINT AQD970D 49 EU/B
Instructions for use HOTPOINT AQD970D 49 EU/B
Instruction manual HOTPOINT AQD970D 49 EU/B

Instructions for installation and use

WASHER-DRYER

This symbol reminds you to read this instruction manual.

EN

EN

English,1

PL

Polski,13

SK

Slovensky,25

CZ

Česky,37

HU

Magyar,49

RO

Română,61

UK

Українська,73

AQUALTIS

AQD970D 49

Contents

Installation, 2-3

Unpacking and leveling
Connecting the electricity and water supplies
Technical data

Description of the machine, 4-5

Touch control panel

How to run a wash cycle or a drying cycle, 6

Wash cycles and options, 7

Table of wash cycles
Wash options

Detergents and laundry, 8

Detergent
Preparing the laundry
Washing recommendations
Load balancing system

Precautions and advice, 9

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 10

Cutting off the water and electricity supplies
Cleaning the machine
Cleaning the detergent dispenser drawer
Caring for your appliance drum
Cleaning the pump
Checking the water inlet hose

Trouble shooting, 11

Assistance, 12



[You're reading an excerpt. Click here to read official HOTPOINT AQD970D 49 EU/B user guide](http://yourpdfguides.com/dref/5006003)
<http://yourpdfguides.com/dref/5006003>

Manual abstract:

! Inside the pack containing this manual, you will also find the guarantee and all the details necessary for installation. ! If the appliance is levelled correctly, it will be more stable and much less likely to cause vibrations and noise while it is operating, particularly during the spin cycle. ! If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the Washer-dryer. @@@@ 1. @@ unpacking and levelling

Unpacking 1. @@ If it has been damaged, contact the retailer and do not proceed any further with the installation process. 2. Remove the 4 protective screws (used during transportation) and the corresponding spacer, located on the rear part of the appliance (see figure). 2. Connect the inlet hose by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure).

3. Close off the holes using the plastic plugs supplied in the pack. 4. Keep all the parts in a safe place; they will be needed again if the Washer-dryer is moved to another location, to prevent the inside of the appliance being damaged. ! Packaging materials should not be used as toys for children.

3. Make sure that the hose is not folded over or bent. ! The water pressure at the tap must fall within the values indicated in the Technical data table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. ! Never use second-hand or old inlet hoses; use the products supplied with the machine.

levelling 1. Place the Washer-dryer on a flat sturdy floor, without resting it up against walls or cabinets. 2. If the floor is uneven, the front feet of the machine may be adjusted until it reaches a horizontal position (the angle of inclination must not exceed 2 degrees). 2 Connecting the drain hose Connect the drain hose to drain duct piping or a wall drain located between 65 and 100 cm above the floor, making sure it is not bent at all. The cable should not be bent or compressed. ! The power supply cable and plug must only be replaced by authorised technicians. warning! The company shall not be held responsible in the event that these regulations are not respected. EN 65 - 100 cm Alternatively, rest the drain hose on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater.

technical data ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. 5 cm from 1 to 9 kg for the wash programme from 1 to 7 kg for the drying programme please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 71 litres up to 1400 rotations per minute

Wash: programme ; temperature 60°C; using a load of 9 kg. Drying: the smaller load must be dried by selecting the "EXTRA" dryness level. The load must consist of 2 sheets, 1 pillowcase and 1 hand towel; the remainder of the load must be dried by selecting the "EXTRA" dryness level. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC Dimensions Electrical connections Before plugging the appliance into the electricity socket, make sure that: • the socket is earthed and complies with all applicable laws; • the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); • the power supply voltage falls within the values indicated in the Technical data table (see opposite); • the socket is compatible with the plug of the appliance. If this is not the case, have the socket or the plug replaced. ! The machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions.

! The mains socket must remain within easy reach after the Washer-dryer has been installed. Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 50229 3 Description of the machine EN PORTHOLE DOOR PORTHOLE DOOR HANDLE CONTROL PANEL KICK STRIP PORTHOLE DOOR Always use the handle to open the porthole door (see figure). The use of extra compartment 3 excludes the prewash function. washing additives compartment: for fabric softener or liquid additives. We recommend that the maximum level indicated by the grille is not exceeded, and that concentrated fabric softeners are diluted.

TOUCH CONTROL PANEL To adjust the settings, gently press the icon inside the sensitive (touch control) area as illustrated in the figure. DETERGENT DISPENSER DRAWER The detergent dispenser drawer is located inside the machine and can be accessed by opening the door. For more information on detergent measures, please refer to the chapter entitled "Detergents and laundry". Before pouring in the detergent, make sure that extra compartment 3 has been removed. Standby mode This Washer-dryer, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected.

Press the ON-OFF button briefly and wait for the machine to start up again. 2. Main wash compartment: If liquid detergent is used, it is recommended that the removable plastic partition A (supplied) be used for proper dosage. If powder detergent is used, place the partition into slot B. 4 Touch control panel WASH CYCLE SELECTOR knob M2 M1 START/PAUSE button SPIN button with indicator light TEMPERATURE ECO indicator light WASH CYCLE PHASE icons EN button DISPLAY Button with ON/OFF indicator light DRYING button OPTION buttons CONTROL PANEL LOCK DELAYED START button button with indicator light LOCK indicator light Button with ON/OFF indicator light: press this briefly to switch the machine on or off. The green indicator light indicates that the machine is switched on. To switch off the Washer-dryer during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled. WASH CYCLE SELECTOR knob: may be turned in either direction. To select the most suitable wash cycle, please refer to the "Table of wash cycles".

The knob will not move during the wash cycle. M1-M2 buttons: press and hold one of the buttons to store a cycle with your own set preferences in the memory of the machine. Once the cycle has begun the indicator light will remain lit in a fixed manner. To pause the wash cycle, press the button again; the indicator light will flash in an orange colour. If the "LOCK" indicator light is switched off, the door may be opened. To start the wash cycle from the point at which it was interrupted, press the button again.



[You're reading an excerpt. Click here to read official HOTPOINT AQD970D 49 EU/B user guide](http://yourpdfguides.com/dref/5006003)
<http://yourpdfguides.com/dref/5006003>

LOCK indicator light: indicates that the porthole door is locked. To open the door, pause the wash cycle (see "How to run a wash cycle or a drying cycle").
CONTROL PANEL LOCK button with indicator light: to activate or deactivate the control panel lock, press and hold the button for approximately 2 seconds.

When the indicator light is illuminated, the control panel is locked.

This means it is possible to prevent wash cycles from being modified accidentally, especially where there are children in the home. **ECO indicator light:** the icon lights up when, after altering the washing parameters, an energy saving of at least 10% is made. Furthermore, before the machine enters "Standby" mode, the icon will light up for a few seconds; when the machine is switched off the estimated energy saving will be around the 80% mark. **CHANGE LANGUAGES**The first time the machine is switched on, the first language will flash on the display. The " ", "OK" and "V" symbols will appear on the display, in line with the 3 buttons on the right-hand side.

The languages change automatically every 3"; alternatively, they can be changed by pressing the buttons next to the " " and "V" symbols. Use the "OK" button to confirm the language, which will be set after 2". If no buttons are pressed, the automatic language change will begin again after 30". **DRYING button :** press to decrease or exclude drying; the selected drying level or time will appear on the display (see "How to run a wash cycle or a drying cycle").
TEMPERATURE button: press to modify or exclude the temperature setting; the value selected will appear on the display above (see "How to run a wash cycle or a drying cycle").

OPTION buttons: press to select the available options. **OPTION**The text lights up when the cycle is complete. **OPTION** switch on the machine. **PROGRAMME KNOB** Turn the PROGRAMME KNOB left or right, until the required programme has been selected; the name of the programme will appear on the display. A temperature and spin speed is set for each programme; these may be adjusted. The cycle duration will also appear on the display. Load the laundry, making sure you the option will not be activated. ! If the selected option is not compatible with another option that has been selected previously, the indicator light corresponding to the first option selected will flash and only the second option will be activated; the indicator light corresponding to the button will remain lit in a constant manner. ! The options may affect the recommended load value and/or the duration of the cycle. The corresponding indicator light remains lit in a fixed manner and the porthole door locks (the LOCK indicator light illuminates).

The icons corresponding to the wash cycle phases will light up during the cycle to indicate which phase is currently in progress. To change a wash cycle once it has already started, pause the Washer-dryer by pressing the START/PAUSE button; then select the desired cycle and press the START/PAUSE button again.

To open the door during a wash cycle, press the START/PAUSE button; if the LOCK indicator light is switched off you may open the door. Press the START/PAUSE button again to restart the wash cycle from the point at which it was interrupted. This is indicated by the illuminated text END. The porthole door may be opened immediately to sunlight exposure and preventing loss of whiteness caused by the possible presence of dust in the air. Drying cycles can only be selected on a level basis. **Coloureds:** use this cycle to wash bright coloured clothes. The programme is designed to maintain bright colours over time. **darks:** Use cycle to wash dark-coloured garments.

This programme is designed to maintain dark colours over time. We recommend using a liquid detergent for the best results when washing dark-coloured garments. When you select the drying function, at the end of the In UK, Eire, Hong Kong and India the Woolmark trade mark is a Certification trade mark. **Ultradelicates:** use programme to wash very delicate garments having strasses or sequins. We recommend turning the garments inside out before washing and placing small items into the special bag for washing delicates.

Use liquid detergent on delicate garments for best results. To wash Silk garments and Curtains select cycle and then option ; the machine will end the cycle while the laundry is soaking and the indicator light will flash. To drain the water so that the laundry may be removed, press the START/PAUSE button or the button. When selecting an exclusively time-based drying function, a drying cycle is performed at the end of the wash cycle that is particularly delicate, thanks to light handling and appropriate temperature control of the water jet. The recommended durations are: 1 kg of synthetic garments --> 160 min 1 kg of synthetic and cotton garments --> 180 min 1 kg of cotton garments --> 180 min The degree of dryness depends on the load and fabric composition.

anti Allergy: use programme to remove major allergens such as pollen , mites , cat's and dog's hair. Wash&Dry was designed to wash and dry lightly soiled garments quickly. This cycle may be used to wash and dry a laundry load of up to 1 kg in just 45 minutes. to achieve optimum results , use liquid detergent and pretreat cuffs , collars and stains. **Stubborn stains:** it is wise to treat stubborn stains with solid soap before washing, and to use the Cottons with pre-wash cycle. **8 Precautions and tips !** Do not dry unwashed items in the tumble dryer. Fabric softeners, or similar products, should be used as specified by the fabric softener instructions. The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged. **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. This appliance was designed for domestic use only.

Do not touch the machine when barefoot or with wet or damp hands or feet. Do not pull on the power supply cable when unplugging the appliance from the electricity socket. hold the plug and pull. Do not touch the drained water as it may reach extremely high temperatures. • Never force the porthole door. This could damage the safety lock mechanism designed to prevent accidental opening. If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself. Always keep children well away from the appliance while it is operating. If it must be moved, proceed with the help of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy.

Before loading laundry into the washer dryer, make sure the drum is empty. During the drying phase, the door tends to get quite hot.



[You're reading an excerpt. Click here to read official HOTPOINT AQD970D 49 EU/B user guide](#)
<http://yourpdfguides.com/dref/5006003>

□ Do not use the appliance to dry clothes that have been washed with flammable solvents (e. □ Do not use the appliance to dry foam rubber or similar elastomers. □ Disposing of the packaging materials: observe local regulations so that the packaging may be re-used.

□ The European Directive 2002/96/EC relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the cost of re-using and recycling the materials inside the machine, while preventing potential damage to the atmosphere and to public health. The crossed-out dustbin is marked on all products to remind the owner of their obligations regarding separated waste collection. For more information relating to the correct disposal of household appliances, owners should contact their local authorities or appliance dealer. Opening the porthole door manually In the event that it is not possible to open the porthole door due to a powercut, and if you wish to remove the laundry, proceed as follows: 1.

Remove the plug from the electrical socket. 2. Make sure the water level inside the machine is lower than the door opening; if it is not, remove excess water using the drain hose, collecting it in a bucket as indicated in the figure. 3. Remove the cover panel on the lower front part of the washer dryer (see overleaf). 4. Pull outwards using the tab as indicated in the figure, until the plastic tie-rod is freed from its stop position; pull downwards until you hear a “click”, which indicates that the door is now unlocked. 5. Open the door; if this is still not possible repeat the procedure. 6.

@@9 Care and maintenance EN Cutting off the water and electricity supplies • Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system in the machine and help to prevent leaks. □ Unplug the appliance when cleaning it and during all maintenance work. to access the pre-chamber: 1 2 1. Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures); 2. Position a container so that it will collect the water which flows out (approximately 1. 5 l) (see figure); 3. Unscrew the lid by rotating it in an anti-clockwise direction (see figure); Cleaning the machine The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. do not use solvents or abrasives. Cleaning the detergent dispenser drawer 1 1 2 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure).

@@ Screw the lid back on; 6. @@@@ If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Cleaning the pump The Washer-dryer is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the protective prechamber at the base of the pump. ! Make sure the wash cycle has finished and unplug the appliance.

10 Trouble shooting Your Washer-dryer could occasionally fail to work. @@ eN Problem: The Washer-dryer does not switch on. The wash cycle does not start. @@ □ There is no power in the house. •••• The door is not closed properly.

The START/PAUSE button has not been pressed. The water tap has not been opened. a delayed start has been set. @@ □ The pressure is too low. @@ The machine continuously fills with • The drain hose is not fitted at a height between 65 and 100 cm from the floor (see “Installation”). water and drains. □ The free end of the hose is under water (see “Installation”). □ If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the Washer-dryer to fill with water and drain continuously. Special anti-draining valves are available in shops and help to prevent this inconvenience. □ The wall drainage system is not fitted with a breather pipe.

The Washer-dryer does not drain or • The wash cycle does not include draining: Some wash cycles require the drain phase to be started manually (see “Wash cycles and options”). spin. □ The “Easy iron” option is enabled: to complete the wash cycle, press the START/PAUSE button (“Wash cycles and options”). The machine vibrates a lot during • The drum was not unlocked correctly during installation (see “Installation”). □ The detergent dispenser is blocked (to clean it, see “Care and maintenance”). • The drain hose is not fixed in place properly (see “Installation”). The icons corresponding to the “Phase in progress” flash rapidly at the same time as the ON/OFF indicator light. There is too much foam. □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service.

□ The detergent is not suitable for machine washing (it should display the text “for Washing machine” or “hand and machine wash”, or the like). □ •••• The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The appliance door is not shut properly. The washer-dryer does not dry.

11 Assistance EN Before calling for Assistance: • Check whether you can solve the problem by yourself (see “Trouble shooting”); • Restart the wash cycle to check whether the problem has been solved; • If it has not, contact the Authorised Technical Assistance Service. ! If the Washer-dryer has been installed or used incorrectly, you will have to pay for the call-out service. ! Always request the assistance of authorised technicians. Please have the following information to hand: • the type of problem; • the appliance model (Mod.); • the serial number (S/N).

The above information can be found on the data plate located on the appliance itself. ! Note: to exit “Demo mode”, switch machine off, press and hold the two “START/PAUSE” simultaneously for 3 seconds. În cazul în care mașina este instalată pe mochetă sau covor, reglați piciorușele la o înălțime care să asigure mașinii de spălat un spațiu suficient pentru ventilare. □ Aparatul nu trebuie utilizat de către persoane (inclusiv copii) cu capacități fizice, senzoriale sau mentale reduse și cu experiență sau cunoștințe insuficiente, exceptând cazul în care această utilizare are loc sub supravegherea sau instrucțiunile unei persoane responsabile cu securitatea lor. .



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[AQD970D 49 EU/B user guide](#)

<http://yourpdfguides.com/dref/5006003>