



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT AQD970F 49 EU. You'll find the answers to all your questions on the HOTPOINT AQD970F 49 EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT AQD970F 49 EU
User guide HOTPOINT AQD970F 49 EU
Operating instructions HOTPOINT AQD970F 49 EU
Instructions for use HOTPOINT AQD970F 49 EU
Instruction manual HOTPOINT AQD970F 49 EU

Instructions for installation and use

WASHER DRYER

This symbol reminds you to read this instruction manual.

EN

EN

English,1

PL

Polski,13

CZ

Česky,37

SK

Slovensky,49

AQUALTIS

AQD970F 49

Contents

Installation, 2-3

Unpacking and levelling
Connecting the electricity and water supplies
Technical data

Description of the machine, 4-5

Control panel

How to run a wash cycle or a drying cycle, 6

Wash cycles and options, 7
Table of wash cycles
Wash options

Detergents and laundry, 8

Detergent
Preparing the laundry
Washing recommendations
Load balancing system

Precautions and advice, 9

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 10

Cutting off the water and electricity supplies
Cleaning the machine
Cleaning the detergent dispenser drawer
Caring for your appliance drum
Cleaning the pump
Checking the water inlet hose

Trouble shooting, 11

Assistance, 12



[You're reading an excerpt. Click here to read official HOTPOINT AQD970F 49 EU user guide](http://yourpdfguides.com/dref/4643237)
<http://yourpdfguides.com/dref/4643237>

Manual abstract:

! Inside the pack containing this manual, you will also find the guarantee and all the details necessary for installation. ! If the appliance is levelled correctly, it will be more stable and much less likely to cause vibrations and noise while it is operating, particularly during the spin cycle. ! If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the wasdher-dryer. @@@@ 1. @@ unpacking and levelling

Unpacking 1. @@ If it has been damaged, contact the retailer and do not proceed any further with the installation process. 2. Remove the 4 protective screws (used during transportation) and the corresponding spacer, located on the rear part of the appliance (see figure). 2. Connect the inlet hose by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure).

3. Close off the holes using the plastic plugs supplied in the pack. 4. Keep all the parts in a safe place; they will be needed again if the wasdher-dryer is moved to another location, to prevent the inside of the appliance being damaged. ! Packaging materials should not be used as toys for children.

3. Make sure that the hose is not folded over or bent. ! The water pressure at the tap must fall within the values indicated in the Technical data table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. ! Never use second-hand or old inlet hoses; use the products supplied with the machine.

levelling 1. Place the wasdher-dryer on a flat sturdy floor, without resting it up against walls or cabinets. 2. If the floor is uneven, the front feet of the machine may be adjusted until it reaches a horizontal position (the angle of inclination must not exceed 2 degrees). 2 Connecting the drain hose Connect the drain hose to drain duct piping or a wall drain located between 65 and 100 cm above the floor, making sure it is not bent at all. The cable should not be bent or compressed. ! The power supply cable and plug must only be replaced by authorised technicians. warning! The company shall not be held responsible in the event that these regulations are not respected. EN 65 - 100 cm Alternatively, rest the drain hose on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater.

technical data ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. 5 cm from 1 to 9 kg for the wash programme from 1 to 7 kg for the drying programme please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 71 litres up to 1400 rotations per minute

Wash: programme ; temperature 60°C; using a load of 9 kg. Drying: the smaller load must be dried by selecting the "EXTRA" dryness level. The load must consist of 2 sheets, 1 pillowcase and 1 hand towel; the remainder of the load must be dried by selecting the "EXTRA" dryness level. This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC Dimensions Electrical connections Before plugging the appliance into the electricity socket, make sure that: â€¢ the socket is earthed and complies with all applicable laws; â€¢ the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); â€¢ the power supply voltage falls within the values indicated in the Technical data table (see opposite); â€¢ the socket is compatible with the plug of the appliance. If this is not the case, have the socket or the plug replaced. ! The appliance must only be installed indoor in a frost free and dry room, to prevent it from electronic damage due to frost or condensation. ! The mains socket must remain within easy reach after the wasdher-dryer has been installed.

Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 50229 3 Description of the machine EN PORTHOLE DOOR PORTHOLE DOOR HANDLE CONTROL PANEL KICK STRIP ADJUSTABLE FEET PORTHOLE DOOR Always use the handle to open the porthole door (see figure). Before pouring in the detergent, make sure that extra compartment 3 has been removed. 2. Main wash compartment: If liquid detergent is used, it is recommended that the removable plastic partition A (supplied) be used for proper dosage. If powder detergent is used, place the partition into slot B.

DETERGENT DISPENSER DRAWER The detergent dispenser drawer is located inside the machine and can be accessed by opening the door. For more information on detergent measures, please refer to the chapter entitled "Detergents and laundry". The use of extra compartment 3 excludes the prewash function. washing additives compartment: for fabric softener or liquid additives. We recommend that the maximum level indicated by the grille is not exceeded, and that concentrated fabric softeners are diluted.

Standby mode This wasdher-dryer, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected. Press the ON-OFF button briefly and wait for the machine to start up again. 4 Control panel ECO indicator light WASH CYCLE SELECTOR knob OPTION buttons with indicator lights OPTION buttons with indicator lights START/ PAUSE WASH CYCLE PHASE icons EN button with indicator light DISPLAY Button with ON/OFF indicator light TEMPERATURE button DRYING button DELAYED START button LOCK indicator light CONTROL PANEL LOCK button with indicator light Button with ON/OFF indicator light: press this briefly to switch the machine on or off. The green indicator light indicates that the machine is switched on. To switch off the wasdher-dryer during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled. WASH CYCLE SELECTOR knob: may be turned in either direction. To select the most suitable wash cycle, please refer to the "Table of wash cycles". The knob will not move during the wash cycle. TEMPERATURE button: press to modify or exclude the temperature setting; the value selected will appear on the display above (see "How to run a wash cycle or a drying cycle").

DRYING button : press to decrease or exclude drying; the selected drying level or time will appear on the display (see "How to run a wash cycle or a drying cycle"). DELAYED START button: press to set a delayed start for the selected wash cycle; the set delay time will appear on the display above (see "How to run a wash cycle or a drying cycle").



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[AQD970F 49 EU user guide](#)

<http://yourpdfguides.com/dref/4643237>

OPTION buttons with indicator lights: press to select the available options. The indicator light corresponding to the selected option will remain lit (see How to run a wash cycle or a drying cycle). WASH CYCLE PHASE icons: these illuminate to indicate the progress of the wash cycle (Wash Rinse Spin/Drain Drying). The text lights up when the cycle is complete. START/PAUSE button with indicator light: when the green indicator light flashes slowly, press the button to start a wash cycle. LOCK indicator light: indicates that the porthole door is locked. When the indicator light is illuminated, the control panel is locked. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of wash cycles on the following page.

Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments as described in Description of the machine. Turn the WASH CYCLE SELECTOR KNOB right or left, until you have selected the desired wash cycle. A temperature and spin speed is set for each wash cycle; these may be adjusted. Use the relevant buttons on the control panel: Modify the temperature. The machine automatically displays the maximum temperature values set for the selected cycle, or the most recently-used settings if they are compatible with the selected cycle.

The temperature can be decreased by pressing the button, until the cold wash () setting is reached. If this button is pressed again, the maximum values are restored. ! Exception: if the programme is selected, the temperature can be increased up to a value of 90°C. setting the drying cycle. The first time the button is pressed, the machine will automatically select the maximum drying cycle which is compatible with the selected wash cycle.

Subsequent presses will decrease the drying level and then the drying time, until the cycle is excluded completely (). If this button is pressed again, the maximum values are restored. Drying may be set as follows: A - Based on a set time period: between 20 and 180 minutes. B- Based on the desired laundry dryness level: Iron 1: suitable for clothes which will need ironing afterwards. The remaining dampness softens creases, making them easier to remove. Hanger 2: ideal for clothes which do not need to be dried fully. Cupboard 3: suitable for laundry which can be put back in a cupboard without being ironed. Extranot; 9 5 5 6 6 6 2,5 1 6 9 9 1 7 2,5 5 9 9 (*) The duration of the wash cycles can be checked on the display. 90°C) The length of cycle shown on the display or in this booklet is an estimation only and is calculated assuming standard working conditions. The actual duration can vary according to factors such as water temperature and pressure, the amount of detergent used, the amount and type of load inserted, load balancing and any wash options selected.

(*) Note: 10 minutes after the START, the machine will recal the drying cycles. EN Disposal General safety This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Do not dry unwashed items in the tumble dryer. Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer. Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer. Fabric softeners, or similar products, should be used as specified by the fabric softener instructions. This appliance was designed for domestic use only. hold the plug and pull. Never force the porthole door. Never try to do this alone, because the appliance is very heavy. Do not use the appliance to dry clothes that have been washed with flammable solvents (e. Do not use the appliance to dry foam rubber or similar elastomers. Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. The European Directive 2002/96/EC relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle.

Exhausted appliances should be collected separately in order to optimise the cost of re-using and recycling the materials inside the machine, while preventing potential damage to the atmosphere and to public health. The crossed-out dustbin is marked on all products to remind the owner of their obligations regarding separated waste collection. For more information relating to the correct disposal of household appliances, owners should contact their local authorities or appliance dealer. Opening the porthole door manually In the event that it is not possible to open the porthole door due to a powercut, and if you wish to remove the laundry, proceed as follows: 1. Remove the plug from the electrical socket.

2. Make sure the water level inside the machine is lower than the door opening; if it is not, remove excess water using the drain hose, collecting it in a bucket as indicated in the figure. 3. Remove the cover panel on the lower front part of the washer dryer (see overleaf). 4. Pull outwards using the tab as indicated in the figure, until the plastic tie-rod is freed from its stop position; pull downwards until you hear a click, which indicates that the door is now unlocked. 5. Open the door; if this is still not possible repeat the procedure. 6. Care and maintenance EN Cutting off the water and electricity supplies Turn off the water tap after every wash cycle.

This will limit wear on the hydraulic system in the machine and help to prevent leaks.



[You're reading an excerpt. Click here to read official HOTPOINT AQD970F 49 EU user guide](http://yourpdfguides.com/dref/4643237)
<http://yourpdfguides.com/dref/4643237>

⚠️ Unplug the appliance when cleaning it and during all maintenance work. to access the pre-chamber: 1 2 1. Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures); 2. Position a container so that it will collect the water which flows out (approximately 1.5 l) (see figure); 3. Unscrew the lid by rotating it in an anti-clockwise direction (see figure); Cleaning the machine The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. do not use solvents or abrasives. Cleaning the detergent dispenser drawer 1 1 2 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure). @@ Screw the lid back on; 6.

@@@@@ If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Cleaning the pump The washer-dryer is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the protective prechamber at the base of the pump. Make sure the wash cycle has finished and unplug the appliance. 10

Trouble shooting Your washer-dryer could occasionally fail to work.

@ eN Problem: The Washer-dryer does not switch on. The wash cycle does not start. @⚠️ There is no power in the house. @ The START/PAUSE button has not been pressed. The water tap has not been opened.

a delayed start has been set. @⚠️ The pressure is too low. ⚠️ If you have selected the function, at the end of the cycle the Washer-dryer drum will rotate slowly; to end the cycle press the START/PAUSE button or the button. The machine continuously fills with ⚠️ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see ⚠️ Installation⚠️). water and drains. ⚠️ The free end of the hose is under water (see ⚠️ Installation⚠️). ⚠️ If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the Washer-dryer to fill with water and drain continuously. Special anti-draining valves are available in shops and help to prevent this inconvenience. ⚠️ The wall drainage system is not fitted with a breather pipe. The Washer-dryer does not drain or ⚠️ The wash cycle does not include draining: Some wash cycles require the drain phase to be started manually (see ⚠️ Wash cycles and options⚠️).

spin. ⚠️ The option is enabled: to complete the wash cycle, press the START/ PAUSE button (⚠️ Wash cycles and options⚠️). The machine vibrates a lot during ⚠️ The drum was not unlocked correctly during installation (see ⚠️ Installation⚠️). ⚠️ The detergent dispenser is blocked (to clean it, see ⚠️ Care and maintenance⚠️). ⚠️ The drain hose is not fixed in place properly (see ⚠️ Installation⚠️). The icons corresponding to the ⚠️ Phase in progress⚠️ flash rapidly at the same time as the ON/OFF indicator light. There is too much foam. ⚠️ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. ⚠️ The detergent is not suitable for machine washing (it should display the text ⚠️ for Washing machine⚠️ or ⚠️ hand and machine wash⚠️, or the like).

⚠️ ⚠️ ⚠️ ⚠️ ⚠️ The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The appliance door is not shut properly. The washer-dryer does not dry. 11 Assistance EN Before calling for Assistance: ⚠️ Check whether you can solve the problem by yourself (see ⚠️ Trouble shooting⚠️); ⚠️ Restart the wash cycle to check whether the problem has been solved; ⚠️ If it has not, contact the Authorised Technical Assistance Service.

! If the washer-dryer has been installed or used incorrectly, you will have to pay for the call-out service. ! Always request the assistance of authorised technicians. Please have the following information to hand: ⚠️ the type of problem; ⚠️ the appliance model (Mod.); ⚠️ the serial number (S/N). The above information can be found on the data plate located on the appliance itself.

! Note: to exit ⚠️ Demo mode⚠️, switch machine off, then press and hold the two ⚠️ START/PAUSE⚠️ simultaneously for 3 seconds. .



[You're reading an excerpt. Click here to read official HOTPOINT AQD970F 49 EU user guide](http://yourpdfguides.com/dref/4643237)
<http://yourpdfguides.com/dref/4643237>