



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT AQM8F 49 U. You'll find the answers to all your questions on the HOTPOINT AQM8F 49 U in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT AQM8F 49 U
User guide HOTPOINT AQM8F 49 U
Operating instructions HOTPOINT AQM8F 49 U
Instructions for use HOTPOINT AQM8F 49 U
Instruction manual HOTPOINT AQM8F 49 U

Instructions for installation and use

WASHER-DRYER

EN

English,1

ES

Español,13

AQUALTIS

AQM8F 49 U

Contents

EN

Installation, 2-3

Unpacking and levelling
Connecting the electricity and water supplies
Technical data

Description of the machine, 4-5

Control panel

How to run a wash cycle or a drying cycle, 6

Wash cycles and options, 7

Table of wash cycles
Wash options

Detergents and laundry, 8

Detergent
Preparing the laundry
Washing recommendations
Load balancing system

Precautions and advice, 9

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 10

Cutting off the water and electricity supplies
Cleaning the machine
Cleaning the detergent dispenser drawer
Caring for your appliance drum
Cleaning the pump
Checking the water inlet hose

Trouble shooting, 11

Assistance, 12


ARISTON

1



[You're reading an excerpt. Click here to read official HOTPOINT AQM8F 49 U user guide](http://yourpdfguides.com/dref/4484370)
<http://yourpdfguides.com/dref/4484370>

Manual abstract:

□ If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the washer-dryer. Connecting the electricity and water supplies Connecting the water inlet hose □ Before connecting the inlet hose to the water supply, run the water until it is perfectly clear. 1. Connect the inlet hose to the machine by screwing it onto the cold water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure). unpacking and levelling Unpacking 1. Once you have removed all the packaging from the washer-dryer, make sure it has not been damaged during transportation. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 2. Remove the 4 protective screws (used during transportation) and the corresponding spacer, located on the rear part of the appliance (see figure). 2.

Connect the inlet hose by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). 3. Close off the holes using the plastic plugs supplied in the pack. 4. Keep all the parts in a safe place; they will be needed again if the washer-dryer is moved to another location, to prevent the inside of the appliance being damaged.

□ Packaging materials should not be used as toys for children. 3. Make sure that the hose is not folded over or bent. □ The water pressure at the tap must fall within the values indicated in the Technical data table (see next page). □ If the inlet hose is not long enough, contact a specialised shop or an authorised technician.

□ Never use second-hand or old inlet hoses; use the products supplied with the machine. levelling 1. Place the washer-dryer on a flat sturdy floor, without resting it up against walls or cabinets. 2. If the floor is uneven, the front feet of the machine may be adjusted until it reaches a horizontal position (the angle of inclination must not exceed 2 degrees). @@@@ warning! @@@@The free end of the hose should not be underwater. □ We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Technical data Model AQM8F 49 U width 59,5 cm height 85 cm depth 64,5 cm from 1 to 8 kg for wash programme from 1 to 6 kg for the drying programme please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 62 litres up to 1400 rotations per minute Wash: programme ; temperature 60°C; using a load of 8 kg.

Drying: first drying cycle performed with a 2 kg load, by selecting the drying level "L1"; Second drying cycle performed with a 6 kg load, selecting the maximum drying level "L4". This appliance conforms to the following EC Directives: - 89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications - 2006/95/EC (Low Voltage) - 2002/96/EC Electrical connections Before plugging the appliance into the electricity socket, make sure that: □ the socket is earthed and complies with all applicable laws; □ the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); □ the power supply voltage falls within the values indicated in the Technical data table (see opposite); □ the socket is compatible with the plug of the appliance. If this is not the case, have the socket or the plug replaced. □ The machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. □ The mains socket must remain within easy reach after the washer-dryer has been installed. Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 50229 3 Description of the machine EN PORTHOLE DOOR PORTHOLE DOOR HANDLE CONTROL PANEL KICK STRIP ADJUSTABLE FEET PORTHOLE DOOR Always use the handle to open the porthole door (see figure). DETERGENT DISPENSER DRAWER The detergent dispenser drawer is located inside the machine and can be accessed by opening the door. For more information on detergent measures, please refer to the chapter entitled □Detergents and laundry□. Note: stick the label showing the wash cycle descriptions and options on the front of the detergent dispenser drawer.

You will find the sticker in the pack containing this manual. 3 □ Before pouring in the 1 detergent, make sure that extra compartment 3 has 2 been removed. 2. Main wash compartment: use powder or liquid detergent. If using the latter type of detergent, we recommend it is poured into the drawer immediately before you start the washerdryer.

3. Extra compartment: Bleach □ The use of extra compartment 3 excludes the prewash function. washing additives compartment: for fabric softener or liquid additives. We recommend that the maximum level indicated by the grille is not exceeded, and that concentrated fabric softeners are diluted. Standby mode This washer-dryer, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after a few minutes if no activity is button briefly and wait detected.

Press the ON-OFF for the machine to start up again. 4 Control panel DRYING display TEMPERATURE display WASH CYCLE SELECTOR knob OPTION buttons with indicator lights DELAYED START/CYCLE DURATION□display ECO indicator light icons START/PAUSE OPTION buttons with button with indicator indicator lights light WASH CYCLE PHASE EN Button with□ON/OFF indicator light TEMPERATURE button DRYING button DELAYED START button DOOR LOCKED indicator light indicator light CONTROL PANEL LOCK button with Button with □ON/OFF indicator light: press this briefly to switch the machine on or off. The green indicator light indicates that the machine is switched on. To switch off the washer-dryer during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled. WASH CYCLE SELECTOR knob: may be turned in either direction. To select the most suitable wash cycle, please refer to the □Table of wash cycles□. The knob will not move during the wash cycle. Button: press to modify or exclude TEMPERATURE the temperature setting; the value selected will appear on the display above (see "How to run a wash cycle or a drying cycle"). @@@@ @@@@The text Rinse lights up when the cycle is complete.

@@@@@@@@@@@@@@@@To open the door, pause the wash cycle (see "How to run a wash cycle or a drying cycle"). Button with indicator CONTROL PANEL LOCK light: to activate or deactivate the control panel lock, press and hold the button for approximately 2 seconds. When the indicator light is illuminated, the control panel is locked. This means it is possible to prevent wash cycles from being modified accidentally, especially where there are children in the home.



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/4484370)

[AQM8F 49 U user guide](http://yourpdfguides.com/dref/4484370)

<http://yourpdfguides.com/dref/4484370>

Icon lights up when, after ECO indicator light: the altering the washing parameters, an energy saving of at least 10% is made. Furthermore, before the machine enters Standby mode, the icon will light up for a few seconds; when the machine is switched off the estimated energy saving will be around the 80% mark. 5 How to run a wash cycle or a drying cycle EN WARNING: before you use the washer-dryer for the first time, run a wash cycle with detergent and no laundry, using the 90° cottons cycle without pre-wash. Press the All the indicator lights will illuminate for 1 second; the button will then indicator light corresponding to the remain lit in a fixed manner and the START/PAUSE indicator light will flash slowly. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of wash cycles on the following page. Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments as described in Description of the machine.

Turn the WASH CYCLE SELECTOR KNOB right or left, until you have selected the desired wash cycle. A temperature and spin speed is set for each wash cycle; these may be adjusted. Use the relevant buttons on the control panel: Modify the temperature. The machine automatically displays the maximum temperature values set for the selected cycle, or the most recently-used settings if they are compatible with the selected cycle. The temperature can be decreased by pressing the button, until the cold wash () setting is reached.

If these buttons are pressed again, the maximum values are restored. Exception: if the Cottons programme is selected, the temperature can be increased up to a value of 90°C. Setting the drying cycle is pressed, the machine The first time the button will automatically select the maximum drying cycle which is compatible with the selected wash cycle. Subsequent presses will decrease the drying level and then the drying time, until the cycle is excluded completely ().

If these buttons are pressed again, the maximum values are restored.

Drying may be set as follows: A - Based on a set time period: between 20 and 180 minutes. B- Based on the desired laundry dryness level: Iron (L1): suitable for clothes which will need ironing afterwards. The remaining dampness softens creases, making them easier to remove. Hanger (L2): ideal for clothes which do not need to be dried fully. Cupboard (L3): suitable for laundry which can be put back in a cupboard without being ironed. Extra (L4): suitable for garments which need to be dried completely, such cottons: set wash cycle with a temperature of 40°C. 3) Short wash cycle for cottons: set wash cycle with a temperature of 40°C. 3 It can be used with or without bleach. 3 It cannot be used in conjunction with , , , , , , , super Wash indicator lights will flash.

It cannot be used in conjunction with , , , , , , . (*) The duration of the wash cycles can be checked on the display. Use this cycle for lightly soiled garments. It cannot be used in conjunction with , , , , , , . It is particularly useful for skin which is sensitive to detergents. It cannot be used in conjunction with , , , , , . use gentle liquid detergents for wool and silk garments. Curtains: use the Silk wash cycle. fold curtains and place them in a pillow case or mesh bag. we recommend the use of powder detergent. Wash & not use the appliance to dry clothes that have been washed with flammable solvents (e. Do not use the appliance to dry foam rubber or similar elastomers. 3. 4. 5.

Open the door; if this is still not possible repeat the procedure. 6. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. 9 Care and maintenance EN Cutting off the water and electricity supplies Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system in the machine and help to prevent leaks.

Unplug the appliance when cleaning it and during all maintenance work. to access the pre-chamber: 1 2 1. Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures); 2. Position a container so that it will collect the water which flows out (approximately 1. Screw the lid back on; 6. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Cleaning the machine The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. do not use solvents or abrasives. Cleaning the detergent dispenser drawer 1 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure). Wash it under running water; this procedure should be repeated frequently.

2 Caring for your appliance drum Always leave the door ajar to prevent unpleasant odours from forming. Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Cleaning the pump The washer-dryer is fitted with a self-cleaning pump which does not require any maintenance. Make sure the wash cycle has finished and unplug the appliance. There is no power in the house. The door is not closed properly. The START/PAUSE button has not been pressed. The water tap has not been opened. a delayed start has been set.

The water inlet hose is not connected to the tap. the hose is bent. The water tap has not been opened. There is no water supply in the house. The pressure is too low.

The START/PAUSE button has not been pressed. The washer-dryer does not switch on. The wash cycle does not start. The washer-dryer does not fill with water. The washer-dryer door remains locked.

option, when If you have selected the Baby cycle or the Easy iron the wash cycle has finished the machine will slowly rotate the drum; to end the cycle press the START/PAUSE button or the Easy iron button. If you have selected the Silk wash cycle, the machine will end the cycle while the laundry is soaking; to drain the water so that the laundry may be removed, press the START/PAUSE button or the Easy iron button. The drain hose is not fitted at a height between 65 and 100 cm from the floor (see Installation). The free end of the hose is under water (see Installation). If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washer-dryer to fill with water and drain continuously. Special anti-draining valves are available in shops and help to prevent this inconvenience. The wall drainage system is not fitted with a breather pipe. The wash cycle does not include draining: Some wash cycles require the drain phase to be started manually (see Wash cycles and options).



[You're reading an excerpt. Click here to read official HOTPOINT AQM8F 49 U user guide](http://yourpdfguides.com/dref/4484370)
<http://yourpdfguides.com/dref/4484370>

□ The □Easy iron□ option is enabled: to complete the wash cycle, press the START/PAUSE button (□Wash cycles and options□). @@The machine continuously fills with water and drains.

The washer-dryer does not drain or spin. The machine vibrates a lot during the spin cycle. the washer-dryer leaks. @@There is too much foam. @@@@ The drain hose is not fixed in place properly (see □Installation□). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. □ The detergent is not suitable for machine washing (it should display the text □for washer-dryers□ or □hand and machine wash□, or the like). The washer-dryer does not dry. □ □ □ □ The appliance is not plugged into the socket, or not enough to make contact.

There has been a power failure. The appliance door is not shut properly. 11 Assistance EN Before calling for Assistance: □ Check whether you can solve the problem by yourself (see □Trouble shooting□); □ Restart the wash cycle to check whether the problem has been solved; □ If it has not, contact the Authorised Technical Assistance Service. □ If the washer-dryer has been installed or used incorrectly, you will have to pay for the call-out service. □ Always request the assistance of authorised technicians.

Please have the following information to hand: □ the type of problem; □ the appliance model (Mod.); □ the serial number (S/N). The above information can be found on the data plate located on the appliance itself. □ Note: To exit □Demo mode□, press and hold the two □ON/OFF□ and □START/PAUSE□ buttons simultaneously for 3 seconds. .



[You're reading an excerpt. Click here to read official HOTPOINT AQM8F 49 U user guide](http://yourpdfguides.com/dref/4484370)
<http://yourpdfguides.com/dref/4484370>