



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT AQM9D 49 U. You'll find the answers to all your questions on the HOTPOINT AQM9D 49 U in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT AQM9D 49 U
User guide HOTPOINT AQM9D 49 U
Operating instructions HOTPOINT AQM9D 49 U
Instructions for use HOTPOINT AQM9D 49 U
Instruction manual HOTPOINT AQM9D 49 U

Instructions for installation and use

WASHER-DRYER

EN

English,1

GR

ΕΛΛΗΝΙΚΑ,13

PL

Polski,27

CSI

Русский,39

AQUALTIS

AQM9D 49 U

Contents

EN

Installation, 2-3

Unpacking and levelling
Connecting the electricity and water supplies
Technical data

Description of the machine, 4-5

Touch control panel

How to run a wash cycle or a drying cycle, 6

Table of wash cycles
Wash options

Wash cycles and options, 7

Table of wash cycles
Wash options

Detergents and laundry, 8

Detergent
Preparing the laundry
Washing recommendations
Load balancing system

Precautions and advice, 9

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 10

Cutting off the water and electricity supplies
Cleaning the machine
Cleaning the detergent dispenser drawer
Caring for your appliance drum
Cleaning the pump
Checking the water inlet hose

Trouble shooting, 11

Assistance, 12

 **Hotpoint**
ARISTON

1



[You're reading an excerpt. Click here to read official HOTPOINT AQM9D 49 U user guide](http://yourpdfguides.com/dref/4484367)
<http://yourpdfguides.com/dref/4484367>

Manual abstract:

□ If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the washing machine. Connecting the electricity and water supplies Connecting the water inlet hose □ Before connecting the inlet hose to the water supply, run the water until it is perfectly clear. 1. Connect the inlet hose to the machine by screwing it onto the cold water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure). unpacking and levelling Unpacking 1. @@@@ 2. @@ 3. Close off the holes using the plastic plugs supplied in the pack. 4. Keep all the parts in a safe place; they will be needed again if the washing machine is moved to another location, to prevent the inside of the appliance being damaged. □ Packaging materials should not be used as toys for children. 3. Make sure that the hose is not folded over or bent. □ The water pressure at the tap must fall within the values indicated in the Technical data table (see next page).

□ If the inlet hose is not long enough, contact a specialised shop or an authorised technician. □ Never use second-hand or old inlet hoses; use the products supplied with the machine. levelling 1. Place the washing machine on a flat sturdy floor, without resting it up against walls or cabinets. 2. If the floor is uneven, the front feet of the machine may be adjusted until it reaches a horizontal position (the angle of inclination must not exceed 2 degrees). 2 Connecting the drain hose Connect the drain hose to drain duct piping or a wall drain located between 65 and 100 cm above the floor, making sure it is not bent at all. □ The power supply cable and plug must only be replaced by authorised technicians. warning! The company shall not be held responsible in the event that these regulations are not respected. EN 65 - 100 cm Alternatively, rest the drain hose on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. □ We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Technical data Model AQM9D 49 U width 59,5 cm height 85 cm depth 64,5 cm from I to 9 kg for wash programme from 1 to 6 kg for the drying programme please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 62 litres up to 1400 rotations per minute Wash: programme ; temperature 60°C; using a load of 9 kg.

Drying: first drying cycle performed with a 3 kg load, by selecting the drying level "IRON"; Second drying cycle performed with a 6 kg load, selecting the maximum drying level "EXTRA". This appliance conforms to the following EC Directives: - 89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications - 2006/95/EC (Low Voltage) - 2002/96/EC Electrical connections Before plugging the appliance into the electricity socket, make sure that: □ the socket is earthed and complies with all applicable laws; □ the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); □ the power supply voltage falls within the values indicated in the Technical data table (see opposite); □ the socket is compatible with the plug of the appliance. If this is not the case, have the socket or the plug replaced. □ The machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. □ The mains socket must remain within easy reach after the washing machine has been installed. Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 50229 3 Description of the machine EN CONTROL PANEL PORTHOLE DOOR PORTHOLE DOOR HANDLE KICK STRIP ADJUSTABLE FEET PORTHOLE DOOR Always use the handle to open the porthole door (see figure). Recommend it is poured into the drawer immediately before you start the washer-dryer. 3. Extra compartment: Bleach □ The use of extra compartment 3 excludes the prewash function. washing additives compartment: for fabric softener or liquid additives. We recommend that the maximum level indicated by the grille is not exceeded, and that concentrated fabric softeners are diluted. TOUCH CONTROL PANEL To adjust the settings, gently press the icon inside the sensitive (touch control) area as illustrated in the figure. 20 DETERGENT DISPENSER DRAWER The detergent dispenser drawer is located inside the machine and can be accessed by opening the door. For more information on detergent measures, please refer to the chapter entitled □Detergents and laundry□.

Note: stick the label showing the wash cycle descriptions and options on the front of the detergent dispenser drawer. You will find the sticker in the pack containing this manual. □ Before pouring in the detergent, make sure that extra compartment 3 has been removed. 2. Main wash compartment: use powder or liquid detergent.

If using the latter type of detergent, we Standby mode This washer-dryer, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after a few minutes if no activity is button briefly and wait detected. Press the ON-OFF for the machine to start up again. CHANGE LANGUAGE The first time the machine is switched on, the first language will flash on the display. The " ", "OK" and "V" symbols will appear on the display, in line with the 3 buttons on the righthand side. The languages change automatically every 3"; alternatively, they can be changed by pressing the buttons next to the " " and "V" symbols. Use the "OK" button to confirm the language, which will be set after 2". If no buttons are pressed, the automatic language change will begin again after 30". The language may only be changed while the machine is switched off. +spin +delayed start Press and hold the temperature buttons for 5"; a short beep sounds and the set language flashes on the display. Press the buttons next to the " " and "V" symbols to change the language.

Use the button next to the "OK" symbol to confirm the language, which will be set after 2". If no buttons are pressed, the language set previously will be displayed after 30". switch on the machine. 3 1 2 4 Touch control panel SPIN WASH CYCLE SELECTOR knob button START/PAUSE□button with indicator light EN M2 M1 TEMPERATURE button ECO indicator light WASH CYCLE PHASE icons DISPLAY Button with□ON/OFF indicator light DRYING OPTION buttons DELAYED START button CONTROL PANEL LOCK button with indicator light DOOR LOCKED indicator light Button with □ON/OFF indicator light: press this briefly to switch the machine on or off.



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/4484367)

[AQM9D 49 U user guide](http://yourpdfguides.com/dref/4484367)

<http://yourpdfguides.com/dref/4484367>

The green indicator light indicates that the machine is switched on. To switch off the washer-dryer during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled. WASH CYCLE SELECTOR knob: may be turned in either direction. The knob will not move during the wash cycle.

OPTION buttons: press to select the available options.

The text lights up when the cycle is complete. To pause the wash cycle, press the button again; the indicator light will flash in an orange colour. If the Door locked indicator light is switched off, the door may be opened. To start the wash cycle from the point at which it was interrupted, press the button again. DOOR LOCKED indicator light: indicates that the porthole door is locked.

To open the door, pause the wash cycle (see How to run a wash cycle or a drying cycle). CONTROL PANEL LOCK button with indicator light: to activate or deactivate the control panel lock, press and hold the button for approximately 2 seconds. When the indicator light is illuminated, the control panel is locked. This means it is possible to prevent wash cycles from being modified accidentally, especially where there are children in the home. ECO indicator light: the icon lights up when, after altering the washing parameters, an energy saving of at least 10% is made.

Furthermore, before the machine enters Standby mode, the icon will light up for a few seconds; when the machine is switched off the estimated energy saving will be around the 80% mark. How to run a wash cycle or a drying cycle EN WARNING: before you use the washer-dryer for the first time, run a wash cycle with detergent and no laundry, using the 90° cottons cycle without pre-wash. Press the indicator lights will illuminate for 1 second and the text AQUALTIS will appear on the display; the indicator light corresponding to the button will then remain lit in a constant manner and the START/PAUSE indicator light will flash. Turn the PROGRAMME KNOB left or right, until the required programme has been selected; the name of the programme will appear on the display. A temperature and spin speed is set for each programme; these may be adjusted the indicator light and a sound alert (3 beeps); the option will not be activated. If the selected option is not compatible with another option that has been selected previously, the indicator light corresponding to the first option selected will flash and only the second option will be activated; the indicator light corresponding to the button will remain lit in a constant manner. The options may affect the recommended load value and/or the duration of the cycle. The corresponding indicator light remains lit in a fixed manner and the porthole door locks (the DOOR LOCKED indicator light illuminates). The icons corresponding to the wash cycle phases will light up during the cycle to indicate which phase is currently in progress. To change a wash cycle once it has already started, pause the washer-dryer by pressing the START/PAUSE button; then select the desired cycle and press the START/PAUSE button again.

To open the door during a wash cycle, press the START/PAUSE button; if the DOOR LOCKED indicator light is switched off you may open the door. Press the START/PAUSE button again to restart the wash cycle from the point at which it was interrupted. This is indicated by the illuminated text END. The porthole door may be opened immediately. If the START/PAUSE indicator light is flashing, press the button to end the cycle. Open the door, unload the laundry and switch off the machine. If you wish to cancel a cycle which has already begun, pre, the machine spins at a reduced spin speed. If the load is excessively unbalanced, the washer-dryer performs the distribution process instead of spinning. Remove the plug from the electrical socket.

2.

hold the plug and pull. Never force the porthole door. If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself. Always keep children well away from the appliance while it is operating. If it must be moved, proceed with the help of two or three people and handle it with the utmost care.

Never try to do this alone, because the appliance is very heavy. Before loading laundry into the washer dryer, make sure the drum is empty. During the drying phase, the door tends to get quite hot. Do not use the appliance to dry clothes that have been washed with flammable solvents (e. Do not use the appliance to dry foam rubber or similar elastomers.

Make sure that the water tap is turned on during the drying cycles. 3. Remove the cover panel on the lower front part of the washer dryer (see overleaf).

4. Pull outwards using the tab as indicated in the figure, until the plastic tie-rod is freed from its stop position; pull downwards until you hear a click, which indicates that the door is now unlocked. 5. Open the door; if this is still not possible repeat the procedure. Disposal Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. The European Directive 2002/96/EC relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the cost of re-using and recycling the materials inside the machine, while preventing potential damage to the atmosphere and to public health.

The crossed-out dustbin is marked on all products to remind the owner of their obligations regarding separated waste collection. For more information relating to the correct disposal of household appliances, owners should contact their local authorities or appliance dealer. 6. Care and maintenance EN Cutting off the water and electricity supplies Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system in the machine and help to prevent leaks. Unplug the appliance when cleaning it and during all maintenance work. to access the pre-chamber: 1. Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures); 2. Position a container so that it will collect the water which flows out (approximately 1. Screw the lid back on; 6.

do not use solvents or abrasives. 2 Caring for your appliance drum Always leave the door ajar to prevent unpleasant odours from forming. Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately; during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Cleaning the pump The washer dryer is fitted with a self-cleaning pump which does not require any maintenance.



[You're reading an excerpt. Click here to read official HOTPOINT AQM9D 49 U user guide](http://yourpdfguides.com/dref/4484367)
<http://yourpdfguides.com/dref/4484367>

@@ □ Make sure the wash cycle has finished and unplug the appliance. @@@@ There is no power in the house. The door is not closed properly. The START/PAUSE button has not been pressed. The water tap has not been opened. a delayed start has been set. The water inlet hose is not connected to the tap. the hose is bent. The water tap has not been opened. There is no water supply in the house. The pressure is too low. The START/PAUSE button has not been pressed. The washer-dryer does not switch on. □ □ The wash cycle does not start. □ □ □ The washer-dryer does not fill □ □ with water.

□ □ □ The washer-dryer door remains locked. □ If you have selected the □Baby □ cycle or the □Easy iron □ option, when the wash cycle has finished the machine will slowly rotate the drum; to end the cycle press the START/PAUSE button or the □Easy iron □ button. If you have selected the □Silk □ wash cycle, the machine will end the cycle while the laundry is soaking; to drain the water so that the laundry may be removed, press the START/PAUSE button or the □Easy iron □ button. □ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see □Installation□). □ The free end of the hose is under water (see □Installation□). □ If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washer-dryer to fill with water and drain continuously. Special anti-draining valves are available in shops and help to prevent this inconvenience. □ The wall drainage system is not fitted with a breather pipe. □ The wash cycle does not include draining: Some wash cycles require the drain phase to be started manually (see □Wash cycles and options□). □ The □Easy iron□ option is enabled: to complete the wash cycle, press the START/PAUSE button (□Wash cycles and options□).

□ □ □ The The The The drum was not unlocked correctly during installation (see □Installation□). The machine continuously fills with water and drains. The washer-dryer does not drain or spin. The machine vibrates a lot during the spin cycle. the washer-dryer leaks. The icons corresponding to the □Phase in progress□ flash rapidly at the same time as the ON/OFF indicator light. There is too much foam. The water inlet hose is not screwed on properly (see □Installation□). □ The detergent dispenser is blocked (to clean it, see □Care and maintenance□). The drain hose is not fixed in place properly (see □Installation□).

□ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. □ The detergent is not suitable for machine washing (it should display the text □for washer-dryers□ or □hand and machine wash□, or the like). The washer-dryer does not dry. □ □ □ □ The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure.

The appliance door is not shut properly. 11 Assistance EN Before calling for Assistance: □ Check whether you can solve the problem by yourself (see □Trouble shooting□); □ Restart the wash cycle to check whether the problem has been solved; □ If it has not, contact the Authorised Technical Assistance Service. □ If the washer-dryer has been installed or used incorrectly, you will have to pay for the call-out service. □ Always request the assistance of authorised technicians.

Please have the following information to hand: □ the type of problem; □ the appliance model (Mod.); □ the serial number (S/N). The above information can be found on the data plate located on the appliance itself. □ Note: To exit □Demo mode□, press and hold the two □ON/OFF□ and □START/PAUSE□ buttons simultaneously for 3 seconds. .



[You're reading an excerpt. Click here to read official HOTPOINT AQM9D 49 U user guide](http://yourpdfguides.com/dref/4484367)
<http://yourpdfguides.com/dref/4484367>