



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT AQS73D 29 EU/B. You'll find the answers to all your questions on the HOTPOINT AQS73D 29 EU/B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT AQS73D 29 EU/B  
User guide HOTPOINT AQS73D 29 EU/B  
Operating instructions HOTPOINT AQS73D 29 EU/B  
Instructions for use HOTPOINT AQS73D 29 EU/B  
Instruction manual HOTPOINT AQS73D 29 EU/B

## Instructions for installation and use

WASHING MACHINE

<b>EN</b> English,1	<b>HU</b> Magyar,13	<b>RO</b> Română,25
<b>SK</b> Slovensky,37	<b>PL</b> Polski,49	<b>CZ</b> Česky,61

**AQUALTIS**  
**AQS73D 29**

### Contents

EN

#### Installation, 2-3

Unpacking and leveling  
Connecting the electricity and water supplies  
Technical data

#### Description of the machine, 4-5

Touch control panel

#### Running a wash cycle, 6

**Wash cycles and options, 7**  
Table of wash cycles  
Wash options

#### Detergents and laundry, 8

Detergent  
Preparing the laundry  
Washing recommendations  
Load balancing system

#### Precautions and advice, 9

General safety  
Disposal  
Opening the porthole door manually

#### Care and maintenance, 10

Cutting off the water and electricity supplies  
Cleaning the machine  
Cleaning the detergent dispenser drawer  
Caring for your appliance drum  
Cleaning the pump  
Checking the water inlet hose

#### Trouble shooting, 11

**Assistance, 12**



[You're reading an excerpt. Click here to read official HOTPOINT AQS73D 29 EU/B user guide](http://yourpdfguides.com/dref/4643206)  
<http://yourpdfguides.com/dref/4643206>

**Manual abstract:**

*! If the appliance is levelled correctly, it will be more stable and much less likely to cause vibrations and noise while it is operating, particularly during the spin cycle. ! If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the washing machine.*

*Connecting the electricity and water supplies Connecting the water inlet hose ! @@ 1. @@ unpacking and levelling Unpacking 1. @@@@ 2. Remove the 4 protective screws (used during transportation) and the corresponding spacer, located on the rear part of the appliance (see figure). 2. Connect the inlet hose by screwing it to a cold water tap using a 3/4 gas threaded connection (see figure). 3. Close off the holes using the plastic plugs supplied in the pack.*

*4. Keep all the parts in a safe place; they will be needed again if the washing machine is moved to another location, to prevent the inside of the appliance being damaged. ! Packaging materials should not be used as toys for children. 3. Make sure that the hose is not folded over or bent.*

*! The water pressure at the tap must fall within the values indicated in the Technical data table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. ! Never use second-hand or old inlet hoses; use the products supplied with the machine. levelling 1. Place the washing machine on a flat sturdy floor, without resting it up against walls or cabinets.*

*2. If the floor is uneven, the front feet of the machine may be adjusted until it reaches a horizontal position (the angle of inclination must not exceed 2 degrees). 2 Connecting the drain hose Connect the drain hose to drain duct piping or a wall drain located between 65 and 100 cm above the floor, making sure it is not bent at all. The cable should not be bent or compressed. ! The power supply cable and plug must only be replaced by authorised technicians.*

*warning! The company shall not be held responsible in the event that these regulations are not respected. EN 65 - 100 cm Alternatively, rest the drain hose on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. technical data Model AQS73D 29 width 59.*

*5 cm height 85 cm depth 44,5 cm from 1 to 7 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 48 litres up to 1200 rotations per minute Electrical connections Before plugging the appliance into the electricity socket, make sure that: •the socket is earthed and complies with all applicable laws; •the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); •the power supply voltage falls within the values indicated in the Technical data table (see opposite); •the socket is compatible with the plug of the appliance. If this is not the case, have the socket or the plug replaced. ! The machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! The mains socket must remain within easy reach after the washing machine has been installed. Dimensions Capacity Electrical connections Water connections Spin speed Test wash cycles in accordance with directives 1061/2010 and 1015/2010 programme programme ; temperature 60°C; ; temperature 40°C; This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2002/96/EC 3 Description of the machine EN PORTHOLE DOOR PORTHOLE DOOR HANDLE CONTROL PANEL KICK STRIP PORTHOLE DOOR Always use the handle to open the porthole door (see figure). The use of extra compartment 3 excludes the prewash function. washing additives compartment: for fabric softener or liquid additives.*

*We recommend that the maximum level indicated by the grille is not exceeded, and that concentrated fabric softeners are diluted. TOUCH CONTROL PANEL To adjust the settings, gently press the icon inside the sensitive (touch control) area as illustrated in the figure. DETERGENT DISPENSER DRAWER The detergent dispenser drawer is located inside the machine and can be accessed by opening the door. For more information on detergent measures, please refer to the chapter entitled "Detergents and laundry". Before pouring in the detergent, make sure that extra compartment 3 has been removed.*

*Standby mode This washing machine, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected. Press the ON-OFF button briefly and wait for the machine to start up again. consumption in off-mode: 1 W Consumption in Left-on: 1 W 2. Main wash compartment: If liquid detergent is used, it is recommended that the removable plastic partition A (supplied) be used for proper dosage. If powder detergent is used, place the partition into slot B.*

*4 Touch control panel WASH CYCLE SELECTOR knob M2 M1 START/PAUSE button SPIN button with indicator light TEMPERATURE ECO indicator light WASH CYCLE PHASE icons EN button DISPLAY Button with ON/OFF indicator light M3 OPTION buttons CONTROL PANEL LOCK DELAYED START button button with indicator light LOCK indicator light Button with ON/OFF indicator light: press this briefly to switch the machine on or off. The green indicator light indicates that the machine is switched on. To switch off the washing machine during the wash cycle, press and hold the button for approximately 3 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled. WASH CYCLE SELECTOR knob: may be turned in either direction. To select the most suitable wash cycle, please refer to the "Table of wash cycles". The knob will not move during the wash cycle. M1-M2-M3 buttons: press and hold one of the buttons to store a cycle with your own set preferences in the memory of the machine. to recall a previously-stored cycle , press the corresponding button. TEMPERATURE button: press to modify or exclude the temperature setting; the value selected will appear on the display above (see "Running a wash cycle").*

*SPIN CYCLE button: press to modify or exclude the spin cycle; the value selected will appear on the display above (see "Running a wash cycle"). DELAYED START button: press to set a delayed start for the selected wash cycle; the set delay time will appear on the display above (see "Running a wash cycle"). oPTION buttons: press to select the available options.*



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/4643206)

[AQS73D 29 EU/B user guide](http://yourpdfguides.com/dref/4643206)

<http://yourpdfguides.com/dref/4643206>



*Cleaning the detergent dispenser drawer 1 1 2 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure).*

*@@Screw the lid back on; 6. @@@@If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Cleaning the pump The washing machine is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the protective pre-chamber at the base of the pump. ! Make sure the wash cycle has finished and unplug the appliance.*

*10 Trouble shooting Your washing machine could occasionally fail to work. @@ eN Problem: The washing machine does not switch on. The wash cycle does not start. @@ There is no power in the house. ••••The door is not closed properly.*

*The START/PAUSE button has not been pressed. The water tap has not been opened. a delayed start has been set. The water inlet hose is not connected to the tap. the hose is bent. The water tap has not been opened. There is no water supply in the house. The pressure is too low. The START/PAUSE button has not been pressed. The washing machine does not fill ••with water.*

*@@The machine continuously fills with water and drains. @@ There is no drain hose is not fitted at a height between 65 and 100 cm from the floor (see "Installation"). There is no free end of the hose is under water (see "Installation"). If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously. Special anti-draining valves are available in shops and help to prevent this inconvenience. There is no wall drainage system is not fitted with a breather pipe. The wash cycle does not include draining: Some wash cycles require the drain phase to be started manually (see "Wash cycles and options"). The "Easy iron" option is enabled: to complete the wash cycle, press the START/PAUSE button ("Wash cycles and options"). The drum was not unlocked correctly during installation (see "Installation"). The machine is not level (see "Installation").*

*The machine is trapped between cabinets and walls (see "Installation"). the load is unbalanced (see "Detergents and laundry"). The washing machine does not drain or spin. The machine vibrates a lot during ••the spin cycle. The detergent dispenser is blocked (to clean it, see "Care and maintenance"). •The drain hose is not fixed in place properly (see "Installation"). Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. The detergent is not suitable for machine washing (it should display the text "for washing machines" or "hand and machine wash", or the like). The icons corresponding to the "Phase in progress" flash rapidly at the same time as the ON/OFF indicator light.*

*There is too much foam. Note: to exit "Demo mode", switch machine off, press and hold the two "START/PAUSE" simultaneously for 3 seconds. And "ON/OFF" buttons 11 Assistance EN Before calling for Assistance: • Check whether you can solve the problem by yourself (see "Trouble shooting"); • Restart the wash cycle to check whether the problem has been solved; • If it has not, contact the Authorised Technical Assistance Service. ! If the washing machine has been installed or used incorrectly, you will have to pay for the call-out service. ! Always request the assistance of authorised technicians. Please have the following information to hand: • the type of problem; • the appliance model (Mod. ); • the serial number (S/N). The above information can be found on the data plate located on the appliance itself. În cazul în care mașina este instalată pe mochetă sau covor, reglați piciorușele la o înălțime care să asigure mașinii de spălat un spațiu suficient pentru ventilare. Aparatul nu trebuie utilizat de către persoane (inclusiv copii) cu capacități fizice, senzoriale sau mentale reduse și cu experiență sau cunoștințe insuficiente, exceptând cazul în care această utilizare are loc sub supravegherea sau instrucțiunile unei persoane responsabile cu securitatea lor.*



[You're reading an excerpt. Click here to read official HOTPOINT AQS73D 29 EU/B user guide](http://yourpdfguides.com/dref/4643206)  
<http://yourpdfguides.com/dref/4643206>