



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT AQS83D 29 EU/B. You'll find the answers to all your questions on the HOTPOINT AQS83D 29 EU/B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT AQS83D 29 EU/B
User guide HOTPOINT AQS83D 29 EU/B
Operating instructions HOTPOINT AQS83D 29 EU/B
Instructions for use HOTPOINT AQS83D 29 EU/B
Instruction manual HOTPOINT AQS83D 29 EU/B

Instructions for installation and use

WASHING MACHINE

EN
English,1

PL
Polski,13

UA
Українська,25

CZ
Česky,37

SK
Slovensky,49

AQUALTIS
AQS83D 29

Contents

EN

Installation, 2-3

Unpacking and leveling
Connecting the electricity, and water supplies
Technical data

Care and maintenance, 4

Cutting off the water and electricity supplies
Cleaning the machine
Cleaning the detergent dispenser drawer
Caring for your appliance drum
Cleaning the pump
Checking the water inlet hose

Precautions and tips, 5

General safety
Load balancing system
Disposal
Opening the porthole door manually

Description of the machine, 6-7

Touch control panel

Running a wash cycle, 8

Wash cycles and options, 9

Table of wash cycles
Wash options

Detergents and laundry, 10

Detergent
Preparing the laundry
Washing recommendations

Trouble shooting, 11

Assistance, 12



[You're reading an excerpt. Click here to read official HOTPOINT AQS83D 29 EU/B user guide](http://yourpdfguides.com/dref/5580847)
<http://yourpdfguides.com/dref/5580847>

Manual abstract:

! If the appliance is levelled correctly, it will be more stable and much less likely to cause vibrations and noise while it is operating, particularly during the spin cycle. ! If it is placed on carpet or a rug, adjust the feet in such a way as to allow a sufficient ventilation space underneath the washing machine.

Connecting the electricity and water supplies Connecting the water inlet hose ! @@ 1. @@ 2. @@@@ unpacking and levelling Unpacking 1. Once you have removed all the packaging from the washing machine, make sure it has not been damaged during transportation. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 2. Remove the 4 protective screws (used during transportation) and the corresponding spacer, located on the rear part of the appliance (see figure). 3.

Close off the holes using the plastic plugs supplied in the pack. 4. Keep all the parts in a safe place; they will be needed again if the washing machine is moved to another location, to prevent the inside of the appliance being damaged. ! Packaging materials should not be used as toys for children. levelling 1. Place the washing machine on a flat sturdy floor, without resting it up against walls or cabinets. 2. If the floor is uneven, the front feet of the machine may be adjusted until it reaches a horizontal position (the angle of inclination must not exceed 2 degrees). a 3. Make sure that the hose is not folded over or bent. ! The water pressure at the tap must fall within the values indicated in the Technical data table (see next page). ! If the inlet hose is not long enough, contact a specialised shop or an authorised technician. ! Never use second-hand or old inlet hoses; use the products supplied with the machine. 2 Connecting the drain hose Connect the drain hose to drain duct piping or a wall drain located between 65 and 100 cm above the floor, making sure it is not bent at all. The cable should not be bent or compressed. ! The power supply cable and plug must only be replaced by authorised technicians. warning! The company shall not be held responsible in the event that these regulations are not respected. EN 65 - 100 cm Alternatively, rest the drain hose on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length.

Electrical connections Before plugging the appliance into the electricity socket, make sure that: • the socket is earthed and complies with all applicable laws; • the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); • the power supply voltage falls within the values indicated in the Technical data table (see opposite); • the socket is compatible with the plug of the appliance. If this is not the case, have the socket or the plug replaced. ! The machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! The mains socket must remain within easy reach after the washing machine has been installed. technical data Model Dimensions Capacity AQS83D 29 width 59. 5 cm height 85 cm depth 48,6 cm from 1 to 8 kg please refer to the technical Electrical connections data plate fixed to the machine maximum pressure 1 MPa (10 bar) Water conminimum pressure 0. 05 MPa nections (0. 5 bar) drum capacity 54 litres Spin speed up to 1200 rotations per minute Test wash cycles in accordanprogramme ; ce with Cotton standard 60 °C; directives programme ; 1061/2010 Cotton standard 40 °C. And 1015/2010 This appliance conforms to the following EC Directives: - 2004/108/EC (Electromagnetic Compatibility) - 2006/95/EC (Low Voltage) - 2012/19/EU 3 Care and maintenance EN Cutting off the water and electricity supplies • Turn off the water tap after every wash cycle.

This will limit wear on the hydraulic system in the machine and help to prevent leaks. □ Unplug the appliance when cleaning it and during all maintenance work. to access the pre-chamber: 1 2 1. Take off the cover panel on the front of the machine by first pressing it in the centre and then pushing downwards on both sides until you can remove it (see figures); 2. Position a container so that it will collect the water which flows out (approximately 1.

Screw the lid back on; 6. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Cleaning the machine The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. do not use solvents or abrasives.

Cleaning the detergent dispenser drawer 1 1 2 2 To remove the drawer, press lever (1) and pull the drawer outwards (2) (see figure).

Wash it under running water; this procedure should be repeated frequently. Caring for your appliance drum • Always leave the door ajar to prevent unpleasant odours from forming. Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. Cleaning the pump The washing machine is fitted with a selfcleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the protective pre-chamber at the base of the pump. ! Make sure the wash cycle has finished and unplug the appliance. 4 Precautions and tips ! The machine was designed and constructed in accordance with international safety regulations. The following information is provided for safety reasons and must therefore be read carefully. Inside the machine, while preventing potential damage to the atmosphere and to public health.

The crossed-out dustbin is marked on all products to remind the owner of their obligations regarding separated waste collection. For more information relating to the correct disposal of household appliances, owners should contact their local authorities or appliance dealer. EN General safety • This appliance was designed for domestic use only. □ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. @@ Remove the plug from the electrical socket. 2. @@ 3. @@ 4.

@@@@ hold the plug and pull. @@ • Never force the porthole door. @@@@ Never try to do this alone, because the appliance is very heavy. □ Before loading laundry into the washing machine, make sure the drum is empty.



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[AQS83D 29 EU/B user guide](#)

<http://yourpdfguides.com/dref/5580847>

Load balancing system Before every spin cycle, to avoid excessive vibrations before every spin and to distribute the load in a uniform manner, the drum rotates continuously at a speed which is slightly greater than the washing rotation speed.

If, after several attempts, the load is not balanced correctly, the machine spins at a reduced spin speed. If the load is excessively unbalanced, the washing machine performs the distribution process instead of spinning. To encourage improved load distribution and balance, we recommend small and large garments are mixed in the load. 5. Open the door; if this is still not possible repeat the procedure.

Disposal • Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. □ The European Directive 2012/19/EU relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the cost of re-using and recycling the materials 6. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. 5 Description of the machine EN PORTHOLE DOOR PORTHOLE DOOR HANDLE CONTROL PANEL KICK STRIP PORTHOLE DOOR Always use the handle to open the porthole door (see figure). The use of extra compartment 3 excludes the prewash function. washing additives compartment: for fabric softener or liquid additives. We recommend that the maximum level indicated by the grille is not exceeded, and that concentrated fabric softeners are diluted. TOUCH CONTROL PANEL To adjust the settings, gently press the icon inside the sensitive (touch control) area as illustrated in the figure. DETERGENT DISPENSER DRAWER The detergent dispenser drawer is located inside the machine and can be accessed by opening the door.

For more information on detergent measures, please refer to the chapter entitled “Detergents and laundry”. Before pouring in the detergent, make sure that extra compartment 3 has been removed. Standby mode This washing machine, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected. Press the ON-OFF button briefly and wait for the machine to start up again.

2. Main wash compartment: If liquid detergent is used, it is recommended that the removable plastic partition A (supplied) be used for proper dosage. If powder detergent is used, place the partition into slot B. 6 Touch control panel WASH CYCLE SELECTOR knob M2 M1 START/PAUSE hold the temperature +spin +delayed start buttons simultaneously for 5”. A short sound alert will be emitted and the set language will flash on the display. Press the buttons next to the “ and “V” symbols to change the language.

@@@ switch on the machine. @@@@The cycle duration will also appear on the display. @@@@If these buttons are pressed again, the maximum values are restored. ! @@ setting a delayed start. @@@@ modify the cycle settings.

@@@ ! @@ ! @@ ! @@To change a wash cycle once it has already started, pause the washing machine by pressing the START/ PAUSE button; then select the desired cycle and press the START/PAUSE button again. Residual detergent removal is guaranteed. It is particularly useful for skin which is sensitive to detergents. @@ ! It cannot be used in conjunction with , , , . @@@@ ! It cannot be used in conjunction with , , , . @@@: put the detergent in the relevant compartment.

! It cannot be used in conjunction with , , , , , , , , (60°) , , . @@), as well as its colour, the washing temperature, the level of soiling and the hardness of the water in the area. Measuring out the detergent carefully will avoid wastage and help to protect the environment: although they are biodegradable, detergents still contain ingredients which alter the balance of nature. We recommend the following: • use powder detergents for white cotton garments and pre-washing. □ use liquid detergents for delicate cotton garments and for all low-temperature wash cycles. □ use gentle liquid detergents for wool and silk garments. The detergent should be poured into the relevant compartment - or the dispenser placed directly inside the drum - before the wash cycle begins. In the latter case, it will not be possible to select the Cottons with pre-wash cycle. ! Use powder detergent for white cotton garments, for pre-washing, and for washing at temperatures over 60°C ! Follow the instructions given on the detergent packaging.

! Do not use hand washing detergents because these create too much foam. Duvets: to wash single duvet (the weight of which should not exceed 2 kg), cushions or clothes padded with goose down such as puffer jackets, use the special wash cycle. We recommend that duvets are placed in the drum with their edges folded inwards (see figure) and that no more than ¾ of the total volume of the drum is used. To achieve the best results, we recommend that a liquid detergent is used and placed inside the detergent dispenser drawer. Preparing the laundry • Shake out the garments before loading them into the machine. □ Divide the laundry according fabric type (symbol on the washing instruction label) and colour, making sure you separate the coloured garments from the white ones; • Empty all pockets and check the buttons; • Do not exceed the values listed in the “Table of wash cycles”, which refer to the weight of the laundry when dry. How much does 1 sheet 1 pillowcase 1 tablecloth 1 bathrobe 1 towel 1 pair of jeans 1 shirt your laundry weigh? 400-500 g 150-200 g 400-500 g 900-1200 g 150-250 g 400-500 g 150-200 g Washing recommendations Whites: use this cycle to wash white clothes. The programme is designed to maintain the brightness of white clothes over time. Coloureds: use this cycle to wash bright coloured clothes. The programme is designed to maintain bright colours over time.

darks: Use cycle to wash dark-coloured garments. This programme is designed to maintain dark colours over time. We recommend using a liquid detergent for the best results when washing dark-coloured garments. Shirts: use the special wash cycle to wash shirts in different fabrics and colours to guarantee they receive the best possible care. Quilts: to wash quilts with a synthetic outer layer, use the bag provided and set the wash cycle to .

@@@@@@Use liquid detergent on delicate garments for best results. To wash Silk garments and Curtains (these should be folded and placed inside the bag provided), select cycle and then option (in this case it will also be possible to enable the “Extra Rinse” option); the machine will end the cycle while the laundry is soaking and the indicator light will flash. To drain the water so that the laundry may be removed, press the START/PAUSE button or the button.



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[AQS83D 29 EU/B user guide](#)

<http://yourpdfguides.com/dref/5580847>

Wool: the wool wash cycle on this Hotpoint-Ariston machine has been tested and approved by The Woolmark Company for washing wool garments labelled as hand washable provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. Hotpoint-Ariston is the first washing machine brand to be approved by The Woolmark Company for Apparel Care- Platinum for its washing performance and consumption of energy and water.

cotton Standard 20°C: ideal for lightly soiled cotton loads. @@@@ eN Problem: The washing machine does not switch on. The wash cycle does not start. @@ □ There is no power in the house. ••••The door is not closed properly. The START/PAUSE button has not been pressed. The water tap has not been opened. a delayed start has been set. The water inlet hose is not connected to the tap. the hose is bent.

The water tap has not been opened. There is no water supply in the house. The pressure is too low. The START/PAUSE button has not been pressed. The washing machine does not fill ••with water. ••••The washing machine door remains locked. The machine continuously fills with water and drains. □ If you have selected the function, at the end of the cycle the washing machine drum will rotate slowly; to end the cycle press the START/PAUSE button or the button.

□ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see "Installation"). □ The free end of the hose is under water (see "Installation").

□ If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously. Special anti-draining valves are available in shops and help to prevent this inconvenience. □ The wall drainage system is not fitted with a breather pipe. □ The wash cycle does not include draining: Some wash cycles require the drain phase to be started manually (see "Wash cycles and options"). □ The "Easy iron" option is enabled: to complete the wash cycle, press the START/PAUSE button ("Wash cycles and options").

The drum was not unlocked correctly during installation (see "Installation"). The machine is not level (see "Installation"). The machine is trapped between cabinets and walls (see "Installation"). the load is unbalanced (see "Detergents and laundry"). The washing machine does not drain or spin.

The machine vibrates a lot during ••the spin cycle. □ The detergent dispenser is blocked (to clean it, see "Care and maintenance"). • The drain hose is not fixed in place properly (see "Installation"). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. □ The detergent is not suitable for machine washing (it should display the text "for washing machines" or "hand and machine wash", or the like). The icons corresponding to the "Phase in progress" flash rapidly at the same time as the ON/OFF indicator light. There is too much foam. Note: to exit "Demo mode", switch machine off, press and hold the two "START/PAUSE" simultaneously for 3 seconds. And "ON/OFF" buttons 11 Assistance EN Before calling for Assistance: • Check whether you can solve the problem by yourself (see "Trouble shooting"); • Restart the wash cycle to check whether the problem has been solved; • If it has not, contact the Authorised Technical Assistance Service.

! If the washing machine has been installed or used incorrectly, you will have to pay for the call-out service. ! Always request the assistance of authorised technicians. Please have the following information to hand: • the type of problem; • the appliance model (Mod.); • the serial number (S/N). The above information can be found on the data plate located on the appliance itself. .



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/5580847)

[AQS83D 29 EU/B user guide](http://yourpdfguides.com/dref/5580847)

<http://yourpdfguides.com/dref/5580847>