



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT AR6L 105. You'll find the answers to all your questions on the HOTPOINT AR6L 105 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT AR6L 105
User guide HOTPOINT AR6L 105
Operating instructions HOTPOINT AR6L 105
Instructions for use HOTPOINT AR6L 105
Instruction manual HOTPOINT AR6L 105

Instructions for use

WASHING MACHINE

GB
English, 1

F
Français, 13

AR
العربية, 25

AR6L 105

Contents

Installation, 2-3

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Description of the washing machine and starting a wash cycle, 4-5

Control panel
Indicator lights
Starting a wash cycle

Wash cycles, 6

Table of wash cycles

Personalisation, 7

Setting the temperature
Setting the spin speed
Functions

Detergents and laundry, 8

Detergent dispenser drawer
Bleach cycle
Preparing the laundry
Garments requiring special care
Load balancing system

Precautions and tips, 9

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 10

Cutting off the water or electricity supply
Cleaning the washing machine
Cleaning the detergent dispenser drawer
Caring for the door and drum of your appliance
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 11

Service, 12



[You're reading an excerpt. Click here to read official HOTPOINT AR6L 105 user guide](http://yourpdfguides.com/dref/4686065)
<http://yourpdfguides.com/dref/4686065>

Manual abstract:

Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 3 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). a 1. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded opening (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear.

2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure). 4. Close off the holes using the plastic plugs provided. 5.

Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. 3. Make sure that the hose is not folded over or bent. □ Packaging materials should not be used as toys for children. Levelling □ The water pressure at the tap must fall within the values indicated in the Technical details table (see next page).

□ If the inlet hose is not long enough, contact a specialised shop or an authorised technician. □ Never use second-hand hoses. □ Use the ones supplied with the machine. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. @@@@ warning! The company shall not be held responsible in the event that these regulations are not respected. 65 - 100 cm The first wash cycle alternatively, rest it on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater.

Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle 1. □ We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. electrical connections Technical data Model AR6L 105 width 59. 5 cm height 85 cm depth 52,5 cm from 1 to 6 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 46 litres up to 1000 rotations per minute Before plugging the appliance into the electricity socket, make sure that: □ the socket is earthed and complies with all applicable laws; □ the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); □ the power supply voltage falls within the values indicated in the Technical data table (see opposite); □ the socket is compatible with the plug of the washing machine. If this is not the case, replace the socket or the plug. Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 60456 programme 6; temperature 60°C; using a load of 6 kg. □ The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions.

□ When the washing machine has been installed, the electricity socket must be within easy reach. This appliance conforms to the following EC Directives: - 72/23/EEC dated 19/02/73 (Low Voltage) and subsequent modifications - 89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications - 2002/96/EC 3 Description of the washing machine and starting a wash cycle GB Control panel WASH CYCLE PROGRESS/ DELAY TIMER indicator lights SPIN SPEED ON/OFF button knob TEMPERATURE knob DOOR LOCKED indicator light Detergent dispenser drawer FUNCTION WASH CYCLE knob buttons with indicator lights START/PAUSE button with indicator light Detergent dispenser drawer: used to dispense detergents and washing additives (see □Detergents and laundry□). There is a key which provides a summary of the available wash cycles inside the detergent dispenser drawer; this may be consulted at any time. During the wash cycle, the knob does not move. FUNCTION buttons with indicator light: used to select the available functions. @@@@The illuminated indicator light shows which phase is in progress. @@@@To start the wash cycle from the point at which it was interrupted, press this button again. 4 Indicator lights The indicator lights provide important information. This is what they can tell you: Delayed start If the DELAY TIMER function has been activated (see □Personalisation□), after the wash cycle has been started the indicator light corresponding to the selected delay period will begin to flash: Wash cycle phase indicator lights Once the desired wash cycle has been selected and has begun, the indicator lights switch on one by one to indicate which phase of the cycle is currently in progress. Wash Rinse Spin Drain no spin End of wash cycle Function buttons and corresponding indicator lights When a function is selected, the corresponding indicator light will illuminate.

If the selected function is not compatible with the programmed wash cycle, the corresponding indicator light will flash and the function will not be activated. If a function which is incompatible with another function selected previously, only the most recent selection will remain active. Door locked indicator light If this indicator light is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damage, wait for the indicator light to switch off before you open the appliance door. If the DELAY TIMER function is activated, the door cannot be opened; pause the machine by pressing the START/PAUSE button if you wish to open it. GB As time passes, the remaining delay will be displayed and the corresponding indicator light will flash: Once the set delay has elapsed, the flashing indicator light will switch off and the selected wash cycle will begin. □ If the START/PAUSE indicator light (orange) flashes rapidly at the same time as the function indicator light, this indicates a problem has occurred (see □Troubleshooting□). Starting a wash cycle 1.

Switch the washing machine on by pressing the ON/OFF button. All indicator lights will switch on for a few seconds, then they will switch off and the START/PAUSE indicator light will pulse. 2.

Load the laundry and close the door. 3. Set the WASH CYCLE knob to the desired programme. Set the spin speed (see □Personalisation□).



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/4686065)

[AR6L 105 user guide](http://yourpdfguides.com/dref/4686065)

<http://yourpdfguides.com/dref/4686065>

Start the wash cycle by pressing the START/PAUSE button and the corresponding indicator light will remain lit in a fixed manner, in green. To cancel the set wash cycle, pause the machine by pressing the START/PAUSE button and select a new cycle. indicator light will switch on. The DOOR LOCKED indicator light will switch off. At the end of the wash cycle the off, indicating that the door may be opened. Take out your laundry and leave the appliance door ajar to make sure the drum dries completely.

Switch the washing machine off by pressing the ON/OFF button. 5 Wash cycles GB Table of wash cycles Wash cycles Description of the wash cycle Max temp. @@@@The information contained in the table is intended as a guide only. specials wash cycles Sanitizing cycle (wash cycle 6). @@@@ goodnigt cycle (wash cycle 7).

@@The wash cycle is designed for cottons and synthetics. @@ baby cycle (wash cycle 8). @@@@Silk: use special wash cycle 10 to wash all silk garments. @@@@ compartment 3: Additives (fabric softeners , etc.) The fabric softener should not overflow the grid.

@@@This option is recommended only for very soiled cotton garments. @@@@ Empty all garment pockets and check the buttons. @@@The following information is provided for safety reasons and must therefore be read carefully. Opening the porthole door manually In the event that it is not possible to open the porthole door due to a powercut, and if you wish to remove the laundry, proceed as follows: 1. Remove the plug from the electrical socket. 2. Make sure the water level inside the machine is lower than the door opening; if it is not, remove excess water using the drain hose, collecting it in a bucket as indicated in the figure. 3. Using a screwdriver, remove the cover panel on the lower front part of the washing machine (see figure).

GB General safety □ This appliance was designed for domestic use only.

□ The washing machine must only be used by adults, in accordance with the instructions provided in this manual. □ Do not touch the machine when barefoot or with wet or damp hands or feet. □ Do not pull on the power supply cable when unplugging the appliance from the electricity socket. hold the plug and pull.

□ Do not open the detergent dispenser drawer while the machine is in operation. □ Do not touch the drained water as it may reach extremely high temperatures. Never force the porthole door. This could damage the safety lock mechanism designed to prevent accidental opening. @@@□ The door can become quite hot during the wash cycle. @@Never try to do this alone, because the appliance is very heavy.

□ Before loading laundry into the washing machine, make sure the drum is empty. 20 Disposal □ Disposing of the packaging materials: observe local regulations so that the packaging may be re-used. □ The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorte off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. □ The detergent is not suitable for machine washing (it should display the text □for washing machines□ or □hand and machine wash□, or the like).

Too much detergent was used. The washing machine does not drain or spin. The washing machine vibrates a lot during the spin cycle. the washing machine leaks. The START/PAUSE indicator light (orange) and the function indicator lights flash rapidly.

There is too much foam. 11 Service GB Before calling for Assistance: □ Check whether you can solve the problem alone (see □Troubleshooting□); □ Restart the programme to check whether the problem has been solved; □ If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. □ Always request the assistance of authorised technicians. Have the following information to hand: □ the type of problem; □ the appliance model (Mod.); □ the serial number (S/N). This information can be found on the data plate applied to the rear of the washing machine, and can also be found on the front of the appliance by opening the door. FR 65 - 100 cm Raccorder le tuyau d'évacuation, sans le plier, à un conduit d'évacuation ou à une évacuation murale placés à une distance du sol comprise entre 65 et 100 cm; Premier cycle de lavage ou bien l'accrocher à un évier ou à une baignoire, dans ce cas, fixer le support en plastique fourni avec l'appareil au robinet (voir figure). .



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[AR6L 105 user guide](#)

<http://yourpdfguides.com/dref/4686065>