



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT ARGD 169. You'll find the answers to all your questions on the HOTPOINT ARGD 169 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT ARGD 169  
User guide HOTPOINT ARGD 169  
Operating instructions HOTPOINT ARGD 169  
Instructions for use HOTPOINT ARGD 169  
Instruction manual HOTPOINT ARGD 169

## Instructions for use

### WASHING MACHINE

**GB**

English, 1

**SE**

Svenska, 13

**FI**

Suomi, 25

**DK**

Dansk, 37

**NO**

Norsk, 49

**ARGD 169**

#### Contents

##### Installation, 2-3

Unpacking and levelling  
Connecting the electricity and water supplies  
The first wash cycle  
Technical data

##### Description of the washing machine, 4-5

Control panel  
Display

##### Running a wash cycle, 6

##### Wash cycles and functions, 7

Table of wash cycles  
Wash functions

##### Detergents and laundry, 8

Detergent dispenser drawer  
Preparing the laundry  
Special wash cycles  
Load balancing system

##### Precautions and tips, 9

General safety  
Disposal  
Opening the porthole door manually

##### Care and maintenance, 10

Cutting off the water or electricity supply  
Cleaning the washing machine  
Cleaning the detergent dispenser drawer  
Caring for the door and drum of your appliance  
Cleaning the pump  
Checking the water inlet hose

##### Troubleshooting, 11

##### Service, 12



1



[You're reading an excerpt. Click here to read official HOTPOINT ARGD 169 user guide](http://yourpdfguides.com/dref/4484033)  
<http://yourpdfguides.com/dref/4484033>

### Manual abstract:

Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). a 1. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded opening (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear.

2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure). 4. Close off the holes using the plastic plugs provided. 5.

Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. 3. Make sure that the hose is not folded over or bent. □ Packaging materials should not be used as toys for children. Levelling □ The water pressure at the tap must fall within the values indicated in the Technical details table (see next page).

□ If the inlet hose is not long enough, contact a specialised shop or an authorised technician. □ Never use second-hand hoses. □ Use the ones supplied with the machine. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. 2 Connecting the drain hose □ Do not use extension cords or multiple sockets. @@@@ warning! @@@@The free end of the hose should not be underwater. Once the appliance has been installed, and before you use it for the first time, run a wash cycle with .

Detergent and no laundry, using the wash cycle □ We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. electrical connections Technical data Model ARGD 169 width 59. 5 cm height 85 cm depth 60 cm from 1 to 8 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 62 litres up to 1600 rotations per minute Before plugging the appliance into the electricity socket, make sure that: □ the socket is earthed and complies with all applicable laws; □ the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); □ the power supply voltage falls within the values indicated in the Technical data table (see opposite); □ the socket is compatible with the plug of the washing machine. If this is not the case, replace the socket or the plug. Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 60456 programme (1st press of the button); temperature 60°C; using a load of 8 kg. This appliance conforms to the following EC Directives: - 89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications - 2002/96/EC - 2006/95/EC (Low Voltage) □ The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. □ When the washing machine has been installed, the electricity socket must be within easy reach.

3 Description of the washing machine GB Control panel ON/OFF button CONTROL PANEL LOCK Button SPIN SPEED Button DISPLAY Detergent dispenser drawer MEMORY Button WASH CYCLE SELECTOR Buttons FUNCTION buttons START/ PAUSE button with indicator light DELAYED START Button TEMPERATURE Button Detergent dispenser drawer: used to dispense detergents and washing additives (see □Detergents and laundry□). ON/OFF button : press this briefly to switch the machine on or off. The START/PAUSE indicator light, which flashes slowly in a green colour shows that the machine is switched on. To switch off the washing machine during the wash cycle, press and hold the button for approximately 2 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled.

WASH CYCLE SELECTOR buttons: used to set the desired wash cycle (see "Table of wash cycles"). MEMORY button: press and hold the button to store a cycle with your own set of preferences in the memory of the machine. To recall a previously stored cycle , press the MEMO button. FUNCTION buttons: press the button to select the desired function. The corresponding indicator light on the display will switch on.

SPIN button : press to reduce or completely exclude the spin cycle - the value is indicated on the display. : press to decrease the TEMPERATURE button temperature: the value will be shown on the display. : to activate the CONTROL PANEL LOCK button control panel lock, press and hold the button for is approximately 2 seconds. When the symbol illuminated, the control panel is locked. This means it is possible to prevent wash cycles from being modified accidentally, especially where there are children in the home. To deactivate the control panel lock, press and hold the button for approximately 2 seconds. : press to set a delayed DELAYED START button start time for the selected wash cycle. The delay time will be shown on the display. @@@@If the is not illuminated, the door may be symbol opened. @@@@To prevent any damage from occurring, wait for the symbol to switch itself off before opening the appliance door.

: if the DELAYED START function has been activated, the door cannot be opened; pauses the machine by pressing the START/PAUSE button if you wish to open it. □ The first time the machine is switched on, you will be asked to select the language and the display will automatically show the language selection menu. To select the desired language press the TEMPERATURE and SPIN buttons; to confirm the selection press the CONTROL PANEL LOCK button. If you wish to select another language, press and hold the CONTROL PANEL LOCK + TEMPERATURE + SPIN buttons simultaneously for 5 seconds, then repeat the steps listed above. □ Press the button; the text WELCOME will appear on the display and the START/PAUSE indicator light will flash slowly in a green colour. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of programmes on the following page. Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments as described in "Detergents and laundry".



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[ARGD 169 user guide](#)

<http://yourpdfguides.com/dref/4484033>



På slutten av en vaskesyklus vil maskinen sakte rotere trommelen for å forhindre at klærne krølles, for å avslutte syklusen trykkes START/PAUSE-knappen. □  
Ikke bruk vaskemidler for håndvask, siden disse skaper for mye skum. Laste balansesystem Før hver sentrifugering roterer trommelen kontinuerlig ved en hastighet som er litt høyere enn vaskeroteringshastigheten for å unngå for mye vibrasjon før hver sentrifugering og fordele lasten jevnt. 00 04/2008 - Xerox Business Services Før du ringer for hjelp: □ Kontroller om du kan løse problemet selv (se □Feilsøking□); □ Start programmet på nytt for å kontrollere om problemet er løst; □ Hvis dette ikke er tilfelle, ta kontakt med et autorisert hjelpesenter ved bruk av telefonnumrene som finnes på garantibeviset.



[You're reading an excerpt. Click here to read official HOTPOINT ARGD 169 user guide](http://yourpdfguides.com/dref/4484033)  
<http://yourpdfguides.com/dref/4484033>