




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT ARMXXD 129. You'll find the answers to all your questions on the HOTPOINT ARMXXD 129 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT ARMXXD 129
User guide HOTPOINT ARMXXD 129
Operating instructions HOTPOINT ARMXXD 129
Instructions for use HOTPOINT ARMXXD 129
Instruction manual HOTPOINT ARMXXD 129

Instructions for use

WASHER DRYER

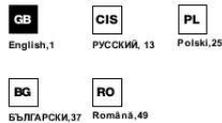

ARMXXD 129

Contents

GB

Installation, 2-3

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Description of the washer dryer, 4-5

Control panel
Display

How to run a wash cycle or a drying cycle, 6

Wash cycles and functions, 7

Table of wash cycles
Wash functions

Detergents and laundry, 8

Detergent dispenser drawer
Preparing the laundry
Special wash cycles
Load balancing system

Precautions and tips, 9

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 10

Cutting off the water or electricity supply
Cleaning the washer dryer
Cleaning the detergent dispenser drawer
Caring for the door and drum of your appliance
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 11

Service, 12



1



[You're reading an excerpt. Click here to read official HOTPOINT ARMXXD 129 user guide](http://yourpdfguides.com/dref/4484350)
<http://yourpdfguides.com/dref/4484350>

Manual abstract:

Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washer dryer from its packaging. 2. Make sure that the washer dryer has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 4 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). a 1. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded opening (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the inlet hose to the washer dryer by screwing it onto the corresponding water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure). 4. Close off the holes using the plastic plugs provided. 5.

Keep all the parts in a safe place: you will need them again if the washer dryer needs to be moved to another location. 3. Make sure that the hose is not folded over or bent. □ Packaging materials should not be used as toys for children. Levelling □ The water pressure at the tap must fall within the values indicated in the Technical details table (see next page).

□ If the inlet hose is not long enough, contact a specialised shop or an authorised technician. □ Never use second-hand hoses. □ Use the ones supplied with the machine. 1. Install the washer dryer on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2. 2 Connecting the drain hose □ Do not use extension cords or multiple sockets. @@@@ warning! @@@@The free end of the hose should not be underwater. Once the appliance has been installed, and before you use it for the first time, run a wash cycle with .

Detergent and no laundry, using the wash cycle □ We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. electrical connections Technical data Model ARMXXD 129 width 59. 5 cm height 85 cm depth 53,5 cm from 1 to 7 kg for the wash programme; from 1 to 5 kg for the drying programme please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0. 05 MPa (0. 5 bar) drum capacity 52 litres up to 1200 rotations per minute Wash: programme (1 st press of the button); temperature 60C; using a load of 7 kg. Drying: first drying cycle performed with a 2 kg load, by selecting the "IRON DRY" dryness level;

The second drying cycle is performed with a 5 kg load, by selecting the "CUPBORD DRY" dryness level. This appliance conforms to the following EC Directives: - 89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications - 2006/95/EC (Low Voltage) - 2002/96/EC Dimensions Capacity Electrical connections Water connections Spin speed Before plugging the appliance into the electricity socket, make sure that: the socket is earthed and complies with all applicable laws; the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); the power supply voltage falls within the values indicated in the Technical data table (see opposite); the socket is compatible with the plug of the washer dryer. If this is not the case, replace the socket or the plug. Energy rated programmes according to regulation EN 50229 □ The washer dryer must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions.

□ When the washer dryer has been installed, the electricity socket must be within easy reach. 3 Description of the washer dryer GB Control panel ON/OFF button CONTROL PANEL LOCK button DRYING Button SPIN SPEED Button DISPLAY Detergent dispenser drawer MEMORY Button WASH CYCLE SELECTOR Buttons FUNCTION buttons START/ PAUSE button with indicator light DELAYED START Button TEMPERATURE Button Detergent dispenser drawer: used to dispense detergents and washing additives (see Detergents and laundry). ON/OFF button : press this briefly to switch the machine on or off. The START/PAUSE indicator light, which flashes slowly in a green colour shows that the machine is switched on. To switch off the washer dryer during the wash cycle, press and hold the button for approximately 2 seconds; if the button is pressed briefly or accidentally the machine will not switch off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled. WASH CYCLE SELECTOR buttons: used to set the desired wash cycle (see "Table of wash cycles"). @@ to recall a previously stored cycle , press the MEMO button. FUNCTION buttons: press the button to select the desired function. The corresponding indicator light on the display will switch on.

@@@@@ When the symbol illuminated, the control panel is locked. @@@@@@ The delay time will be shown on the display. dRYING button : press to set a drying cycle. @@@@@@ If the is not illuminated, the door may be symbol opened. @@4 Display GB B A D C E F The display is useful when programming the machine and provides a great deal of information. The upper two strings A and B are used to display the selected wash cycle or the type of drying selected, the current wash cycle phase (the selected dryness level or drying time) and all the indications relating to the progress status of the cycle. String C shows the time remaining until the end of the wash cycle in progress and, if a DELAYED START has been set, the time remaining until the start of the selected wash cycle. String D shows the maximum spin speed value (this depends on the selected wash cycle); if the wash cycle does not include a spin cycle, the string remains unused. String E shows the maximum temperature value which may be selected (this depends on the wash cycle used); if the temperature of the wash cycle cannot be modified, the string remains unused. Indicator lights F correspond to the functions and light up when the selected function is compatible with the set wash cycle.

Door locked symbol If the symbol is lit, this indicates that the washer dryer door is blocked to prevent it from being opened accidentally. To prevent any damage from occurring, wait for the symbol to switch itself off before opening the appliance door. : if the DELAYED START function has been activated, the door cannot be opened; pauses the machine by pressing the START/PAUSE button if you wish to open it. □ The first time the machine is switched on, you will be asked to select the language and the display will automatically show the language selection menu.



[You're reading an excerpt. Click here to read official HOTPOINT](http://yourpdfguides.com/dref/4484350)

[ARMXXD 129 user guide](http://yourpdfguides.com/dref/4484350)

<http://yourpdfguides.com/dref/4484350>

To select the desired language press the TEMPERATURE and SPIN buttons; to confirm the selection press the DRYING button. If you wish to select another language, press and hold the DRYING + TEMPERATURE + SPIN buttons simultaneously for 5 seconds, then repeat the steps listed above. 5 How to run a wash cycle or a drying cycle GB 1. SWITCH THE MACHINE ON. □ Press the button; the text WELCOME will appear on the display and the START/ PAUSE indicator light will flash slowly in a green colour. Load the laundry, making sure you do not exceed the maximum load value indicated in the table of programmes on the following page.

Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments as described in "Detergents and laundry". Press one of the WASH CYCLE SELECTOR buttons to select the required wash cycle; the name of the wash cycle will appear on the display. A temperature and spin speed is set for each wash cycle; these may be adjusted. The duration of the cycle will appear on the display. Use the relevant buttons: □ Modifying the temperature and/or spin speed.

□ The machine automatically selects the maximum temperature and spin speed set for the selected wash cycle; these values cannot therefore be increased. The temperature can be decreased by pressing the button, until the cold wash "OFF" setting is reached. @@ If these buttons are pressed again, the maximum values are restored. setting a delayed start. @@ When this symbol lights up on the option is enabled, the display.

@@ setting the drying cycle. @@@@ Hanger dry: dry clothes to put away. @@ b - Based on time: from 40 minutes to 180. @@@@ place extra compartment 4 (supplied) into compartment 1. @@@@ □ The use of extra compartment 4 excludes the Prewash function. @@@@ □ It may not be used with the and Drying programmes. , , Pump out □ It cannot be used with the Drying programmes. @@ it is particularly useful for sensitive skin. @@ □ It cannot be used with the Drying programmes. @@@@ 5 kg.

To wash all silk Silk: use special wash cycle garments. @@@@ compartment 3: Additives (fabric softeners, etc.) The fabric softener should not overflow the grid. @@ Do not exceed the listed values, which refer to the weight of the laundry when dry: Durable fabrics: max. 1 kg How much does your laundry weigh? Load balancing system Before every spin cycle, to avoid excessive vibrations and to distribute the load in a uniform manner, the drum rotates cor dryer is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber which protects the pump, situated in its bottom part. □ Make sure the wash cycle has finished and unplug the appliance. to access the pre-chamber: 1. Using a screwdriver, remove the cover panel on the lower front part of the washer dryer (see figure); Cleaning the washer dryer The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. do not use solvents or abrasives.

Cleaning the detergent dispenser drawer 1 Remove the dispenser by raising it and pulling it out (see figure). Wash it under running water; this operation should be repeated frequently. 2 2. @@@@ Screw the lid back on; 5. @@@@ If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open.

Before contacting the Technical Assistance Centre (see Assistance), make sure that the problem cannot be not solved easily using the following list. gB Problem: The washer dryer does not switch on. The wash cycle does not start. Possible causes / Solutions: The appliance is not plugged into the socket fully, or is not making contact. There is no power in the house.

? The washer dryer door is not closed properly. The ON/OFF button has not been pressed. The START/PAUSE button has not been pressed. The water tap has not been opened. A delayed start has been set (see How to run a wash cycle or a drying cycle). The water inlet hose is not connected to the tap. the hose is bent. The water tap has not been opened. There is no water supply in the house. The pressure is too low.

The START/PAUSE button has not been pressed. The washer dryer does not take in water (the text "NO WATER, CHECK SUPPLY" appears on the display). The washer dryer continuously takes in and drains water. The drain hose is not fitted at a height between 65 and 100 cm from the floor (see Installation). The free end of the hose is under water (see Installation). The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Assistance Service. @@@@ The drum was not unlocked correctly during installation (see Installation). Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service.

The detergent is not suitable for machine washing (it should display the text for washer dryers or hand and machine wash, or the like). ? Too much detergent was used. The appliance is not plugged into the socket, or not enough to make contact. There has been a power failure. The appliance door is not shut properly.

The washer dryer does not drain or spin. The washer dryer vibrates a lot during the spin cycle. the washer dryer leaks. The machine is locked and the display flashes, indicating an error code (e. There is too much foam).

The washer-dryer does not dry. 11 Service GB Before calling for Assistance: Check whether you can solve the problem alone (see Troubleshooting); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. □ Always request the assistance of authorised technicians. Have the following information to hand: the type of problem; the appliance model (Mod.); the serial number (S/N). This information can be found on the data plate applied to the rear of the washer dryer, and can also be found on the front of the appliance by opening the door. Curarea pompei Maina de splat este dotat cu o pomp de autocurare care nu are nevoie de ntreinere. .



[You're reading an excerpt. Click here to read official HOTPOINT ARMXXD 129 user guide](http://yourpdfguides.com/dref/4484350)
<http://yourpdfguides.com/dref/4484350>