



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT ARTL 104. You'll find the answers to all your questions on the HOTPOINT ARTL 104 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT ARTL 104  
User guide HOTPOINT ARTL 104  
Operating instructions HOTPOINT ARTL 104  
Instructions for use HOTPOINT ARTL 104  
Instruction manual HOTPOINT ARTL 104

## Instructions for use

### WASHING MACHINE

GB

English,1

ES

Español,13

CIS

РУССКОЕ, 25

PL

Polski,37

ARTL 104

#### Contents

##### Installation, 2-3

Unpacking and levelling  
Connecting the electricity and water supplies  
The first wash cycle  
Technical data

##### Description of the washing machine and starting a wash cycle, 4-5

Control panel  
Indicator lights  
How to open and shut the drum  
Starting a wash cycle

##### Wash cycles, 6

Table of wash cycles

##### Personalisation, 7

Setting the temperature  
Setting the spin speed  
Functions

##### Detergents and laundry, 8

Detergent dispenser drawer  
Bleach cycle  
Preparing the laundry  
Garments requiring special care  
Load balancing system

##### Precautions and tips, 9

General safety  
Disposal  
Saving energy and respecting the environment

##### Care and maintenance, 10

Cutting off the water or electricity supply  
Cleaning the washing machine  
Caring for your appliance door and drum  
Cleaning the pump  
Checking the water inlet hose  
How to clean the detergent dispenser

##### Troubleshooting, 11

##### Service, 12



[You're reading an excerpt. Click here to read official HOTPOINT ARTL 104 user guide](http://yourpdfguides.com/dref/4484223)  
<http://yourpdfguides.com/dref/4484223>

### Manual abstract:

Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer. 3. Remove the four protective screws and the rubber washer with the respective spacer, situated on the rear of the appliance (see figure). 4. Seal the gaps using the plastic plugs provided. 5. Keep all the parts: you will need them again if the washing machine needs to be moved to another location. 1. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded mouth (see figure).

Before making the connection, allow the water to run freely until it is perfectly clear. 2. Connect the other end of the water inlet hose to the washing machine, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure). Warning: should the screws be re-used, make sure you fasten the shorter ones at the top. 3.

Make sure there are no kinks or bends in the hose. □ The water pressure at the tap must be within the values indicated in the Technical details table (on the next page). □ Packaging materials are not children's toys. Levelling Your machine may make a considerable amount of noise if the two front feet have not been adjusted correctly. 1.

Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or other. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured according to the worktop, must not exceed 2°. □ If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman. 2 Connecting the drain hose □ Do not use extension cords or multiple sockets. Connect the drain hose, without bending it, to a drainage duct or a wall drain located at a height between 65 and 100 cm from the floor; GB □ The cable should not be bent or compressed. @@ warning! @@@@The free end of the hose should not be underwater. @@ □ We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. Electrical connections Technical data Model ARTL 104 width 40 cm height 85 cm depth 60 cm from 1 to 5 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.

5 bar) drum capacity 42 litres up to 1000 rotations per minute Before plugging the appliance into the electricity socket, make sure that: □ the socket is earthed and complies with all applicable laws; □ the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); □ the power supply voltage falls within the values indicated in the Technical data table (see opposite); □ the socket is compatible with the plug of the washing machine. If this is not the case, replace the socket or the plug. Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 60456 programme 7; temperature 60°C; using a load of 5 kg. □ The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. □ When

the washing machine has been installed, the electricity socket must be within easy reach. This appliance conforms to the following EC Directives: - 89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications - 2002/96/EC - 2006/95/EC (Low Voltage) 3 Description of the washing machine and starting a wash cycle GB Control panel WASH CYCLE PROGRESS/ DELAY TIMER indicator lights SPIN SPEED knob ON/OFF button TEMPERATURE LID LOCKED indicator light knob WASH CYCLE knob START/PAUSE FUNCTION buttons with indicator lights button with indicator light ON/OFF □ button: switches the washing machine on and off. WASH CYCLE knob: programmes the wash cycles. During the wash cycle, the knob does not move. FUNCTION buttons with indicator light: used to select the available functions.

The indicator light corresponding to the selected function will remain lit. TEMPERATURE knob: sets the temperature or the cold wash cycle (see □ Personalisation □). SPIN SPEED knob: sets the spin speed or exclude the spin cycle completely (see □ Personalisation □). @@ The illuminated indicator light shows which phase is in progress. @@@@ indicator lights The indicator lights provide important information.

@@@ Wash Rinse Spin Drain End of wash cycle Function buttons and corresponding indicator lights When a function is selected, the corresponding indicator light will illuminate. If the selected function is not compatible with the programmed wash cycle, the corresponding indicator light will flash and the function will not be activated. If a function which is incompatible with another function selected previously, only the most recent selection will remain active. Lid locked indicator light If this indicator light is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damage, wait for the indicator light to switch off (it will take about three minutes) before you open the appliance door. If the DELAY TIMER function is activated, the door cannot be opened; pause the machine by pressing the START/PAUSE button if you wish to open it.

□ If the START/PAUSE indicator light (orange) flashes rapidly at the same time as the function indicator light, this indicates a problem has occurred (see □ Troubleshooting □). GB B) Then open the drum using both hands as shown in Fig. 2: - press the button indicated by the arrow in fig. 2 lightly downwards, with one hand firmly resting on the doors to prevent them from suddenly opening and hurting your fingers; - therefore follow the appliance doors along as these unhook and open easily. 4): - close the drum fully by first shutting the front door followed by the rear one; - then ensure the hooks on the front door are perfectly housed within the seat of the rear door; - after the hooks have clicked into position, press both doors lightly downwards to make sure they do not come loose; - finally shut the external lid. Starting a wash cycle 1. Switch the washing machine on by pressing the ON/OFF button. All indicator lights will switch on for a few seconds, then they will switch off and the START/ PAUSE indicator light will pulse. 2. Load the laundry, close the door and the lid.

3. Set the WASH CYCLE knob to the desired programme. Set the spin speed (see □ Personalisation □). Start the wash cycle by pressing the START/ PAUSE button and the corresponding indicator light will remain lit in a fixed manner, in green. To cancel the set wash cycle, pause the machine by pressing the START/PAUSE button and select a new cycle. indicator light 9. At the end of the wash cycle the will switch on.



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[ARTL 104 user guide](#)

<http://yourpdfguides.com/dref/4484223>

