



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT ARXF 145. You'll find the answers to all your questions on the HOTPOINT ARXF 145 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT ARXF 145
User guide HOTPOINT ARXF 145
Operating instructions HOTPOINT ARXF 145
Instructions for use HOTPOINT ARXF 145
Instruction manual HOTPOINT ARXF 145

Instructions for use

WASHING MACHINE

GB

English,1

FR

Français,13

DE

Deutsch,25

NL

Nederlands,37

ARXF 145

Contents

Installation, 2-3

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Description of the washing machine and starting a wash cycle, 4-5

Control panel
Indicator lights
Starting a wash cycle

Wash cycles, 6

Table of wash cycles

Personalisation, 7

Setting the temperature
Setting the spin speed
Functions

Detergents and laundry, 8

Detergent dispenser drawer
Bleach cycle
Preparing the laundry
Garments requiring special care
Load balancing system

Precautions and tips, 9

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 10

Cutting off the water or electricity supply
Cleaning the washing machine
Cleaning the detergent dispenser drawer
Caring for the door and drum of your appliance
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 11

Service, 12



[You're reading an excerpt. Click here to read official HOTPOINT ARXF 145 user guide](http://yourpdfguides.com/dref/4484037)
<http://yourpdfguides.com/dref/4484037>

Manual abstract:

Connecting the electricity and water supplies Connecting the water inlet hose Unpacking and levelling Unpacking 1. Remove the washing machine from its packaging. 2. Make sure that the washing machine has not been damaged during the transportation process. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 3. Remove the 3 protective screws (used during transportation) and the rubber washer with the corresponding spacer, located on the rear part of the appliance (see figure). a 1. Insert seal A into the end of the inlet hose and screw the latter onto a cold water tap with a 3/4 gas threaded opening (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear.

2. Connect the inlet hose to the washing machine by screwing it onto the corresponding water inlet of the appliance, which is situated on the top righthand side of the rear part of the appliance (see figure). 4. Close off the holes using the plastic plugs provided. 5.

Keep all the parts in a safe place: you will need them again if the washing machine needs to be moved to another location. 3. Make sure that the hose is not folded over or bent. □ Packaging materials should not be used as toys for children. Levelling □ The water pressure at the tap must fall within the values indicated in the Technical details table (see next page).

□ If the inlet hose is not long enough, contact a specialised shop or an authorised technician. □ Never use second-hand hoses. □ Use the ones supplied with the machine. 1. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or anything else. 2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured in relation to the worktop, must not exceed 2°. 2 Connecting the drain hose □ Do not use extension cords or multiple sockets. @@@@ warning! @@@@The free end of the hose should not be underwater. Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle 2.

□ We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length. electrical connections Technical data Model ARXF 145 width 59.5 cm height 85 cm depth 52,5 cm from 1 to 6 kg please refer to the technical data plate fixed to the machine maximum pressure 1 MPa (10 bar) minimum pressure 0.05 MPa (0.5 bar) drum capacity 46 litres up to 1400 rotations per minute Before plugging the appliance into the electricity socket, make sure that: □ the socket is earthed and complies with all applicable laws; □ the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); □ the power supply voltage falls within the values indicated in the Technical data table (see opposite); □ the socket is compatible with the plug of the washing machine. If this is not the case, replace the socket or the plug. Dimensions Capacity Electrical connections Water connections Spin speed Energy rated programmes according to regulation EN 60456 programme 7; temperature 60°C; using a load of 6 kg. □ The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. □ When the washing machine has been installed, the electricity socket must be within easy reach.

This appliance conforms to the following EC Directives: - 89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications - 2002/96/EC - 2006/95/CE (Low Voltage) 3 Description of the washing machine and starting a wash cycle GB Control panel ON/OFF WASH CYCLE PROGRESS DISPLAY button with indicator light indicator lights TEMPERATURE button DOOR LOCKED indicator light Detergent dispenser drawer START/PAUSE SPIN SPEED button FUNCTION WASH CYCLE knob buttons with indicator lights button with indicator light CONTROL PANEL LOCK button with indicator light Detergent dispenser drawer: used to dispense detergents and washing additives (see □Detergents and laundry□). There is a key which provides a summary of the available wash cycles inside the detergent dispenser drawer; this may be consulted at any time. ON/OFF button with indicator light: switches the machine on and off. If the indicator light is illuminated, this indicates that the machine is switched on. WASH CYCLE knob: programmes the wash cycles.

During the wash cycle, the knob does not move. SPIN SPEED button: sets the spin speed or exclude the spin cycle completely (see □Personalisation□). TEMPERATURE button: sets the temperature or the cold wash cycle (see □Personalisation□). @@@@The illuminated indicator light shows which phase is in progress. @@@@ 4 Indicator lights The indicator lights provide important information.

This is what they can tell you: Wash cycle phase indicator lights As the WASH CYCLE knob is rotated, the indicator lights illuminate, indicating the stages which will be performed by the machine in accordance with the selected wash cycle. Once the desired wash cycle has been selected and has begun, the indicator lights switch on one by one to indicate which phase of the cycle is currently in progress. Wash Rinse Spin Drain no spin End of wash cycle Function buttons and corresponding indicator lights When a function is selected, the corresponding indicator light will illuminate. If the selected function is not compatible with the programmed wash cycle, the corresponding indicator light will flash, a sound signal will be emitted and the function will not be activated. If a function which is incompatible with another function selected previously, only the most recent selection will remain active. Temperature indicator light When a temperature value is selected, the corresponding indicator light will illuminate. GB Spin indicator light When a spin value is selected, the corresponding indicator light will illuminate. Control panel lock indicator light To activate the control panel lock, press and hold the button for approximately 2 seconds. When the indicator light is illuminated, the control panel is locked. This means it is possible to prevent wash cycles from being modified accidentally, especially where there are children in the home.

To deactivate the control panel lock, press and hold the button for approximately 2 seconds. Door locked indicator light If this indicator light is on, the appliance door is locked to prevent it from being opened accidentally; to avoid any damage, wait for the indicator light to switch off before you open the appliance door. If the DELAY TIMER function is activated, the door cannot be opened; pause the machine by pressing the START/PAUSE button if you wish to open it.



[You're reading an excerpt. Click here to read official HOTPOINT ARXF 145 user guide](http://yourpdfguides.com/dref/4484037)
<http://yourpdfguides.com/dref/4484037>

□ If the START/PAUSE indicator light (orange) flashes rapidly at the same time as the function indicator light, this indicates a problem has occurred (see □Troubleshooting□). Starting a wash cycle 1. Switch the washing machine on by pressing the ON/OFF button. All indicator lights will switch on for a few seconds, then they will switch off and the START/PAUSE indicator light will pulse. 2. Load the laundry and close the door. 3.

Set the WASH CYCLE knob to the desired programme. Set the spin speed (see □Personalisation□). Start the wash cycle by pressing the START/PAUSE button and the corresponding indicator light will remain lit in a fixed manner, in green. To cancel the set wash cycle, pause the machine by pressing the START/PAUSE button and select a new cycle. indicator light will switch on.

The DOOR LOCKED indicator light will switch 9. At the end of the wash cycle the off, indicating that the door may be opened. @@Switch the washing machine off by pressing the ON/OFF button. @@@@The information contained in the table is intended as a guide only. special wash cycles Sanitizing cycle (wash cycle 7).

@@@@ goodnight cycle (wash cycle 8). @@@@@@How much does your laundry weigh? @@@@@@Silk: use special wash cycle 11 to wash all silk garments. @@@@@@ load 1,5 kg) and guarantees optimal performance. @@@@ compartment 3: Additives (fabric softeners, etc.) The fabric softener should not overflow the grid. @@@@This option is recommended only for very soiled cotton garments. @@@@@@Preparing the laundry □ Divide the laundry according to: - the type of fabric/the symbol on the label. - the colours: separate coloured garments from whites □ Empty all garment pockets and check the buttons. □ Do not exceed the listed values, which refer to the weight of the laundry when dry: Durable fabrics: max. 1,5 kg 8 Precautions and tips □ This washing machine was designed and constructed in accordance with international safety regulations.

The following information is provided for safety reasons and must therefore be read carefully. Opening the porthole door manually In the event that it is not possible to open the porthole door due to a powercut, and if you wish to remove the laundry, proceed as follows: 1. Remove the plug from the electrical socket. 2. Make sure the water level inside the machine is lower than the door opening; if it is not, remove excess water using the drain hose, collecting it in a bucket as indicated in the figure. 3. Using a screwdriver, remove the cover panel on the lower front part of the washing machine (see figure). GB General safety □ This appliance was designed for domestic use onl. A delayed start has been set (using the Delay Timer, see □Personalisation□). The water inlet hose is not connected to the tap.

the hose is bent. The water tap has not been opened. There is no water supply in the house. The pressure is too low. The START/PAUSE button has not been pressed.

The washing machine does not take in water (the indicator light for the first wash cycle stage flashes rapidly). The washing machine continuously takes in and drains water. □ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see □Installation□). □ The free end of the hose is under water (see □Installation□). □ The wall drainage system is not fitted with a breather pipe.

@@@@@□ The EASY IRON function has been activated: To complete the wash cycle, press the START/PAUSE button (□Personalisation□). □ The drum was not unlocked correctly during installation (see □Installation□). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. □ The detergent is not suitable for machine washing (it should display the text □for washing machines□ or □hand and machine wash□, or the like). Too much detergent was used. The washing machine does not drain or spin. The washing machine vibrates a lot during the spin cycle. the washing machine leaks. The START/PAUSE indicator light (orange) and the function indicator lights flash rapidly.

There is too much foam. 11 Service GB Before calling for Assistance: □ Check whether you can solve the problem alone (see □Troubleshooting□); □ Restart the programme to check whether the problem has been solved; □ If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. □ Always request the assistance of authorised technicians. Have the following information to hand: □ the type of problem; □ the appliance model (Mod.); □ the serial number (S/N). This information can be found on the data plate applied to the rear of the washing machine, and can also be found on the front of the appliance by opening the door. FR 65 - 100 cm Raccorder le tuyau d'évacuation, sans le plier, à un conduit d'évacuation ou à une évacuation murale placés à une distance du sol comprise entre 65 et 100 cm; Premier cycle de lavage ou bien l'accrocher à un évier ou à une baignoire, dans ce cas, fixer le support en plastique fourni avec l'appareil au robinet (voir figure). Vermeld: □ het type storing; □ het model van de machine (Mod. .



[You're reading an excerpt. Click here to read official HOTPOINT ARXF 145 user guide](http://yourpdfguides.com/dref/4484037)
<http://yourpdfguides.com/dref/4484037>