



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT ARXXF 145. You'll find the answers to all your questions on the HOTPOINT ARXXF 145 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT ARXXF 145
User guide HOTPOINT ARXXF 145
Operating instructions HOTPOINT ARXXF 145
Instructions for use HOTPOINT ARXXF 145
Instruction manual HOTPOINT ARXXF 145

Instructions for use

WASHING MACHINE

GB English, 1	FR Français, 13	NL Nederlands, 25
SV Svenska, 37	FI Suomi, 49	DK Dansk, 61
NO Norsk, 73		

ARXXF 145

Contents

Installation, 2-3

Unpacking and levelling
Connecting the electricity and water supplies
The first wash cycle
Technical data

Description of the washing machine and starting a wash cycle, 4-5

Control panel
Indicator lights
Starting a wash cycle

Wash cycles, 6

Table of wash cycles

Personalisation, 7

Setting the temperature
Setting the spin speed
Functions

Detergents and laundry, 8

Detergent dispenser drawer
Bleach cycle
Preparing the laundry
Garments requiring special care
Load balancing system

Precautions and tips, 9

General safety
Disposal
Opening the porthole door manually

Care and maintenance, 10

Cutting off the water or electricity supply
Cleaning the washing machine
Cleaning the detergent dispenser drawer
Caring for the door and drum of your appliance
Cleaning the pump
Checking the water inlet hose

Troubleshooting, 11

Service, 12



[You're reading an excerpt. Click here to read official HOTPOINT ARXXF 145 user guide](http://yourpdfguides.com/dref/4484042)
<http://yourpdfguides.com/dref/4484042>

Start the wash cycle by pressing the START/PAUSE button and the corresponding indicator light will remain lit in a fixed manner, in green. To cancel the set wash cycle, pause the machine by pressing the START/PAUSE button and select a new cycle. indicator light will switch on. The DOOR LOCKED indicator light will switch 9.

At the end of the wash cycle the off, indicating that the door may be opened. Take out your laundry and leave the appliance door ajar to make sure the drum dries completely. Switch the washing machine off by pressing the ON/OFF button. 5 Wash cycles GB Table of wash cycles Wash cycles Description of the wash cycle Max. Everyday wash cycles (Daily) 90° 60° 40° 40° 40° 30° 40° 90° 60° 40° 40° 60° 40° 30° 30° - 1400 1400 800 800 600 0 600 1400 1400 1400 1400 800 800 800 800 1400 1400 800 0 1111 - 1111111111111111 - 1111111111111111 - 7 7 4 2 2 1 1,5 7 7 7 3 3 3 1,5 7 7 3 7 The duration of the wash cycles can be checked on the display.

Mix 30': To refresh lightly soiled garments quickly (not suitable for wool, 5 silk and clothes which require washing by hand). Mix 15': To refresh lightly soiled garments quickly (not suitable for wool, 6 silk and clothes which require washing by hand). Partials wash cycles A Rinse B Spin C Light spin D Drain no spin For all Test Institutes: 1) Test wash cycle in compliance with regulation EN 60456: set wash cycle 7 with a temperature of 60°C. 2) Long wash cycle for cottons: set wash cycle 2 with a temperature of 40°C. 3) Short wash cycle for cottons: set wash cycle 3 with a temperature of 40°C. The information contained in the table is intended as a guide only. special wash cycles Sanitizing cycle (wash cycle 7). A high-temperature hygienic wash cycle (over 60°C) which requires the use of bleach. Pour the bleach, the detergent and the additives into the relevant compartments (see paragraph entitled □Detergent dispenser drawer□). goodnight cycle (wash cycle 8).

This cycle the washing machine will perform slow rotations of the drum; the EASY IRON and START/ phase will remain lit in a fixed manner. @@@@ How much does your laundry weigh? @@@@ Silk: use special wash cycle 11 to wash all silk garments. @@@@ load 1,5 kg) and guarantees optimal performance. @@@@ compartment 3: Additives (fabric softeners, etc.) The fabric softener should not overflow the grid. @@@@ This option is recommended only for very soiled cotton garments. @@@@ Remove the plug from the electrical socket. 2. @ 3. @@@@ Assistance□, make sure that the problem cannot be not solved easily using the following list. gB Problem: The washing machine does not switch on. The wash cycle does not start. @□ There is no power in the house. @ The ON/OFF button has not been pressed. The START/PAUSE button has not been pressed.

The water tap has not been opened. @ The water inlet hose is not connected to the tap. the hose is bent. The water tap has not been opened. There is no water supply in the house. The pressure is too low. The START/PAUSE button has not been pressed. The washing machine does not take in water (the indicator light for the first wash cycle stage flashes rapidly). The washing machine continuously takes in and drains water. □ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see □Installation□). □ The free end of the hose is under water (see □Installation□). □ The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Assistance Service. If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously. Special anti-draining valves are available in shops and help to avoid this inconvenience.

□ The wash cycle does not include draining: some wash cycles require the drain phase to be started manually. □ The EASY IRON function has been activated: To complete the wash cycle, press the START/PAUSE button (□Personalisation□). □ The drum was not unlocked correctly during installation (see □Installation□). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. □ The detergent is not suitable for machine washing (it should display the text □for washing machines□ or □hand and machine wash□, or the like). Too much detergent was used. The washing machine does not drain or spin. The washing machine vibrates a lot during the spin cycle. the washing machine leaks.

The START/PAUSE indicator light (orange) and the function indicator lights flash rapidly. There is too much foam. @ □ Always request the assistance of authorised technicians. @); □ the serial number (S/N). @@@ Vermeld: □ het type storing; □ het model van de machine (Mod. Anslut inloppsslangen till tvättmaskinen genom att skruva fast den till det avsedda vattenuttaget i den bakre delen uppe till höger (se figur). /min Inden stikket sættes i stikkontakten skal man sørge for følgende: □ at stikkontakten er udstyret med jordforbindelse og overholder kravene i lovgivningen; □ at stikkontakten tåler vaskemaskinens maksimale effekt, der fremgår af tabellen med tekniske oplysninger (se modstående side); □ at forsyningsspændingen er inden for værdierne, der fremgår af tabellen med tekniske oplysninger (se modstående side); □ at stikkontakten passer til vaskemaskinens stik. Tast med kontrollampe for TÆND/SLUK: Tænder og slukker for vaskemaskinen. Kontrollampe for blokeret låge Kontrollampen tændes for at vise, at lågen er blokeret til forebyggelse af utilsigtet åbning: for at undgå at beskadige mekanismen, skal man vente indtil kontrollampen slukker før lågen åbnes. □ Hvis kontrollampen for START/PAUSE (orange) blinker hurtigt og kontrollampen for funktion, er det tegn på en fejl (se □Fejl og afhjælpning□). For at afslutte cyklussen skal man trykke på for START/PAUSE blinker (orange), og lampen for tasten START/PAUSE eller tasten STRYGELET. I programmet Silke afslutter maskinen vasken med tøjet i blød, og kontrollampen for funktionen STRYGELET og lampen for START/PAUSE blinker (orange), og lampen for SKYLNINGEN lyser fast. @@@@ Indikatorlampe for låst dør Hvis indikatoren er på, er døren til apparatet låst for å forhindre utilsigtet åbning av døren, for å unngå skade, vent til indikatorlampen slås av før du åpner døren på apparatet. På slutten av en vaskesyklus vil maskinen sakte rotere trommelen for å forhindre at klærne krølles, for å avslutte syklusen trykkes START/PAUSE-knappen.



[You're reading an excerpt. Click here to read official HOTPOINT ARXXF 145 user guide](http://yourpdfguides.com/dref/4484042)
<http://yourpdfguides.com/dref/4484042>

78 Enkeltilfeller Stille temperaturen Ved å trykke på TEMPERATUR-knappen for å stille inn vasketemperaturen (se Tabell for vaskesykluser). NO Innstilling av sentrifugeringshastigheten Ved å trykke på SENTRIFUGEHASTIGHET for å stille inn sentrifugehastighet for valgt vaskesyklus. Forsinket start For å stille inn en forsinket start for valgt vaskesyklus, trykk gjentatte ganger på knappen inntil ønsket tidsforsinkelse vises (dette kan være mellom 1 time og 24 timer). For vaskesyklusen Silke, vil maskinen ende syklusen mens vasken er søkkvåt, og indikatorlampene for STRYKELETT og START/PAUSE vil blinke (oransje), og fasen SKYLLINGER vil være tent kontinuerlig. Ekstra del 4: Blekemiddel Laste balansesystem Før hver sentrifugering roterer trommelen kontinuerlig ved en hastighet som er litt høyere enn vaskeroteringshastigheten for å unngå for mye vibrasjon før hver sentrifugering og fordele lasten jevnt. 00 04/2008 - Xerox Business Services Før du ringer for hjelp: Kontroller om du kan løse problemet selv (se Feilsøking); Start programmet på nytt for å kontrollere om problemet er løst; Hvis dette ikke er tilfelle, ta kontakt med et autorisert hjelpesenter ved bruk av telefonnumrene som finnes på garantibeviset.



[You're reading an excerpt. Click here to read official HOTPOINT ARXXF 145 user guide](http://yourpdfguides.com/dref/4484042)
<http://yourpdfguides.com/dref/4484042>