



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT ECOT7D 1492 EU. You'll find the answers to all your questions on the HOTPOINT ECOT7D 1492 EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT ECOT7D 1492 EU  
User guide HOTPOINT ECOT7D 1492 EU  
Operating instructions HOTPOINT ECOT7D 1492 EU  
Instructions for use HOTPOINT ECOT7D 1492 EU  
Instruction manual HOTPOINT ECOT7D 1492 EU

## Instructions for use

### WASHING MACHINE

<b>GB</b> English, 1	<b>IT</b> Italiano, 13	<b>DE</b> Deutsch, 25
<b>GR</b> Ελληνικά, 37	<b>RU</b> Русский, 49	<b>KZ</b> Қазақша, 61

ECOT7D 1492

#### Contents

<b>Installation, 2-3</b> Unpacking and leveling Connecting the electricity and water supplies The first wash cycle Technical data
<b>Care and maintenance, 4</b> Cutting off the water or electricity supply Cleaning your appliance Caring for your appliance door and drum Cleaning the pump Checking the water inlet hose How to clean the detergent dispenser
<b>Precautions and tips, 5</b> General advice Disposal Saving energy, and respecting the environment
<b>Description of the washing machine, 6-7</b> Control panel Display How to open and shut the drum
<b>Running a wash cycle, 8</b> Load balancing system
<b>Wash cycles and functions, 9</b> Table of wash cycles Wash functions
<b>Detergents and laundry, 10</b> Detergent dispenser drawer Preparing the laundry Special washes, etc.
<b>Troubleshooting, 11</b>
<b>Service, 12</b>



[You're reading an excerpt. Click here to read official HOTPOINT ECOT7D 1492 EU user guide](http://yourpdfguides.com/dref/5117133)  
<http://yourpdfguides.com/dref/5117133>

### Manual abstract:

@@ ! @@@@ electric and water connections Connecting the water inlet hose 1. Connect the supply pipe by screwing it to a cold water tap using a ¾ gas threaded connection (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear. 2. Connect the other end of the water inlet hose to the washing machine, screwing it onto the appliance's cold water inlet, situated on the top right-hand side on the rear of the appliance (see figure). 3. Make sure there are no kinks or bends in the hose. ! The water pressure at the tap must be within the values indicated in the Technical details table (on the next page). ! If the water inlet hose is not long enough, contact a specialist store or an authorised serviceman. ! Never use hoses that have already been used.

Check whether the washing machine has been damaged during transport. If this is the case, do not install it and contact your retailer. 3. Remove the four protective screws and the rubber washer with the respective spacer, situated on the rear of the appliance (see figure). 4. Seal the gaps using the plastic plugs provided. 5. Keep all the parts: you will need them again if the washing machine needs to be moved to another location. Warning: should the screws be re-used, make sure you fasten the shorter ones at the top. Install the washing machine on a flat sturdy floor, without resting it up against walls, furniture cabinets or other.

2. If the floor is not perfectly level, compensate for any unevenness by tightening or loosening the adjustable front feet (see figure); the angle of inclination, measured according to the worktop, must not exceed 2°. Levelling your appliance correctly will provide it with stability and avoid any vibrations, noise and shifting during operation. 2 Connecting the drain hose Connect the drain hose, without bending it, to a drainage duct or a wall drain located at a height between 65 and 100 cm from the floor; ! The cable should not be bent or compressed. ! The power supply cable must only be replaced by authorised technicians. warning! The company shall not be held responsible in the event that these regulations are not respected. GB 65 - 100 cm alternatively, rest it on the side of a washbasin or bathtub, fastening the duct supplied to the tap (see figure). The free end of the hose should not be underwater. The first wash cycle Once the appliance has been installed, and before you use it for the first time, run a wash cycle with detergent and no laundry, using the wash cycle (60°C). technical details Model ECOT7D 1492 ! We advise against the use of hose extensions; if it is absolutely necessary, the extension must have the same diameter as the original hose and must not exceed 150 cm in length.

Electrical connections Before plugging the appliance into the electricity socket, make sure that: • the socket is earthed and complies with all applicable laws; • the socket is able to withstand the maximum power load of the appliance as indicated in the Technical data table (see opposite); • the power supply voltage falls within the values indicated in the Technical data table (see opposite); • the socket is compatible with the plug of the washing machine. If this is not the case, replace the socket or the plug. ! The washing machine must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain, storms and other weather conditions. ! When the washing machine has been installed, the electricity socket must be within easy reach. 40 cm wide Dimensions 85 cm high 60 cm deep Capacity from 1 to 7 kg Please refer to the technical Electric connections data plate fixed to the machine. Maximum pressure 1 MPa Water (10 bar) minimum pressure connections 0.05 MPa (0.5 bar) drum capacity 42 litres Spin speed Test wash cycles in accordance with directives 1061/2010 and 1015/2010 up to 1400 rpm Programme (1° press of the button): Cotton standard 60°C; Programme (2° press of the button): Cotton standard 40°C. This appliance is compliant with the following European Community Directives: - 2004/108/CE (Electromagnetic Compatibility) - 2006/95/CE (Low Voltage) - 2012/19/EU 3 Care and maintenance GB Cutting off the water and electricity supplies • Turn off the water tap after every wash cycle.

This will limit wear on the hydraulic system inside the washing machine and help to prevent leaks. □ Unplug the washing machine when cleaning it and during all maintenance work. to access the pre-chamber: 1. Using a screwdriver, remove the cover panel on the lower front part of the washing machine (see figure); 2. Unscrew the lid by rotating it anti-clockwise (see figure): a little water may trickle out.

This is perfectly normal; 3. clean the inside thoroughly; 4. Screw the lid back on; 5. Reposition the panel, making sure the hooks are securely in place before you push it onto the appliance. Cleaning the washing machine The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water.

do not use solvents or abrasives. Caring for the door and drum of your appliance • Always leave the porthole door ajar in order to prevent unpleasant odours from forming. Cleaning the pump The washing machine is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber which protects the pump, situated in its bottom part. ! Make sure the wash cycle has finished and unplug the appliance. Checking the water inlet hose Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open. How to clean the detergent dispenser Disassembly: Press lightly on the large button on the front of the detergent dispenser and pull it upwards (fig. 3) using an old toothbrush and, once the pair of siphons inserted in the top of compartments 1 and 2 (fig. 4) have been pulled out, check whether the same are not clogged and then rinse them.

Reassembly: Do not forget to reinsert the pair of siphons into the special housings and then to replace the dispenser into its seat, clicking it into place (fig. 4). This washing machine was designed and constructed in accordance with international safety regulations. The following information is provided for safety reasons and must therefore be read carefully. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. GB General safety • This appliance was designed for domestic use only. □ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



[You're reading an excerpt. Click here to read official HOTPOINT ECOT7D 1492 EU user guide](http://yourpdfguides.com/dref/5117133)  
<http://yourpdfguides.com/dref/5117133>



The actual washing temperature may differ from the indicated value. 2) Test wash cycle in compliance with directive 1061/2010: set wash cycle (2° press of the button) with a temperature of 40°C. This cycle is designed for cotton loads with a normal soil level and is the most efficient in terms of both electricity and water consumption; it should be used for garments which can be washed at 40°C. The actual washing temperature may differ from the indicated value. For all Test Institutes: 2) Long wash cycle for cottons: set wash cycle (2° press of the button) with a temperature of 40°C. 3) Synthetic program along: set wash cycle (1° press of the button) with a temperature of 40°C.

**Wash functions Prewash** If this function is selected, the pre-wash cycle will run; this is useful for removing stubborn stains. : put the detergent in the relevant compartment. ! It cannot be used with the , , , , , programmes. **Extra rinse** By selecting this option, the efficiency of the rinse is increased and optimal detergent removal is guaranteed. It cannot be used in conjunction with the , Spin, Pump out, programmes.

**Easy iron** By selecting this function, the wash and spin cycles will be modified in order to reduce the formation of creases. The wash cycles ends with the laundry being left to soak in the machine; the EASY IRON and START/PAUSE indicator lights will flash (orange) and the text "STOP WITH WATER" will appear on the display. To drain the water so that the laundry may be removed, press the START/PAUSE button or the EASY IRON button. ! It may not be used with the , , , programmes. **Fast wash** Reduces the duration of the wash cycle, while making it possible to save water and electricity.

! It cannot be used with the Mix 15, , , , programmes. **Eco Wash** The Eco Wash function saves energy by not heating the water used to wash your laundry – an advantage both to the environment and to your energy bill. Instead, intensified wash action and water optimisation ensure great wash results in the same average time of a standard cycle. For the best washing results we recommend the usage of a liquid detergent. ! It cannot be used with the Mix 15, , , , programmes.

**9 Detergents and laundry GB Detergent dispenser drawer** Good washing results also depend on the correct dose of detergent: adding too much detergent won't necessarily make for a more efficient wash, and may in fact cause build up on the interior of your appliance and even pollute the environment.

How much does your laundry weigh? 1 sheet 400-500 g 1 pillow case 150-200 g 1 tablecloth 400-500 g 1 bathrobe 900-1200 g 1 towel 150-250 g ! Do not use hand washing detergents because these create too much foam. **Special wash cycles Cotton Standard 20°:** (programme ) ideal for heavily soiled cotton loads. The effective performance levels achieved at cold temperatures, which are comparable to washing at 40°, are guaranteed by a mechanical action which operates at varying speed, with repeated and frequent peaks. **Mix 30°:** this wash cycle was designed to wash lightly soiled garments quickly: it lasts just 30 minutes and therefore saves both energy and time.

By selecting this wash cycle ( at 30°C), it is possible to wash different fabrics together (except for wool and silk items), with a maximum load of 3 kg. **Mix 15°:** this wash cycle was designed to wash lightly soiled garments quickly: it lasts just 15 minutes and therefore saves both energy and time. By selecting this wash cycle ( at 30°C), it is possible to wash different fabrics together (except for wool and silk items), with a maximum load of 1.5 kg. **Baby cycle:** this wash cycle can be used to remove the soiling typically caused by babies, while ensuring that all detergent is removed from nappies in order to prevent the delicate skin of babies from suffering allergies. The cycle has been designed to reduce the amount of bacteria by using a greater quantity of water and optimising the effect of special disinfecting additives added to the detergent. At the end of the wash cycle, the machine will slowly rotate the drum to prevent the formation of creases; to end the cycle press the START/PAUSE button. **Silk:** use special wash cycle to wash all silk garments. We recommend the use of special detergent which has been designed to wash delicate clothes. **Wool:** The wool wash cycle on this Hotpoint-Ariston machine has been tested and approved by The Woolmark Company for washing wool garments labelled as hand washable provided that the garments are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine.

Hotpoint-Ariston is the first washing machine brand to be approved by The Woolmark Company for Apparel Care- Platinum for its washing performance and consumption of energy and water. ! Use powder detergent for white cotton garments, for prewashing, and for washing at temperatures over 60°C. ! Follow the instructions given on the detergent packaging. Open up the detergent dispenser and pour in the detergent and fabric softener, as follows. **Compartment 1:** Detergent for pre-wash **compartment 2:** Detergent for the wash cycle (powder or liquid) It is recommended that you place liquid detergent directly into the compartment using the appropriate dosing cup.

**compartment 3:** Additives (softener , etc. ) When pouring the softener in compartment 3, avoid exceeding the "max" level indicated. @@@@ For cleaning instructions, see "Care and maintenance". **Compartment 4:** Do not pour detergent into this compartment. **Preparing the laundry** • Divide the laundry according to: - the type of fabric/the symbol on the label - the colours: separate coloured garments from whites.

• Empty all garment pockets and check the buttons. □ Do not exceed the values listed in the "Table of wash cycles", which refer to the weight of the laundry when dry. 10 In UK, Eire, Hong Kong and India the Woolmark trade mark is a Certification trade mark. **troubleshooting** Your washing machine could fail to work. Before contacting the Technical Assistance Centre (see "Assistance"), make sure that the problem cannot be not solved easily using the following list. **gB Problem:** The washing machine does not switch on. The wash cycle does not start. Possible causes / Solutions: • The appliance is not plugged into the socket fully, or is not making contact. □ There is no power in the house. □ The water inlet hose is not connected to the tap.

□ The pressure is too low. • The START/PAUSE button has not been pressed. □ The drain hose is not fitted at a height between 65 and 100 cm from the floor (see "Installation"). □ The free end of the hose is under water (see "Installation"). □ The wall drainage system is not fitted with a breather pipe. If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Assistance Service.



[You're reading an excerpt. Click here to read official HOTPOINT ECOT7D 1492 EU user guide](http://yourpdfguides.com/dref/5117133)  
<http://yourpdfguides.com/dref/5117133>

*If the dwelling is on one of the upper floors of a building, there may be problems relating to water drainage, causing the washing machine to fill with water and drain continuously. Special anti-draining valves are available in shops and help to avoid this inconvenience. □ The wash cycle does not include draining: some wash cycles require the drain phase to be started manually (see “Wash cycles and functions”). □ The EASY IRON function has been activated: To complete the wash cycle, press the START/PAUSE button (see “Wash cycles and functions”).*

*□ The drum was not unlocked correctly during installation (see “Installation”). □ Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service. □ The detergent is not suitable for machine washing (it should display the text “for washing machines” or “hand and machine wash”; or the like). • Too much detergent was used.*

*The washing machine does not take in water (the text “NO WATER, CHECK SUPPLY” appears on the display). The washing machine continuously takes in and drains water. The washing machine does not drain or spin. The washing machine vibrates a lot during the spin cycle. the washing machine leaks.*

*The machine is locked and the display flashes, indicating an error code (e. There is too much foam. 11 Service GB Before calling for Assistance: • Check whether you can solve the problem alone (see “Troubleshooting”); • Restart the programme to check whether the problem has been solved; • If this is not the case, contact an authorised Technical Assistance Centre using the telephone number provided on the guarantee certificate. ! Always request the assistance of authorised technicians. Have the following information to hand: • the type of problem; • the appliance model (Mod. ); • the serial number (S/N). This information can be found on the data plate situated on the rear of the washing machine. .*



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[ECOT7D 1492 EU user guide](#)

<http://yourpdfguides.com/dref/5117133>