



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT ELTF 11M121 C EU. You'll find the answers to all your questions on the HOTPOINT ELTF 11M121 C EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT ELTF 11M121 C EU
User guide HOTPOINT ELTF 11M121 C EU
Operating instructions HOTPOINT ELTF 11M121 C EU
Instructions for use HOTPOINT ELTF 11M121 C EU
Instruction manual HOTPOINT ELTF 11M121 C EU

Istruzioni per l'uso

LAVASTOVIGLIE

IT Italiano, 1
EN English, 15
ES Español, 29

ELTF 11M121

Sommario

Precauzioni, consigli e Assistenza, 2-3

Attenzione generale
Smaltimento
Ricambiare e riparare l'ambiente
Assistenza

Installazione, 4-5

Posizionamento e fissaggio
Collegamenti idraulici ed elettrici
Dati tecnici
Avvertenze per il primo lavaggio

Descrizione dell'apparecchio, 6

Vista d'insieme
Pannello comandi

Caricare i cesti, 7-8

Ciclo inferiore
Cestino delle posate
Cesto superiore
Vassoio portaposate
Regolazione cesto superiore

Avvio e utilizzo, 9

Avviare la lavastoviglie
Caricare il detersivo

Programmi, 10

Tabella dei programmi
Ecodesign Regulation

Programmi speciali ed Opzioni, 11

Brillantante e sale rigenerante, 12

Caricare il brillantante
Caricare il sale rigenerante

Manutenzione e cura, 13

Esci l'acqua e corrente elettrica
Pulire la lavastoviglie
Evitare i cattivi odori
Pulire gli iniettori
Pulire il filtro antisciuma
Pulire i filtri
Se ci si assente per lunghi periodi

Anomalie e rimedi, 14



[You're reading an excerpt. Click here to read official HOTPOINT ELTF 11M121 C EU user guide](http://yourpdfguides.com/dref/5062070)
<http://yourpdfguides.com/dref/5062070>

Manual abstract:

@@@This appliance is designed for domestic use or similar applications, for example: - staff kitchen areas in shops, offices and other work environments; - farmhouses; - use by guests in hotels, motels and other residential settings; - bed & breakfasts. a dangerous obstacle. □ Keep detergent and rinse aid out of reach of children. □ The packaging material should not be used as a toy for children. Disposal General safety • The appliance should not be operated by people (including children) with reduced physical, sensory or mental capacities, or by inexperienced people who are not familiar with the product, unless supervision or instructions on how to use it are provided by someone who assumes responsibility for their safety. □ An adult must supervise children at all times to prevent them from playing with the appliance. □ The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use. @@@@□ Do not touch the appliance when barefoot. @@Do not pull on the cable. □ The water supply tap must be shut off and the plug should be removed from the electrical socket before cleaning or maintaining the appliance.

□ If the appliance breaks down, do not under any circumstances touch the internal parts in an attempt to perform the repair work yourself. □ Do not lean or sit on the open door of the appliance: this may cause the appliance to overturn. □ The door should not be left open as it may create • Disposal of packaging material: observe local legislation so that the packaging may be reused. □ The European Directive 2012/19/EU relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the re-using and recycling rate of the materials inside the machine, while preventing potential damage to the environment and public health.

The crossed-out dustbin symbol is marked on all products to remind the owners of their obligations regarding separated waste collection. For further information relating to the correct disposal of household appliances, owners may contact the relevant public authority or the local appliance dealer. Saving energy and respecting the environment Saving water and energy • Only begin a wash cycle when the dishwasher is full. While waiting for the dishwasher to be filled, prevent unpleasant odours using the Soak cycle (see Wash cycles). □ Select a wash cycle that is suited to the type of crockery and to the soil level of the crockery using the Table of wash cycles: - for dishes with a normal soil level use the Eco wash cycle, which ensures low energy/water consumption levels. - If the load is smaller than usual activate the Half Load option* (see Start-up and use). □ If your electricity supply contract gives details of electricity-saving time bands, run wash cycles when electricity prices are lower. The Delayed Start button * (see Start-up and use) helps you organise the wash cycles accordingly. * Only available in selected models. 16 Phosphate-free and chlorine-free detergents containing enzymes • We strongly recommend that you use detergents that do not contain phosphates or chlorine, as these products are harmful to the environment. • Enzymes provide a particularly effective action at temperatures around 50°C. As a result detergents containing enzymes can be used in conjunction with low-temperature wash cycles in order to achieve the same results as a normal 65°C wash cycle. □ To avoid wasting detergent, use the product in appropriate quantities based on the manufacturer's recommendations, the hardness of the water, the soil level and the quantity of crockery to be washed. Even if they are biodegradable, detergents contain substances which may alter the balance of nature. Assistance Before contacting Assistance: • Check whether the problem can be resolved using the Troubleshooting guide (see Troubleshooting).

□ Restart the programme to check whether the problem has ceased to exist. □ If the problem persists, contact the Authorised Technical Assistance Service. Never use the services of unauthorised technicians. Please have the following information to hand: • The type of malfunction. This information can be found on the appliance data plate (see Description of the appliance). EN 17 Installation EN If the appliance must be moved at any time, keep it in an upright position; if absolutely necessary, it may be tilted onto its back. Connecting the water outlet hose Connect the outlet hose (without bending it) to a drain duct with a minimum diameter of 4 cm. The outlet hose must be at a height ranging from 40 to 80 cm from the floor / surface where the dishwasher rests (A). positioning and levelling 1. Remove the appliance from all packaging and check that it has not been damaged during transportation.

If it has been damaged, contact the retailer and do not proceed any further with the installation process. 2. Arrange the dishwasher so that its sides or back panel are in contact with the adjacent cabinets or the wall. This appliance can also be recessed under a single worktop* (see the Assembly Instruction sheet.) 3.

Position the dishwasher on a level sturdy floor. If the floor is uneven, the front feet of the appliance should be adjusted until it reaches a horizontal position. If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating. 4*. To adjust the height of the rear foot, turn the red hexagonal bushing on the lower central part at the front of the dishwasher using a hexagonal spanner with an opening of 8 mm.

Turn the spanner in a clockwise direction to increase the height and in an anticlockwise direction to decrease it (see Building-in Instruction Before connecting the water outlet hose to the sink drain, remove the plastic plug (B). Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance. Some models are also equipped with the supplementary safety device New Acqua Stop*, which guarantees anti-flooding protection even in the event of a supply hose rupture. sheet attached to the documentation.) Connecting the water and electricity supplies Connection to the water and electricity supplies should only be performed by a qualified technician. The dishwasher should not stand on the water hoses or electricity supply cable. The appliance must be connected to the water supply network using new hoses. Do not use old piping. The water inlet and outlet hoses and the electricity supply cable may be positioned towards the right or the left in order to achieve the best possible installation. WARNING: HAZARDOUS VOLTAGE! Under no circumstances should the water inlet hose be cut, as it contains live electrical parts.



[You're reading an excerpt. Click here to read official HOTPOINT ELTF 11M121 C EU user guide](http://yourpdfguides.com/dref/5062070)
<http://yourpdfguides.com/dref/5062070>

Electrical connection Before inserting the plug into the electrical socket, make sure that: • The socket is earthed and complies with current regulations. □ The socket can withstand the maximum load of the appliance, which is indicated on the data plate located on the inside of the door (see Description of the appliance); • The power supply voltage falls within the values indicated on the data plate on the inside of the door. □ The socket is compatible with the plug of the appliance. If this is not the case, ask an authorised technician to replace the plug (see Assistance); do not use extension cables or multiple sockets. Once the appliance has been installed, the power supply cable and the electrical socket should be easily accessible. The cable should not be bent or compressed. If the power supply cable is damaged, it must be replaced by the manufacturer or its Technical Assistance Service in order to prevent all potential hazards (see Assistance.) Connecting the water inlet hose • To a suitable cold water connection point: before attaching the hose, run the water until it is perfectly clear so that any impurities that may be present in the water do not clog the appliance; after performing this operation, screw the inlet hose tightly onto a tap with a 3/4 gas threaded connection. □ To a suitable hot water connection point: your dishwasher may be supplied with hot water from the mains supply (if you have a central heating system with radiators) provided that it does not exceed a temperature of 60°C. Screw the hose to the tap as described for connection to a cold water supply.

If the inlet hose is not long enough, contact a specialist store or an authorised technician (see Assistance).

@@@ (Ecodesign) -97/17/EC (Labelling) -2012/19/EC (WEEE) ECODESIGN REGULATION ECO wash cycle is the standard cycle to which the energy label data refers; this cycle can be used to wash crockery with a normal soil level and is the most efficient in terms of energy and water consumption for this type of crockery. To reduce consumption even further, only run the dishwasher when it is full. Standby consumption: Left-on mode consumption: 5 W – Off mode consumption: 0,5 W Consumption/sectors by creating more space upwards. Adjusting the height of the upper rack In order to make it easier to arrange the crockery, the upper rack may be moved to a higher or lower position. The height of the upper rack should be adjusted WHEN THE RACK IS EMPTY. NEVER raise or lower the rack on one side only. Cutlery tray* Some dishwasher models are fitted with a sliding tray which can be used to hold serving utensils or small cups. For improved washing performance avoid positioning bulky crockery directly below the tray. If the rack is equipped with a Lift-Up device* (see figure), lift it up by holding its sides. To restore the lower position, press the levers (A) at the sides of the rack and follow the rack down. Their decorations are not resistant. □ Parts in synthetic material which do not withstand high temperatures. The colours of glass decorations and aluminium/silver pieces can change and fade during the washing process. Crystal objects) can become opaque after a number of wash cycles too. Tips: • Only use glasses and porcelain guaranteed by the manufacturer as dishwasher safe. • Use a delicate detergent suitable for crockery. □ Collect glasses and cutlery from the dishwasher as soon as the wash cycle is over. 22 Start-up and use Starting the dishwasher Measuring out the detergent A good wash result also depends on the correct amount of detergent being used. Exceeding the stated amount does not result in a more effective wash and increases environmental pollution.

Based on how soiled the items are, the amount can be adjusted to individual cases using powder or liquid detergent. In the case of normally soiled items, use approximately either 35 gr (powder detergent) or 35 ml -functional tablets* (Tabs) EN Wash options If an option is not compatible with the selected wash cycle (see table of wash cycles), the corresponding LED flashes rapidly 3 times and beeps will sound. Zone Wash This option makes it possible to carry out the wash cycle in the selected rack only. Select the wash cycle and then press the ZONE WASH button: the selected rack lights up and the wash cycle starts in the selected rack only. Press the button again to deselect the option. The option is available with the following wash cycles: Intensive and Normal. Select the option and the Intensive cycle to start the POWER ZONE washing. This wash cycle is ideal for very soiled mixed loads, e. g. Pans and saucepans, dishes with heavy encrustation or difficult-to-clean crockery (grater, vegetable mill, dirty cutlery).

The spraying pressure is stronger and the washing temperature higher, thus ensuring optimum handling of stubborn stains. @@@@ cycle duration is longer. @@ 1. @@ up to max. 12h) from the start of the selected wash cycle will be increased.

2. @@@@The wash cycle will start automatically as soon as the door is shut. @@@@ press it again to deselect it. @@If it is pressed again, the option will be deselected. A higher temperature during the final rinsing and a longer drying phase improve the dryness level. The EXTRA DRYING option increases the duration of the wash cycle. 25 Rinse aid and refined salt EN Only use products which have been specifically designed for dishwashers. do not use table/industrial salt or washing-up liquid. Follow the instructions given on the packaging. If using a multi-functional product it is not necessary to add any rinse aid. However, we recommend that you add salt, especially if you live in an area where the water is hard or very hard. (Follow the instructions given on the packaging). If you do not add salt or rinse aid, the LOW SALT* and LOW RINSE AID indicator lights will stay lit. Switch on and off the dishwasher using the ON/OFF button. Press and hold the P button for a few seconds until you hear a beep.

Switch on the dishwasher with the ON/OFF button, the set level appears on the display (the water softening system is set by default to level 3). Adjust the water hardness level with the P button, (1-2-3-4-5* see water hardness table) up to a max. of 5 levels. Press the ON/OFF button to save the adjustment setting. Even if using multi-functional tablets, the salt dispenser should still be filled. Water Hardness Table level 1 2 3 4 5* °dH 0-6 6 - 11 12 - 17 17 - 34 34 - 50 °fH 0 - 10 11 - 20 21 - 30 31 - 60 61 - 90 mmol/l 0-1 1,1 - 2 2,1 - 3 3,1 - 6 6,1 - 9 Average salt dispenser capacity duration** months 7 months 5 months 3 months 2 months 2/3 weeks Measuring out the rinse aid Rinse aid makes it easier for the crockery to dry, as water runs off the surfaces more readily and therefore does not leave streaks or marks. The rinse aid dispenser should be filled: • When the LOW RINSE AID indicator light* on the control panel is illuminated, a reserve supply of rinse aid is still available for 1-2 cycles; For values between 0°f and 10°f, we do not recommend the use of salt.



[You're reading an excerpt. Click here to read official HOTPOINT ELTF 11M121 C EU user guide](http://yourpdfguides.com/dref/5062070)
<http://yourpdfguides.com/dref/5062070>

Open the dispenser "D" by pressing and pulling up the tab on the lid; 2. Carefully introduce the rinse aid as far as the maximum reference notch of the filling space - avoid spilling it. If this happens, clean the spill immediately with a dry cloth.

3. Press the lid down until you hear a click to close it. NEVER pour the rinse aid directly into the appliance tub. Adjusting the amount of rinse aid If you are not completely satisfied with the drying results, you may adjust the quantity of rinse aid used. Switch on and off the dishwasher using the ON/OFF button. Press the P button three times. Press the ON/OFF button, the set level appears on the display (default setting of rinse aid is level 2). Adjust the rinse aid supply level with the P button. Press the ON/OFF button to save the adjustment setting. The rinse aid level can be set to ZERO, in such a case the rinse aid will not be supplied and the low rinse aid indicator light in case of running out.

A maximum of 4 levels can be set according to the dishwasher model. If there are streaks on the crockery, set to a low number (1-2). • In case of drops of water or limescale marks, set to a high I number number (3-4). In order to obtain the best possible results from a wash cycle, make sure that the salt dispenser is never empty. Refined salt removes limescale from the water, thus avoiding the formation of deposits on crockery. The salt dispenser is located in the lower part of the dishwasher (see Description) and should be filled: • When the green float* cannot be seen by simply looking at the cap of the salt dispenser; • When the LOW RINSE AID indicator light on the control panel is illuminated *; 1. Remove the lower rack and unscrew the cap (anticlockwise).

2. The first time you do this: fill the water tank right up to its edge. 3.

Position the funnel* (see figure) and fill the salt dispenser up to the edge (approximately 1 kg). It is normal for a little water to leak out. 4. Remove the funnel* and wipe any salt residues away from the opening; rinse the cap under running water and then screw it on, the head facing downwards so as to let the water flow out of the four slots (star-shaped arrangement) in the lower part of the cap (cap with green float*). It is advisable to perform this procedure every time you add salt to the dispenser. Make sure the cap is screwed on tightly so that no detergent can get into the container during the wash cycle (this could damage the water softener beyond repair). When necessary, measure out the salt before a wash cycle so that any saline solution which has leaked out of the salt dispenser is removed. Setting the water hardness Every dishwasher is equipped with a water softener which, by using refined salt designed especially for this type of appliance, supplies water without limescale which is then used to wash the crockery. This dishwasher offers a setting which helps to reduce pollution and optimises washing performance in accordance with the water hardness level in your area. This information can be obtained from your local water supplier.

* Only available in selected models. 26 Care and maintenance Shutting off the water and electricity supplies • Turn off the water tap after every wash cycle to avoid leaks. Always unplug the appliance when cleaning it and when performing maintenance work. The external surfaces of the machine and the control panel can be cleaned using a non-abrasive cloth which has been dampened with water. do not use solvents or abrasive products.

@@@ clean the filters regularly. @@ After several washes, check the filter assembly and if necessary clean it thoroughly under running water, using a non-metallic brush and following the instructions below: 1. Turn the cylindrical filter C in an anti-clockwise direction and pull it out (fig. Remove the cup filter B by exerting a slight pressure on the side flaps (fig. Inspect the trap and remove any food residues.

EN Cleaning the dishwasher • Always keep the door of the appliance ajar in order to avoid moisture from forming and being trapped inside the machine. @@@@ The two sprayer arms may both be removed. To remove the upper sprayer arm, turn the plastic locking ring in an anti-clockwise direction. The upper sprayer arm should be replaced so that the side with the greater number of holes is facing upwards. Cleaning the sprayer arms The lower sprayer arm can be removed by pressing on the side tabs and pulling it upwards. After cleaning the filters, re-place the filter assembly and fix it in position correctly; this is essential for maintaining the efficient operation of the dishwasher. Leaving the machine unused for extended periods If the water hoses are new or have not been used for an extended period of time, let the water run to make sure it is clear and free of impurities before performing the necessary connections. If this precaution is not taken, the water inlet could become blocked and damage the dishwasher. Clean the water inlet filter at the tap outlet regularly. - Turn off the water tap.

- Unscrew the end of the water inlet hose, remove the filter and clean it carefully under running water. - Re-place the filter and screw the water hose back into position. Cleaning the water inlet filter* • Disconnect the appliance from the electricity supply and shut off the water tap. Leave the door of the appliance ajar. When you return, run a wash cycle when the dishwasher is empty. * Only available in selected models. 27 Troubleshooting EN Whenever the appliance fails to work, check for a solution from the following list before calling for Assistance. Problem: The dishwasher does not start or cannot be controlled. the door won't close. No water drains out from the dishwasher.

Possible causes / Solutions: • Switch off the appliance by pressing the ON/OFF button, switch it back on after approximately 5 one minute and reset the program. • The appliance has not been plugged in properly. The dishwasher door has not been shut properly. • The lock was released. Strongly push the door until a "clacking" noise is heard.

The dishes are rattling against each other or against the sprayer arms. Excessive foam presence: the detergent has not been measured out correctly or it is not E suitable for use in dishwashers. (see Start-up and use). The level of the refined salt is low or the dosage setting is not suited to the hardness of the T water (see Rinse aid and salt). The lid on the salt dispenser is not closed properly.

The rinse aid has been used up or the dosage is too low. • The rinse aid dosage is too high. A wash cycle without a drying programme has been selected. The rinse aid has been used up or the dosage is too low (see Rinse aid and salt). The racks are overloaded (see Loading the racks). • The crockery has not been arranged well. The sprayer arms cannot move freely. The wash cycle is too gentle (see Wash cycles). Excessive foam presence: the detergent has not been measured out correctly or it is not E suitable for use in dishwashers.



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[ELTF 11M121 C EU user guide](#)

<http://yourpdfguides.com/dref/5062070>

(see Start-up and use).

□ The lid on the rinse aid compartment has not been shut correctly. • The filter is dirty or blocked (see Care and maintenance). □ The refined salt level is low (see Rinse aid and salt). □ Turn on the tap and the appliance will start after a few minutes. □ □ he appliance lock has been activated because no action was taken when the beeps sounded. T □ witch off the machine using the ON/OFF button, turn on the tap and switch the machine back S on after a few seconds by pressing the same button. Re-program the appliance and restart the wash cycle. The dishwasher makes excessive noise. The dishes and glasses are covered in a white film or limescale deposits. The dishes and glasses are streaked or have a bluish tinge.

The crockery has not been dried properly. The dishes are not clean. The dishwasher does not take any water in - Tap shut-off alarm (beeps are heard and H appears for some minutes on the display) (the ON/OFF indicator light flashes and number 6 appears on the display). Eco* Si Inicio diferido – Tabs – Extra Dry Inicio diferido – Tabs – Extra Dry – Zone wash - Short Time Inicio diferido – Tabs – Extra Dry – Zone wash - Short Time Inicio diferido – Tabs Inicio diferido – Tabs – Extra Dry – Short Time 2. .



[You're reading an excerpt. Click here to read official HOTPOINT ELTF 11M121 C EU user guide](http://yourpdfguides.com/dref/5062070)
<http://yourpdfguides.com/dref/5062070>