



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT FK 63J X/HA S. You'll find the answers to all your questions on the HOTPOINT FK 63J X/HA S in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT FK 63J X/HA S  
User guide HOTPOINT FK 63J X/HA S  
Operating instructions HOTPOINT FK 63J X/HA S  
Instructions for use HOTPOINT FK 63J X/HA S  
Instruction manual HOTPOINT FK 63J X/HA S

FK 61 X/HA S  
FK 63J X/HA S  
FK 63/HA S  
FK 63/HA S  
FK 63/HA S  
FK 63C X/HA S  
FK 63C/HA S  
FK 63C/HA S  
70FK 637J X RU/HA  
70FK 637J RU/HA  
70FK 638J X RU/HA  
70FK 638J RU/HA  
70FK 637JC X RU/HA  
70FK 637JC RU/HA  
FK 619J X/HA S  
FK 619J/HA S  
FK 616J/HA S  
FK 63 X/HA S  
FK 736JC X/HA S  
FK 736JC/HA S  
FK 73C/HA S  
UT 63 C/HA S  
UT 63 C/HA S  
FKS 610 X/HA S  
FKS 610/HA S  
FK 637J X/HA S  
FK 637J/HA S  
FK 637/HA S  
FK 61.1 X/HA  
FK 61.1/HA

**IT**  
Italiano

## Istruzioni per l'uso FORNO

Sommario

Istruzioni per l'uso,1  
Avvertenze,2  
Assistenza,4  
Descrizione dell'apparecchio,6  
Descrizione dell'apparecchio,7  
Installazione,9  
Avvio e utilizzo,11  
Programmatore Analogico\*,11  
Il programmatore di cottura elettronico\*,12  
Programmi,13  
Precauzioni e consigli,16  
Manutenzione e cura,16

**GB**  
English

## Operating Instructions OVEN

Contents

Operating Instructions,1  
Warnings,2  
Assistance,4  
Description of the appliance,6  
Description of the appliance,7  
Installation,9  
Start-up and use,20  
Analogue Programmer\*,20  
The electronic programmer\*,21  
Modes,22  
Precautions and tips,25  
Maintenance and care,25

**FR**  
Français

## Mode d'emploi

FOUR

Sommaire

Mode d'emploi,1  
Avertissements,2  
Assistance,4  
Description de l'appareil,6  
Description de l'appareil,7  
Installation,27  
Mise en marche et utilisation,29  
Programmeur analogique\*,29  
Le programmeur électronique\*,30  
Programmes,31  
Précautions et conseils,34  
Nettoyage et entretien,34

**ES**  
Español

## Manual de instrucciones

HORNO

Sumario

Manual de instrucciones,1  
Advertencias,3  
Asistencia,5  
Descripción del aparato,6  
Descripción del aparato,7  
Instalación,36  
Puesta en funcionamiento y uso,38  
Programador Analógico\*,38  
El programador electrónico\*,40  
Programas,40  
Precauciones y consejos,43  
Mantenimiento y cuidados,43

**PT**  
Portugues

## Instruções para a utilização

FORNO

Índice

Instruções para a utilização,1  
Advertências,3  
Assistência,5  
Descrição do aparelho,6  
Descrição do aparelho,8  
Instalação,45  
Início e utilização,47  
Programador Analógico\*,47  
O programador electrónico\*,48  
Programas,49  
Precauções e conselhos,52  
Manutenção e cuidados,52



[You're reading an excerpt. Click here to read official HOTPOINT FK 63J X/HA S user guide](http://yourpdfguides.com/dref/5004484)  
<http://yourpdfguides.com/dref/5004484>

**Manual abstract:**

@ @ Children shall not play with the appliance. @ @ @ Never use steam cleaners or pressure cleaners on the appliance. @ @ Care should be taken to avoid touching heating elements. Children less than 8 et condition qu'ils se rendent compte des dangers encourus. Never use the services of an unauthorised technician. Please have the following information to hand: ? The type of problem encountered. The latter two pieces of information can be found on the data plate located on the appliance. 8 Descrizione dell'apparecchio Descripcin del aparato Vista d'insieme 1 POSIZIONE 1 2 POSIZIONE 2 3 POSIZIONE 3 4 POSIZIONE 4 5 POSIZIONE 5 6 GUIDE di scorrimento dei ripiani 7 Ripiano LECCARDA 8 Ripiano GRIGLIA 9 Pannello di controllo Vista en conjunto 1 POSICIN 1 2 POSICIN 2 3 POSICIN 3 4 POSICIN 4 5 POSICIN 5 6 GUAS de deslizamiento de las bandejas 7 Bandeja GRASERA 8 Bandeja PARRILLA 9 Panel de control Description of the appliance Descrigo do aparelho Overall view 1 2 3 4 5 6 7 8 9 POSITION 1 POSITION 2 POSITION 3 POSITION 4 POSITION 5 GUIDES for the sliding racks DRIPPING PAN GRILL Control panel Vista de conjunto 1 POSIO 1 2 POSIO 2 3 POSIO 3 4 POSIO 4 5 POSIO 5 6 GUIAS de escorrimto das prateleiras 7 Prateleira BANDEJA PINGADEIRA 8 Prateleira GRADE 9 Paine de comandos Description de l'appareil Vue d'ensemble 1 NIVEAU 1 2 NIVEAU 2 3 NIVEAU 3 4 NIVEAU 4 5 NIVEAU 5 6 GLISSIERES de coulissement 7 Support LECHEFRITE 8 Support GRILLE 9 Tableau de bord 9 8 7 6 5 3 1 4 2 9 ?????????? ?? Description of the appliance Control panel 1 SELECTOR knob 2 THERMOSTAT indicator light 3 THERMOSTAT knob 4 TIMER knob\* 5 ELECTRONIC programmer\* 6 ANALOGUE programmer\* 1 2 3 \* Only available in certain models. Please keep this instruction booklet in a safe place for future reference. If the appliance is sold, given away or moved, please make sure the booklet is also passed on to the new owners so that they may benefit from the advice contained within it.

! Please read this instruction manual carefully: it contains important information concerning the safe operation, installation and maintenance of the appliance. Ventilation To ensure adequate ventilation, the back panel of the cabinet must be removed. It is advisable to install the oven so that it rests on two strips of wood, or on a completely flat surface with an opening of at least 45 x 560 mm (see diagrams). Do not let children play with the packaging material; it should be disposed of in accordance with local separated waste collection standards (see Precautions and tips). ! The appliance must be installed by a qualified professional in accordance with the instructions provided.

Incorrect installation may damage property or cause harm to people or animals. Built-in appliances Use an appropriate cabinet to ensure that the appliance operates properly: ? The panels adjacent to the oven must be made of heatresistant material. ? Cabinets with a veneer exterior must be assembled with glues which can withstand temperatures of up to 100C. ? To install the oven under the counter (see diagram) or in a kitchen unit, the cabinet must have the following dimensions: Centring and fixing Secure the appliance to the cabinet: ? Open the oven door. ? Remove the 2 rubber plugs covering the fixing holes on the perimeter frame.

? Fix the oven to the cabinet using the 2 wood screws. All parts which ensure the safe operation of the appliance must not be removable without the aid of a tool. The appliance must not come into contact with electrical parts once it has been installed. The indications for consumption given on the data plate have been calculated for this type of installation. M Electrical connection Ovens equipped with a three-pole power supply cable are designed to operate with alternating current at the voltage and frequency indicated on the data plate located on the appliance (see below). fitting the power supply cable 1. Open the terminal board by inserting a screwdriver into the side tabs of the cover. Use the screwdriver as a lever by pushing it down to open the cover (see diagram). 2. Install the power supply cable by loosening the cable clamp screw and the three wire contact screws L-N.

Connect the wires to the corresponding terminals: the Blue wire to the terminal marked (N), the Brown wire to the terminal marked (L) and the Yellow/Green wire to the terminal marked (see diagram). ? The socket is compatible with the plug of the appliance. If the socket is incompatible with the plug, ask an authorised technician to replace it. Once the appliance has been installed, the power supply cable and the electrical socket must be easily accessible. ! The cable must not be bent or compressed. ! The cable must be checked regularly and replaced by authorised technicians only (see Assistance). ! The manufacturer declines any liability should these safety measures not be observed. Secure the cable by fastening the clamp screw. 4. Close the cover of the terminal board.

Connecting the supply cable to the mains Install a standardised plug corresponding to the load indicated on the data plate (see table). The appliance must be directly connected to the mains using an omnipolar switch with a minimum contact opening of 3 mm installed between the appliance and the mains. The switch must be suitable for the charge indicated and must comply with current electrical regulations (the earthing wire must not be interrupted by the switch). The supply cable must be positioned so that it does not come into contact with temperatures higher than 50C at any point (the back panel of the oven, for example). ! The installer must ensure that the correct electrical connection has been performed and that it is fully compliant with safety regulations.

Before connecting the appliance to the power supply, make sure that ? The appliance is earthed and the plug is compliant with the law. ? The socket can withstand the maximum power of the appliance, which is indicated on the data plate. ? The voltage is in the range between the values indicated on the data plate. directive 2002/40/EC on the label of electric ovens. Standard EN 50304 ENERGY LABEL Energy consumption for Natural convection ? heating mode: Traditional mode Declared energy consumption for Forced convection Class ? heating mode: Baking This appliance conforms to the following European Economic Community directives: 2006/95/EEC dated 12/12/06 (Low Voltage) and subsequent amendments ? 2004/108/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent amendments 93/68/EEC dated 22/07/93 and subsequent amendments.

2002/96/EC and subsequent amendments. - 1275/2008 standby/off mode \* Only for models with drawn rails. \*\* Only for models with wire rails. 23 GB Start-up and use ! When inserting the shelf make sure the backstop is at the rear of the cavity (see image). Concealed handle Some models have a concealed handle built into the oven door. Simply press lightly and the push/push opening will improve your grip when opening and closing the oven.



[You're reading an excerpt. Click here to read official HOTPOINT FK](http://yourpdfguides.com/dref/5004484)

[63J X/HA S user guide](http://yourpdfguides.com/dref/5004484)

<http://yourpdfguides.com/dref/5004484>

When you have finished using it, close it again by applying light pressure. ! The first time you use your appliance, heat the empty oven with its door closed at its maximum temperature for at least half an hour. Make sure that the room is well ventilated before switching the oven off and opening the oven door. The appliance may emit a slightly unpleasant odour caused by protective substances used during the manufacturing process burning away.

Some models are equipped with a system of hinges which allows the door to close slowly, without the user having to follow the movement through with his/her hand. To use the system correctly, before closing the door: ? Open the door fully. ? Do not force the closing movement manually. analogue Programmer\* START OF COOKING icon END OF COOKING icon Starting the oven 1. Select the desired cooking mode by turning the SELECTOR knob. 2. Select the desired temperature using the THERMOSTAT knob. A list detailing cooking modes and suggested cooking temperatures can be found in the Cooking advice table (see Cooking modes). 3. The THERMOSTAT indicator light indicates that the oven is heating up to the temperature set.

4. During cooking it is always possible to: - change the cooking mode by turning the SELECTOR knob; - adjust the temperature by turning the THERMOSTAT knob; - stop cooking by turning the SELECTOR knob to the ?0? position. ! Never put objects directly on the bottom of the oven; this will prevent the enamel coating from being damaged. ! Always place cookware on the rack(s) provided. Cooling ventilation In order to cool down the external temperature of the oven, a cooling fan blows a stream of air between the control panel and the oven door, as well as towards the bottom of the oven door. ! Once cooking has been completed, the cooling fan continues to operate until the oven has cooled down sufficiently. Oven light When selecting with the SELECTOR knob the oven light goes on. All settings are only possible if the oven is connected to the electricity mains. If the power supply fails for longer than 10 seconds, the programmer stops: when power is restored, the CLOCK icon flashes to indicate that there has been a powercut and that the time needs to be adjusted again. If the powercut occurs during a set cooking programme, the programmed time begins again from the point at which it was stopped (e.g. If a cooking duration of 1 hour is programmed and a powercut lasting 30 minutes takes place, the programme will finish after 1 hour and 30 minutes). In this case too, the CLOCK icon flashes and the time will need to be reset. MANUAL COOKING If no programming has been activated, the oven can be operated manually, using the SELECTOR and THERMOSTAT knobs. setting the minute minder ! This function does not interrupt cooking and does not affect the oven; it is simply used to activate the buzzer when the set amount of time has elapsed. The minute minder can only be used when no set programming is underway. To activate the minute minder, briefly press the knob 3 times until the MINUTE MINDER icon begins to flash. The minute minder is set in exactly the same way as the cooking end time (see corresponding paragraph). \* Only available in certain models. @@@@ Select the desired cooking mode using the SELECTOR knob.

@@@@ Turn the SELECTOR knob to the ?0? position. ? For example: it is 9:00 and the cooking end time is set to 10:15. @@ Programming a cooking considerable amount of heat, particularly from the element at the bottom. @@@@ Always cook in this mode with the oven door closed.

@@@@ Always cook in this mode with the oven door closed. @@@@ on 3 shelves simultaneously. programming cooking ! A cooking mode must be selected before programming can take place. programming the cooking duration 1. @@ 2. Use the ? ? and ? ? buttons to set the desired duration; if you press and hold either button, the display will scroll through the values more quickly, making it quicker and easier to set the value.

3. Wait for 10 seconds or press the button again to finalise the setting. 4. When the set time has elapsed, the text END appears on the DISPLAY, the oven will stop cooking and a buzzer sounds. And a time of 1 hour and 15 minutes is programmed.

Setting the end time for a cooking mode ! A cooking duration must be set before the cooking end time can be scheduled. 1. Follow steps 1 to 3 to set the duration as detailed above. 2. Next, press the button until the icon and the four digits on the DISPLAY begin to flash.

3. Use the ? ? and ? ? buttons to adjust the cooking end time; if you press and hold either button, the display will scroll through the values more quickly, making it quicker and easier to set the desired value. 4. Wait for 10 seconds or press the button again to finalise the setting. 5. When the set time has elapsed, the text END appears on the DISPLAY, the oven will stop cooking and a buzzer sounds. press any button to stop it. Programming has been set when the and buttons are illuminated. The DISPLAY shows the cooking end time and the cooking duration alternately. Cancelling a programme To cancel a programme: ? press the button until the icon corresponding to the setting you wish to cancel and the digits on the display are no longer flashing.

Press the ? ? button until the digits 00:00 appear on the display. ? Press and hold the ? ? and ? ? buttons; this will cancel all the settings selected previously, including timer settings. Place the rotisserie support in position 3 and insert the spit in the hole provided on the back panel of the oven. 3. Start the rotisserie function by selecting the or modes; GB Practical cooking advice ! Do not place racks in position 1 or 5 during fan-assisted cooking. In the GRILL and GRATIN cooking modes, place the dripping pan in position 1 to collect cooking residues (sauce and/or grease). MULTILEVEL ? Use positions 2 and 4, placing the food which requires more heat on the rack in position 2. ? Place the dripping pan on the bottom and the rack on top. gRILL ? Place the rack in position 3 or 4. Make sure the food is in the centre of the rack.

? We recommend that the power level is set to maximum. The top heating element is regulated by a thermostat and may not always operate constantly. For a crispy crust, do not use the dripping pan as this extends the total cooking duration and prevents the crust from forming. ? If the pizza has a lot of toppings, we recommend adding the mozzarella cheese to the top of the pizza halfway through the cooking process. \* Only available in certain models.

27 GB Cooking advice table Modes Foods Duck Roast veal or beef Roast pork Biscuits (shortcrust pastry) Tarts Pizza (on 2 racks) Lasagne Lamb Roast chicken + potatoes Mackerel Sponge cake made with yoghurt Cream puffs (on 2 racks) Biscuits (on 2 racks) Sponge cake (on 1 rack) Sponge cake (on 2 racks) Savoury pies Pizza Focaccia bread Sole Squid and prawn kebabs Cod fillet Grilled vegetables Veal steak Cutlets Hamburgers Mackerel Toast With rotisserie spit (where present) Spit-roast veal Spit-roast chicken Spit-roast lamb Grilled chicken Cuttlefish Gratin With rotisserie spit (where present) Spit-roast veal Spit-roast lamb Chicken (on the spit) + potatoes (on the dripping pan) Tarts Fruit cakes Sponge cake made with yoghurt Sponge cake Stuffed pancakes (on 2 racks) Small cakes (on 2 racks) Cheese puffs (on 2 racks) Cream puffs (on 3 racks) Biscuits (on 3 racks) Meringues (on 3 racks) Weight (in kg) 1 1 1 1 1 1 1 1+1 1 1 0.



[You're reading an excerpt. Click here to read official HOTPOINT FK 63J X/HA S user guide](http://yourpdfguides.com/dref/5004484)  
<http://yourpdfguides.com/dref/5004484>

The cooking times listed above are intended as guidelines only and may be modified according to personal tastes. 28 Precautions and tips ! This appliance has been designed and manufactured in compliance with international safety standards. The following warnings are provided for safety reasons and must be read carefully. Disposal General safety ? The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use. ? The appliance must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the appliance exposed to rain and storms. ? When moving or positioning the appliance, always use the handles provided on the sides of the oven. ? Do not touch the appliance while barefoot or with wet or damp hands and feet. ? The appliance must be used by adults only for the preparation of food, in accordance with the instructions provided in this booklet. Any other use of the appliance (e. g. For heating the room) constitutes improper use and is dangerous. The manufacturer may not be held responsible for any damage caused as a result of improper, incorrect and unreasonable use of the appliance. ? Do not touch the heating elements or certain parts of the oven door when the appliance is in use; these parts become extremely hot.

Keep children well away from the appliance. ? Make sure that the power supply cables of other electrical appliances do not come into contact with the hot parts of the oven. ? The ventilation and heat dispersal openings must never be obstructed. ? Always grip the oven door handle in the centre: the ends may be hot. ? Always use oven gloves when placing cookware in the oven or when removing it. ? Do not use aluminium foil to line the bottom of the oven. ? Do not place flammable materials in the oven: if the appliance is switched on accidentally, the materials could catch fire. g. ? When unplugging the appliance, always pull the plug from the mains socket; do not pull on the cable. ? Do not perform any cleaning or maintenance work without having disconnected the appliance from the electricity mains.

? If the event of malfunctions, under no circumstances should you attempt to perform the repairs yourself. contact an authorised Service Centre (see Assistance). ? Do not rest objects on the open oven door. ? Do not let children play with the appliance. ? The appliance should not be operated by people (including children) with reduced physical, sensory or mental capacities, by inexperienced individuals or by anyone who is not familiar with the product. These individuals should, at the very least, be supervised by someone who assumes responsibility for their safety or receive preliminary instructions relating to the operation of the appliance. ? The appliance is not intended to be operated by means of an external timer or separate remote-control system. ? When disposing of packaging material: observe local legislation so that the packaging may be reused. ? The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out ?wheeled bin? symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. @@@@? The stainless steel or enamel-coated external parts and the rubber seals may be cleaned using a sponge that has been soaked in lukewarm water and neutral soap. Use specialised products for the removal of stubborn stains. After cleaning, rinse and dry thoroughly. do not use abrasive powders or corrosive substances. ? The inside of the oven should ideally be cleaned after each use, while it is still lukewarm. Use hot water and detergent, then rinse well and dry with a soft cloth. do not use abrasive products. ? All accessories - with the exception of the sliding racks - can be washed like everyday crockery, and are even dishwasher safe.

! Never use steam cleaners or pressure cleaners on the appliance. Cleaning the oven door Clean the glass part of the oven door using a sponge and a non-abrasive cleaning product, then dry thoroughly with a soft cloth. Do not use rough abrasive material or sharp metal scrapers as these could scratch the surface and cause the glass to crack. 29 GB For more thorough cleaning purposes, the oven door may be removed: 1. Use a screwdriver to lift up and turn the small levers F located on the two hinges (see diagram). sliding rack kit assembly To assemble the sliding racks: 1. Remove the two frames, lifting them away from the spacers A (see figure). a F 3. Grip the door on the two outer sides and close it approximately half way. Pull the door towards you, lifting it out of its slot (see diagram).

To replace the door, reverse this sequence. left guide rail Right guide rail B o Dire f e ct io n ra ct io n 2. Choose which shelf to use with the sliding rack. Paying attention to the direction in which the sliding rack is to be extracted, position joint B and then joint C on the frame. Inspecting the seals Check the door seals around the oven regularly.

If the seals are damaged, please contact your nearest Service Centre (see Assistance). We recommend that the oven is not used until the seals have been replaced. Secure the two frames with the guide rails using the holes provided on the oven walls (see diagram). The holes for the left frame are situated at the top, while the holes for the right frame are at the bottom. 4.

Finally, fit the frames on the spacers A. ! Do not place the sliding racks in position 5. Side and rear catalytic liners\* These are panels coated with a special enamel, which is able to absorb the fat released by food as it cooks. This enamel is quite strong, so that the various accessories (racks, dripping pans, etc. ) can slide along them without damaging them. White marks may appear on the surfaces; these are not a cause for concern. Nevertheless, the following should be avoided: - scraping the enamel with sharp objects (a knife, for example); - using detergents or abrasive materials. .



[You're reading an excerpt. Click here to read official HOTPOINT FK](http://yourpdfguides.com/dref/5004484)

[63J X/HA S user guide](http://yourpdfguides.com/dref/5004484)

<http://yourpdfguides.com/dref/5004484>