



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT HNP 9.8 AM X. You'll find the answers to all your questions on the HOTPOINT HNP 9.8 AM X in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

- User manual HOTPOINT HNP 9.8 AM X
- User guide HOTPOINT HNP 9.8 AM X
- Operating instructions HOTPOINT HNP 9.8 AM X
- Instructions for use HOTPOINT HNP 9.8 AM X
- Instruction manual HOTPOINT HNP 9.8 AM X

**HNP 9.8 AM X**  
**HNP 9.5 CM X**  
**HNP 9.5 CM X**

**ES** Español

**Manual de instrucciones**  
**CAMPANA**

**Sumario**

Manual de instrucciones,1  
Advertencias,10  
Asistencia,16  
Instalación,25  
Mandos PYRAMID,26  
Mantenimiento y cuidados,27  
Anomalías y soluciones,28

**PT** Portuges

**Instruções para a utilização**  
**EXAUSTOR**

**Índice**

Instruções para a utilização,1  
Advertências,12  
Assistência,16  
Instalação,29  
Comandos PYRAMID,30  
Manutenção e cuidados,31  
Anomalias e soluções,32

**GB** English

**Operating Instructions**  
**COOKER HOOD**

**Contents**

Operating Instructions,1  
Warnings,8  
Assistance,16  
Installation,17  
PYRAMID controls,18  
Maintenance and care,19  
Troubles heating,20

**FR** Français

**Mode d'emploi**  
**HOTTE DE CUISINE**

**Sommaire**

Mode d'emploi,1  
Avertissements,9  
Assistance,16  
Installation,21  
Commandes PYRAMID,22  
Entretien et soin,23  
Anomalies et remèdes,24

**عربي**

**تعليمات التشغيل**  
**COOKER HOOD**

**المحتويات**

تعليمات التشغيل,1  
تحذيرات,13  
المساعدة,16  
التركيب,36  
PYRAMID عناصر تحكم,35  
الصيانة والعناية,34  
استكشاف المشاكل وحلها,33



[You're reading an excerpt. Click here to read official HOTPOINT HNP 9.8 AM X user guide](http://yourpdfguides.com/dref/5062112)  
<http://yourpdfguides.com/dref/5062112>

**Manual abstract:**

If you sell, transfer or move the unit to another location, make sure to keep the manual with the product. ! Read the instructions carefully - they contain important installation, user and safety information. ! Do not tamper with the electrical or mechanical equipment of the product or its exhaust ducts. General safety information

â€¢ The distance between the cookware support surface on top of the cooking appliance and the lowest part of the cooker hood must be at least: 65 cm if the hood is installed over a gas cooktop 55 cm if the hood is installed over an electric cooktop. If the installation instruction manual for the gas cooking appliance specifies a greater distance, this measurement should be taken into account.

â€¢ The cooker hood comes with anchor plugs which are suitable for use with most walls/ceilings.

â€¢ Caution! â€¢ Always wear work gloves when installing and servicing the unit.

â€¢ Make sure children do not play with the unit.

â€¢ The room must be adequately ventilated if the hood is used at the same time with other equipment burning gas or other fuels.

â€¢ Extracted air must not be conveyed into a duct used for exhausting combustion fumes from gas or other fuel-fired equipment.

â€¢ Observe all regulations in relation to air extraction.

â€¢ NEVER cook food with an open flame under the hood; open flames will damage the filters and may cause fires. never do this.

â€¢ Always supervise frying to make sure the heated oil does not catch fire.

8 â€¢ Strictly observe all local regulations in relation to the technical and safety measures to be employed in fumes extraction.

â€¢ Clean the product frequently, inside and out (AT LEAST ONCE A MONTH, and in observance of the maintenance instruction given in this manual).

â€¢ Failure to observe the hood cleaning and filter cleaning/replacement instructions can result in fires.

â€¢ Caution! â€¢ Never use the services of an unauthorised technician.

â€¢ The installation must be done by a qualified technician.

â€¢ caution! The exhaust duct is not supplied and must be purchased separately.

When routed horizontally, the tube must be angled slightly upwards (around 10°) to enable the air to be conveyed outdoors more easily. If the hood is fitted with charcoal filters, they must first be removed. Filter version The hood purifies the air and returns it to the room. This version of the hood requires installation of an accessory active charcoal filter unit. This version requires an air deflector, a reduction adapter and the charcoal filter/s. The top tube must have its air outlet slots uppermost. GB Electrical hook up The mains voltage must match that given on the ratings label inside the hood itself. If the hood has a power plug, connect the hood to an easily accessible regulatory power socket. If it does not (direct connection to the mains), or the socket is not easily accessible, install a two-pole regulatory switch to enable total disconnection from the mains in case of category III overvoltage, as required by the installation regulations. caution! Always check that the mains cable is hooked up properly and check that it operates correctly before reconnecting the hood to the mains.

â€¢ The manufacturer is not liable for any consequences of doing so. ! Use the shortest duct required to achieve the purpose. ! Use a duct with as few bends as possible ! Avoid suddenly changing the diameter of the duct. ! The duct must have as smooth an inner surface as possible. ! The duct must be made of regulatory material. !

! T2 Speed 1 Pressing the button sets the hood to speed 1. T3 Speed 2 Pressing the button sets the hood to speed 2. T4 Speed 3 Pressing the button sets the hood to speed 3. T5 Booster Pressing the button sets the hood to high speed.

â€¢ T2 Speed 1 Pressing the button sets the hood to speed 1.

T3 Speed 2 Pressing the button sets the hood to speed 2. T4 Speed 3 Pressing the button sets the hood to speed 3.

â€¢ To reset the filter counter: Hold down T4 for three seconds while the hood is on. The warning led flashes three times, then returns to its normal mode

18 Models with soft button keypad and display HNP 6. 5S CD X/HA HPS 60 IX/HA B To reset the filter counter: Hold down T4 for three seconds while the hood is on.

â€¢ Pressing the button while the hood is in operation turns it OFF. T2 Speed Pressing the button returns the hood to the previous speed. T3 Speed + Pressing the button returns the hood to the next speed. If the hood is off, pressing these buttons sets speed 1.

â€¢ T5 Timer Pressing this button delays the hood turning off automatically by 5 minutes.

The timer counts down on the display in minutes. The timer can only be set for manual speeds, not for booster mode.

T6 Lights ON/OFF Grease/odour filter warnings The bar at the top left flashes to indicate that the grease filter is saturated. filter (square at bottom right flashing). You can change the type of installation by pressing T4. To quit configuration mode, press T1 once; this switches the unit off and saves the last displayed setting.

Caution! Before cleaning or servicing the unit, disconnect it from the mains by pulling the power plug or disconnecting the main circuit breaker. First cleaning

â€¢ Remove the protective film

â€¢ Clean with a damp sponge and a little neutral soap

â€¢ Rinse off with a damp cloth

â€¢ Dry with a soft cloth; if the hood is stainless steel, dry along the metal's grain

Periodic cleaning The hood must be cleaned frequently (at least as often as you service the grease filter), inside and out. Use a damp cloth and a neutral liquid detergent with lukewarm water. do not use abrasive or corrosive products.

Warning: Failure to observe the hood cleaning and filter cleaning/replacement instructions can result in fires. follow the instructions carefully. The manufacturer is not liable for any damage to the motor or fires caused by incorrect care or failure to follow the above instructions.

â€¢ If both bars are flashing, then both filters are saturated.

â€¢ The latter only applies to the filter version.

â€¢ To extract the grease filter, pull the spring loaded handle.

â€¢ The cartridge must be replaced at least once B every twenty months.

â€¢ Assembly: Fit the active-carbon filter into the suction assembly and rotate it 90° to secure it in place. Replacing the bulbs Disconnect the unit from the mains and remove the grease filter. caution! Make sure the bulbs are cool before touching them.

1. Extract the guard by prising it out with a small flat head screwdriver or something similar. Use only bulbs of the same type (for details, see the technical data in the following manual). Electrical cable If the power cable is damaged, it can be replaced by the manufacturer or h.



[You're reading an excerpt. Click here to read official HOTPOINT HNP 9.8 AM X user guide](http://yourpdfguides.com/dref/5062112)  
<http://yourpdfguides.com/dref/5062112>