



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT L 64 X AUS.1. You'll find the answers to all your questions on the HOTPOINT L 64 X AUS.1 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT L 64 X AUS.1
User guide HOTPOINT L 64 X AUS.1
Operating instructions HOTPOINT L 64 X AUS.1
Instructions for use HOTPOINT L 64 X AUS.1
Instruction manual HOTPOINT L 64 X AUS.1



[You're reading an excerpt. Click here to read official HOTPOINT L 64 X AUS.1 user guide](http://yourpdfguides.com/dref/4689018)
<http://yourpdfguides.com/dref/4689018>

Manual abstract:

That the electricity system complies with the applicable norms; 2. That the water inlet and outlet hoses are connected correctly; 3. That the dishwasher is level on the ground. @@This is where you will find the description of the controls and the internal parts. 3. How to load your dishes (p.3) This page includes useful tips to help you load your dishwasher correctly and make the most of all the available space. 4. How to start your dishwasher (p.4) After loading the dishes, you need to select the right wash cycle and measure out the correct dose of detergent and rinse aid.

Reading these pages will help you through all the wash phases. 9. Special care and maintenance (p.10) Once in a while, once a month, spend a little time on the filter assembly and the sprayer arms. This is where you can learn how.

5. Salt: an important ally (p.7) Using the right salt and in the right quantity will help you keep your dishwasher in top condition, to wash better and to avoid possible damage caused by limescale. 10. Keeping your dishwasher in shape (p.

10) Respect the few rules you will find here, and the result will be an enduring top-shape dishwasher. 6. Advice and suggestions to help you make savings as well (p.7) 11. 12. Technical characteristics (p.2) This is where you will find handy tips on how to wash your dishes better and to help make savings by selecting a wash cycle which best suits the type of load. All your appliances technical data, in accordance with norms and regulations as always. Ariston is still with you after purchase (p.11) 7.

Troubleshooting (p.9) Before calling for a technician, have a look here: a lot of problems can have an immediate solution. If you cant manage to solve it yourself, then call the Ariston helpline and any problem will be solved as quickly as possible. Ariston supports its products by means of after-sales services and assistance, offering you special guarantees, professional assistance as well as quality spare parts and accessories. To find out more, call the Ariston Freefone Number. 8. Safety for you and your family (p.9) Read this chapter carefully, as it will provide you with useful information on the safe installation, maintenance and use of your new appliance. To avoid nasty surprises. ARISTON DISHWASHER - Instructions for installation and use 1 D ISHWASHER Lets open up How is it made? Learn to get to know the parts which make up your dishwasher, you will use it better for it.

E. Upper rack F. Top sprayer arm G. Rack height adjuster H. Lower rack I.

Bottom sprayer arm J. Salt container cap K. Washing filter L. Detergent and rinse aid dispenser your dishwasher together E G F H J I K L Control panel at your service A. ON-OFF Button Press this button to turn the appliance on.

B. ON-OFF Indicator light Indicates that the appliance is turned on C. Door opening handle Use this handle to open the dishwasher door. D. Delayed start select button This button delays the start of the wash cycle you selected by 12, 9, 6 or 3 hours. E. Cycle selection knob Use this knob to select a wash cycle. G. Cycle phase and delayed start indicator lights (pre-wash, wash, rinse, drying) and if you have set a delayed start, these indicate the hours left before the cycle starts. S.

@@60 cm. 60 cm. @@@@@@If the saucepans and frying pans are very dirty, allow them to soak before being washed. To make it easier to load your dishes, pull the racks out. Multisystem racks This dishwasher model is fitted with newer and more modern upper and lower racks and a cutlery basket. They are made to provide greater flexibility in loading dishes, making them more suitable to meet your specific needs. What goes into the lower rack? We recommend you place the most difficult dishes to wash into the lower rack: saucepans, lids, soup dishes and plates, but also: mugs, cups and glasses (see photos for load examples). What goes into the upper rack? Place delicate and lightweight dishes in the upper rack: glasses, tea cups and coffee cups, saucers - but plates too - shallow salad bowls, slightly dirty frying pans and shallow pans. Position light weight dishes in such a way as to avoid their being moved by the spray of water. The appliance can also be equipped with one or two tip-up compartments onto which you can place mugs and cups, as well as long sharp knives and serving cutlery.

After loading the dishes, remember to check that the blades on the sprayer arms can turn freely without hitting against any dishes. How to adjust the top rack. The upper rack can be set in high or low position to enable you to organise your dishes effortlessly. D ISHWASHER Before washing, a few small steps can help you get a better wash and keep your dishwasher for longer. Remove the largest scraps of food left over on your plates, soak saucepans and frying pans with tough incrustations.

After loading your dishes, make sure the blades on the sprayer arm turn well. Do not place glasses and cups on top of one another, and make sure the dishes are not touching. lower rack Load examples upper rack Serving dishes and large lids: place them on the sides of the rack. Saucepans, salad bowls: must always be placed upside down Very deep dishes: place them obliquely, thus allowing water to run down them and cleaning them better Glasses and cups: position them as indicated in the figure. When you only have little cutlery to wash, you can use just half the basket; save space for other crockery or place the other half of the basket in the upper rack instead (see figures A and B).

This basket is equipped with two removable grids: insert the cutlery one by one into the slots; knives and utensils with sharp blades or tips should be positioned with the sharp parts at the bottom. Position all cutlery items so that they don't touch. 1 2 Fig.F 3 4 Open the rail stop flaps and pull the rack out completely. @@Now close the rail stop flaps. @@@@@@Well, it happens to everyone. @@The cycle will start up from where you interrupted it. Finished? @@Turn the knob to Reset in order to reset all the settings. Turn the appliance off to cut off the electricity supply. Turn off the water tap.

Wait a few minutes before unloading the dishes: they are very hot! If you wait a little while, they dry better thanks to the steam. Empty the lower rack first. Theres been a power failure? Have you opened the dishwasher door? @@Everything is under control! Starting the dishwasher First of all. @@Now the appliance is on and awaiting instructions. Selecting the wash cycle. @@@@The dishwasher keeps you informed. @@Here are the symbols corresponding to each cycle phase: pre-wash, wash, rinses, drying. At all times, your dishwasher tells you which cycle phase is under way. Modifying a wash cycle in progress. But if you have chosen the wrong cycle, not to worry! You can modify the wash cycle in progress, if it has only just started.

Turn the knob anti-clockwise until it reaches the Reset position and, after a few seconds, you will hear 4 beeps and indicator light G will turn off. This is to inform you that all the You decide when it starts.



[You're reading an excerpt. Click here to read official HOTPOINT L 64 X AUS.1 user guide](http://yourpdfguides.com/dref/4689018)
<http://yourpdfguides.com/dref/4689018>

When you have loaded the dishes, you can choose when to start your dishwasher before setting the wash cycle desired. Press button D to delay the start of the wash cycle by 12, 9, 6 or 3 hours. Each time you press it, you will hear a short beep and the indicator light G corresponding to the selected delay will light up. Now you can select the desired wash cycle and, after you hear the beep, the countdown to the delayed start will begin. 2) on and not flashing beneath the cycle phase symbol: meaning the cycle has started and is in the phase indicated by the symbol. Have you changed your mind? If you change your mind, you can set a shorter time delay: press button D to select it. You need not reset the wash cycle. Make sure the wash cycle has ended before removing the dishes! If you have set a 12 hour delay, for example, once you have selected the wash cycle, the 12 hour indicator light will flash followed by the others in sequence until the set time delay is up.

A quick look at the indicator lights will keep you informed of the countdown progress at all times. Dual function of indicator lights G If on the other hand you want to cancel the delay set and you want the cycle to start immediately, press button D repeatedly until the cycle starts and indicator light G corresponding to the cycle start phase comes on. You can cancel the wash cycle in progress, if it has only just started. 1) flashing to indicate a delayed start: to remind you that you have set a delayed start; When you open the dishwasher door after the wash cycle has just ended or is under way, take care not to scald yourself with the hot steam! 4 ARISTON DISHWASHER - Instructions for installation and use Only use specific dishwasher detergents. Pour the detergent into the dispenser on the inside of the door. Before the wash cycle starts! The detergent Loading the detergent To open lid A, press button B. The detergent should be poured into the two containers up to the rim. Now you can close the lid: press it down until you hear it click. If you prefer to use the detergent in tablet form, then place one inside the container D and close the lid. Detergent and rinse aid B D C D ISHWASHER Useful tips Use the right amount of detergent: if you use too much, you will not get cleaner dishes, but just more environmental pollution.

Keep your dishwasher detergent and rinse aid in a cool, dry place and away from children. 25 gr. 5 gr. It wont close! Check whether there is any detergent residue on the edges of the dispenser. It is due to this residue that the lid wont close. Get rid of it and youll see that it closes. A The rinse aid. This product makes dishes sparkle more as it improves their drying. The rinse aid container is situated on the inside of the appliance door; you should refill it when you see the container is empty by means of indicator light D. In models fitted with the low rinse aid indicator li time).

3. @@It is normal that some water comes out of the container. 4. Screw the cap back in place carefully. When should I load the salt?

@@@@@@Unscrew the salt container cap 2.

@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@The right wash cycle. @@@@@@@@@@@@@@@@@@@@@@@@@@Make sure that it is not inclined more than 2 degrees. If the appliance is level, it will help ensure its correct operation. Cold water connection. @@Do not use a different hose.

In the event of replacements, use original spare parts only. Connect the cold water supply hose to a 3/4 gas threaded connection, placing the small filter provided between the two, taking care to screw it tightly onto the tap (see figure 2). Your dishwasher has arrived After having bought or moved you and indicator lights 2 and 3 (wash and rinses) will flash rapidly. Turn the appliance off at the ON-OFF button, turn on the water tap and wait approximately 20 seconds before turning the appliance back on; the selected wash cycle will start up again. Clogged filter alarm D ISHWASHER and reposition it in its seat as illustrated on page 10. Then turn it back on. The selected wash cycle will start up again. You have checked everything, but the dishwasher still doesnt work and the problem persists? Call an authorised service centre near you and remember to mention: the type of malfunction the model mark (Mod.) and the serial number (S/N.) indicated on the rating plate located on the stainless steel door, to one side.

Your dishwasher may not work or not function properly. In many cases, these are problems which can be solved without having to call for a technician.

@@@@They protect you and your family. @@To avoid nasty surprises. ing the If you have a prob- 11. Once taken out of use, appli1. Dispose of the packaging ma- 5. If the appliance is not operating lem, read this chapter. @@wireanddamagethedoorlock. @@the mains power supply (un2.

After removing the packaging, plug it!). check to make sure your ap- 6. Keep children away from the pliance is intact. @@sional. reach.

3. Your dishwasher must only be 7. @@@@or feet or barefoot. 8. Do not touch the heating ele4.

@@plugs. If the electricity supply 9. @@the correct length and remem- 10. @@disconnect the plug from the wall socket. Then try consultARISTON DISHWASHER - Instructions for installation and use 9 D ISHWASHER Cleaning and special maintenance D Care and maintenance The filter assembly f you want consistent good results from your dishwasher, you need to clean the filter assembly. The food particles are removed from the wash water, allowing it to be recirculated during the cycle, filtered perfectly. For this reason, it is a good idea to remove the larger food particles trapped inside the semi-circular filter A and cup C after each wash; to remove the filter assembly, pull the cup handle upwards. All you need to do is rinse them under running water. The entire filter assembly should be cleaned thoroughly once a month: semi-circular filter A + cup C + cylindrical filter B+ microfilter D. To remove filter B, turn it anticlockwise.

Use a small non-metallic brush for cleaning. Reassemble the filter parts (as sho- Once in a while, once a month, spend a little time on the filter assembly and the sprayer arms. Cleaning the sprayer arms. @@@@@@Position it into its housing and press downwards. The dishwasher is not to be used without filters.

@@When the wash cycle has ended, always remember to turn off the water supply tap and to leave the appliance door ajar. This way, moisture and bad odours will not be trapped inside. Unplug the appliance. Before carrying out any cleaning or maintenance on the dishwasher, always remove the plug from the electricity socket. Do not run risks.

No solvents! No abrasives! To clean the exterior and rubber parts of your appliance, do not use solvents or abrasive cleaning products. Use a cloth dampened with lukewarm soapy water only. If there are any stains on the surface of the appliance interior, use a cloth dampened with water and a little white vinegar, or a cleaning product specifically made for dishwashers. Going on holiday? When you go away for an extended period of time, we recommend you do the following: run a cycle with the dishwasher empty turn off the water inlet tap.



[You're reading an excerpt. Click here to read official HOTPOINT L 64 X AUS.1 user guide](http://yourpdfguides.com/dref/4689018)
<http://yourpdfguides.com/dref/4689018>

leave the appliance door ajar This will help the seals last longer and prevent unpleasant odours from forming inside the appliance.

Moving the appliance. Should the appliance have to be moved, try to keep it in a vertical position. If absolutely necessary, it can be positioned on its back. The seals. @@@@ We are confident you have made a good choice and that your new appliance will give many years of excellent service.

And we're there when you need us. Register your purchase now This will confirm your entitlement to free spare parts for five years, and you could also be lucky enough to recover the cost of your purchase in our quarterly prize draw. Simply complete and return the Registration Form supplied with the appliance documents, using the FREEPOST envelope supplied. Or call the Registration Hotline on 0870 010 4305. Enjoy complete peace of mind. By registering now, you automatically qualify for a full year's guarantee on parts and labour PLUS free functional parts cover for a further 4 years, provided they are genuine

Ariston spare parts fitted by an Ariston Service Engineer. We're as close to you as your telephone For direct access to Genuine Ariston Spare Parts and Accessories, call 0870 558 5850 and speak to our skilled staff who can help you to identify and purchase the item you require. For a Rapid Response to a problem with your appliance, call 0870 607 0805. We're open from Monday to Saturday (8am - 5.30pm weekdays, 9am - 5pm Saturday).

We have our own department of highly trained Ariston service staff. For most calls, our Service Engineer can fix the problem on the first visit. Please have the following details to hand when you ring us: The nature of the problem, the Model Number and the Serial Number. These numbers can be found on the appliance and on the portion of the Registration Card which you retain. ARISTON DISHWASHER - Instructions for installation and use 11 Merloni Elettrodomestici Viale Aristide Merloni 47 - 60044 Fabriano (Italy) Tel +39 0732 6611 Fax +39 0732 662501 www.merloni.com P07/2004 - 195041433.01 - Xerox Business Services - DocuTech .



[You're reading an excerpt. Click here to read official HOTPOINT L 64 X AUS.1 user guide](http://yourpdfguides.com/dref/4689018)
<http://yourpdfguides.com/dref/4689018>