



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LD 6090 EU. You'll find the answers to all your questions on the HOTPOINT LD 6090 EU in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT LD 6090 EU
User guide HOTPOINT LD 6090 EU
Operating instructions HOTPOINT LD 6090 EU
Instructions for use HOTPOINT LD 6090 EU
Instruction manual HOTPOINT LD 6090 EU

Istruzioni per l'uso

LAVASTOVIGLIE

IT Italiano, 1	EN English, 14	FR Français, 26
DE Deutsch, 38	NL Dutch, 50	ES Español, 62

LD 6090

Sommario

Installazione, 2-3

Posizionamento e livellamento
Collegamenti idraulici ed elettrici
Dati tecnici

Descrizione dell'apparecchio, 4

Vista d'insieme
Pannello di controllo

Caricare i cestelli, 5

Cestello inferiore
Cestello delle posate
Cestello superiore

Avvio e utilizzo, 6-7

Avviare la lavastoviglie
Caricare il detersivo
Opzioni di lavaggio*
Demo*

Programmi, 8

Tabella dei programmi

Brillantante e sale rigenerante, 9

Caricare il brillantante
Caricare il sale rigenerante

Manutenzione e cura, 10

Escludere acqua e corrente elettrica
Pulire la lavastoviglie
Evitare i cattivi odori
Pulire gliirroratori
Pulire i filtri
Se ci si assenta per lunghi periodi

Precauzioni e consigli, 11

Sicurezza generale
Smaltimento
Risparmiare e rispettare l'ambiente

Anomalie e rimedi, 12

Assistenza, 13

Assistenza Attiva 7 giorni su 7



[You're reading an excerpt. Click here to read official HOTPOINT LD 6090 EU user guide](http://yourpdfguides.com/dref/4689446)

<http://yourpdfguides.com/dref/4689446>

Manual abstract:

@@ ! @@ ! @@ ! @@ ! To a suitable hot water connection point: your dishwasher may be provided with hot water from the mains supply (if you have a central heating system with radiators) provided that it does not exceed a temperature of 60°C. Screw the hose to the tap as described for connection to a cold water supply. ! If the inlet hose is not long enough, contact a specialist store or an authorised technician (see Assistance). ! The water pressure must be within the values indicated in the Technical data table (see below). ! The hose should not be bent or compressed. Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance. It is very important to check the external hose regularly: if it is a bright red colour, it must be replaced by an authorised technician as soon as possible (see Assistance). eN Positioning and levelling 1. Remove the appliance from all packaging and check that it has not been damaged during transportation. If it has been damaged, contact the retailer and do not proceed any further with the installation process.

2. Check the dishwasher by placing it so that its sides or back panel are in contact with the adjacent cabinets or even with the wall. This appliance can also be recessed under a single worktop (see the Assembly instruction sheet*). 3. Position the dishwasher on a level and sturdy floor.

If the floor is uneven, the front feet of the appliance may be adjusted until it reaches a horizontal position (the angle of inclination must not exceed 2 degrees).

If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating. connecting the water and electricity supplies ! Connection to the water and electricity supplies should only be performed by a qualified technician. ! The dishwasher should not stand on top of the water hoses or the electricity supply cable. @@@@ a ! The Company shall not be held responsible for any incidents that occur if these regulations are not observed.

Advice regarding the first wash cycle After the appliance has been installed, immediately before running the first wash cycle, completely fill the salt dispenser with water and add approximately 2 kg of salt (see Rinse aid and refined salt). The water may overflow: this is normal and is not a cause for concern. It is also normal that the LOW SALT* indicator light continues to flash for a few cycles after the salt has been loaded. Electrical connection Before inserting the plug into the electrical socket, make sure that: the socket is earthed and complies with current regulations; the socket can withstand the maximum load of the appliance, which is indicated on the data plate located on the inside of the door (see Description of the appliance); the power supply voltage falls within the values indicated on the data plate on the inside of the door; the socket is compatible with the plug of the appliance. If this is not the case, ask an authorised technician to replace the plug (see Assistance); do not use extension cables or multiple sockets. ! Once the appliance has been installed, the power supply cable and the electrical socket should be easily accessible. ! The cable should not be bent or compressed. ! The cable should be checked regularly and replaced by authorised technicians only (see Assistance). Before loading the rack, remove all food residue from the crockery, leave saucepans and frying pans with burnt-on residue to soak and empty all remaining liquid from cups and glasses. After loading the appliance, check that the sprayer arms can rotate freely.

If the rack is equipped with the click clack handles* (see figure), pull them upwards or downwards to adjust the height. Lower rack Arrange the more difficult items to wash using the Loading examples as a guide and use the collapsible supports* where needed. Loading examples for the upper rack the Serving dishes and lids: place these at the sides of the rack. the Saucepans and salad bowls: always turn these upside down. the Very deep dishes: position these at an angle. In order to guarantee the best washing and drying performance, the surface of the lower rack is more uneven than that of the upper rack. @ ! @@@@ items made from aluminium, copper, brass, pewter or tin. Items made from plastic that is not heat-resistant.

Silver that is not antique may, however, be washed in the dishwasher using a delicate wash cycle, provided that it does not come into contact with other metals. ! When buying crockery and cutlery we recommend that you check whether it can be washed using the dishwasher.

Adjusting the height of the upper rack In order to make it easier to arrange the crockery, the upper rack may be moved to a higher or lower level. Open the left and right guide rail stops and pull out the rack; position it higher or lower as required, slide it along the guide rails until the front wheels are in place and close the stops (see figure). 1 2 Washing the handles* To wash the upper and lower rack handles: remove the two fastening plugs, lift out the handles and rinse them under running water, then fasten them to the rack using the same plugs. 3 4 * Only available in selected models. ** The number and position may vary.

Press the STANDBY button: the display will light up. Load the racks (see Loading the racks) and shut the door. 5. Select a wash cycle by pressing the SELECT WASH CYCLE button repeatedly until the number corresponding to the desired cycle appears (see Table of Wash Cycles). Start the cycle by pressing the START/RESET button: the machine will emit a confirmation beep.

The WASH CYCLE PHASE indicator lights display the status of the cycle: Pre-wash, Wash, Rinse, or Drying. 8. At the end of the wash cycle, you will hear two short beeps and the word END will appear on the display. 9. Switch off the appliance by pressing the STANDBY button, shut off the water tap and unplug the appliance from the electricity socket. 10. Open the door and wait for a few minutes before removing the crockery inside, in order to avoid burns. Unload the racks, beginning with the lower level. Demo* If dON appears on the display, this means that the appliance is in demonstration mode. To deactivate it, press the START/RESET and STANDBY buttons simultaneously: dOF should appear on the display.

Modifying a wash cycle in progress If a mistake was made during the wash cycle selection process it is possible to change the cycle, provided that it has only just begun: press and hold the START/RESET button for 4 seconds. After one long beep and three short beeps, the WASH CYCLE PHASE indicator light will switch off: Select the new cycle and switch the machine back on by pressing the START/RESET button.



[You're reading an excerpt. Click here to read official HOTPOINT LD](#)

[6090 EU user guide](#)

<http://yourpdfguides.com/dref/4689446>

Adding extra crockery Press the STANDBY button and open the door, taking care to avoid the escaping steam, and place the crockery inside the dishwasher. Press the STANDBY button again: the cycle starts from the point at which it was interrupted. Accidental interruptions If the door is opened during the wash cycle (the text DOOR will appear on the display), or if there is a power cut, the cycle stops. It starts again from the point at which it was interrupted once the door has been shut or the electricity supply is restored. * Only available in selected models. 19 Loading the detergent A successful wash also depends on the correct amount of detergent being used, as recommended by the manufacturer. @@@@ e. @@ 3.

@@@ 1. Press the MODE button: select the DELAYED START symbol. 2. Press the SELECT button to select the desired delay period. 3. Select the wash cycle by pressing the SELECT WASH CYCLE button. 4. @@ 5. @@@@ @@@@ Before selecting the wash cycle: 1. Press the MODE button until the HALF LOAD symbol has been selected.

2. @@ 3. @@ ! @@@@ @@@@ @@@@ @@@@ @@@@ @@@@ 2. @@ If this happens, G clean the spill immediately with a sponge. 3. Screw the lid back on. @@@@ @@@@ ! @@@@ @@@@ @@@@ @@@@ - If using multi-functional tablets (2-in-1, 3-in-1, 4-in-1, etc. @@ * Only available in selected models. @@@@ @@@@ After cleaning check that the filter assembly has been replaced correctly. ! The dishwasher should not be used without filters.

1. Remove the filters by pulling the handle upwards. 2. Clean the filters: after every wash cycle, remove the largest pieces of residue from semicircular plate A and glass B (these may be removed by pulling the handle) by rinsing them under running water. Any marks on the appliance interior may be removed using a cloth dampened with water and a little vinegar. C 1 2 A B Preventing unpleasant odours Always keep the door of the appliance ajar in order to avoid moisture from forming and being trapped inside the machine. Clean the seals around the door and detergent dispensers regularly using a damp sponge. This will avoid food becoming trapped in the seals, which is the main cause of the formation of unpleasant odours. Cleaning the sprayer arms Food residue may become encrusted onto the sprayer arms and block the holes used to spray the water. It is therefore recommended that the arms are checked from time to time and cleaned with a small non-metallic brush.

The entire filter as for a solution from the following list before calling for Technical Assistance Centre. Some problems are indicated by specific messages which flash on the display: make a note of any messages displayed before calling Assistance. EN 0DOIXQFWLRQ 7KH GLVKZDVKHU GRHV QRW VWDUW 3RVVLEOH FDXVHV 6ROXWLRQ The plug has not been inserted into the electrical socket properly, or there is no power in the house. The dishwasher door has not been shut properly. The dishes are rattling against each other or against the sprayer arms.

The level of the refined salt is low or the dosage setting is not suited to the hardness of the water (see Rinse aid and salt). The lid on the salt dispenser is not closed properly. The rinse aid has been used up or the dosage is too low. The rinse aid has been used up or the dosage is too low (see Rinse aid and salt). The rinse aid dispenser setting is not high enough.

The racks are overloaded (see Loading the racks). The crockery has not been arranged well. The sprayer arms cannot move freely. The wash cycle is too gentle (see Wash cycles). @@@@ Turn on the tap and the appliance will start after a few minutes. The appliance lock has been activated because nothing was done when the beeps sounded. The crockery has not been arranged well. Reprogramme the machine and restart the wash cycle. Switch off the machine by pressing the STANDBY button and clean the filters (see Maintenance), then switch the dishwasher back on by pressing the same button. Reprogramme the machine and restart the wash cycle.

Switch off the appliance by pressing the STANDBY button and switch it back on after a minute. If the alarm continues, turn off the water tap to reduce the risk of flooding, remove the plug from the electrical socket and call Assistance. 1R ZDWHU HQWHUV WKH GLVKZDVKHU 1R ZDWHU GUDLQV RXW IURP WKH GLVKZDVKHU 7KH GLVKZDVKHU PDNHV H[FHVLYH QRLVH 7KH GLVKHV DQG JODVVHV DUH FRYHUHG LQ D ZKLWH ILOP RU OLPHVFDH GHSRVLWV 7KH GLVKHV DQG JODVVHV DUH VWUHDNHG RU KDYH D EOXLVK WLQJH 7KH FURFNHU KDV QRW EHHQ GULHG SURSHUON 7KH GLVKHV DUH QRW FOHDQ 6KXW RII WDS DODUP (you will hear several short beeps) (the message H2O and the code ALO6 flashes on the display). %ORFNHG ILOWHU DODUP (the code ALO5 flashes on the display). :DWHU ORDGLQJ VROHQRLG YDOYH PDOIXQFWLRQ DODUP (the indicator light WATER LEAK flash on the display). 25 Assistance EN Before calling for Assistance: Check whether you can solve the problem on your own (see Troubleshooting); Restart the programme to check whether the problem has been solved; If this is not the case, contact an authorised Technical Assistance Centre on the telephone number provided on the guarantee certificate. ! Always request the assistance of authorised servicemen. Notify the operator of: the type of problem. the appliance model (Mod.). the serial number (S/N). This information can be found on the data plate situated on the internal edge of the stainless steel door (see Description of the appliance).



[You're reading an excerpt. Click here to read official HOTPOINT LD 6090 EU user guide](http://yourpdfguides.com/dref/4689446)
<http://yourpdfguides.com/dref/4689446>