



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LFF 8M121 CX DE/SK. You'll find the answers to all your questions on the HOTPOINT LFF 8M121 CX DE/SK in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT LFF 8M121 CX DE/SK
User guide HOTPOINT LFF 8M121 CX DE/SK
Operating instructions HOTPOINT LFF 8M121 CX DE/SK
Instructions for use HOTPOINT LFF 8M121 CX DE/SK
Instruction manual HOTPOINT LFF 8M121 CX DE/SK

Operating instructions

DISHWASHER

EN **DE** **NO**
English, 1 Deutsch, 15 Norsk, 20
SE **DA** **FI**
Svenska, 42 Dansk, 57 Suomi, 71

LFF 8M121

Contents

EN

Product Fiche, 2

Precautions and advice 3

General safety
Disposal
Saving energy and respecting the environment

Installation and Assistance, 4-5

Positioning and levelling
Connecting the water and electricity supplies
Advice regarding the first wash cycle
Technical data
Assistance

Description of the appliance, 6

Overall view
Control panel

Loading the racks, 7-8

Lower rack
Cutlery basket
Upper rack

Start-up and use, 9

Starting the dishwasher
Measuring out the detergent

Wash cycles, 10

Table of wash cycles

Special wash cycles and Options, 11

Rinse aid and refined salt, 12

Measuring out the rinse aid
Measuring out the refined salt

Care and maintenance, 13

Shutting off the water and electricity supplies
Cleaning the dishwasher
Preventing unpleasant odour
Cleaning the sprayler arms
Cleaning the water inlet filter
Cleaning the filters
Leaving the machine unused for extended periods

Troubleshooting, 14



[You're reading an excerpt. Click here to read official HOTPOINT LFF 8M121 CX DE/SK user guide](http://yourpdfguides.com/dref/5437504)
<http://yourpdfguides.com/dref/5437504>

Manual abstract:

@@Actual energy consumption depends on how the appliance is used. 3) Based on 280 standard cleaning cycles. Actual water consumption depends on how the appliance is used. @@Keep this instruction manual in a safe place for future reference. If the appliance is sold, given away or moved, please ensure the manual is kept with the machine. Please read these instructions carefully: they contain important information on installation, use and safety. This appliance is designed for domestic use or similar applications, for example: - staff kitchen areas in shops, offices and other work environments; - farmhouses; - use by guests in hotels, motels and other residential settings; - bed & breakfasts. Disposal • Disposal of packaging material: observe local legislation so that the packaging may be reused. □ The European Directive 2012/19/EU relating to Waste Electrical and Electronic Equipment (WEEE) states that household appliances should not be disposed of using the normal solid urban waste cycle. Exhausted appliances should be collected separately in order to optimise the reusing and recycling rate of the materials inside the machine, while preventing potential damage to the environment and public health.

The crossedout dustbin symbol is marked on all products to remind the owners of their obligations regarding separated waste collection. For further information relating to the correct disposal of household appliances, owners may contact the relevant public authority or the local appliance dealer. EN General safety Saving energy and respecting the environment Saving water and energy • Only begin a wash cycle when the dishwasher is full. While waiting for the dishwasher to be filled, prevent unpleasant odours using the Soak cycle (see Wash cycles). □ Select a wash cycle that is suited to the type of crockery and to the soil level of the crockery using the Table of wash cycles: - for dishes with a normal soil level use the Eco wash cycle, which ensures low energy/water consumption levels.

- If the load is smaller than usual activate the Half Load option* (see Start-up and use). □ If your electricity supply contract gives details of electricity-saving time bands, run wash cycles when electricity prices are lower. The Delayed Start button * (see Start-up and use) helps you organise the wash cycles accordingly. Phosphate-free and chlorine-free detergents containing enzymes • We strongly recommend that you use detergents that do not contain phosphates or chlorine, as these products are harmful to the environment. • Enzymes provide a particularly effective action at temperatures around 50°C.

As a result detergents containing enzymes can be used in conjunction with low-temperature wash cycles in order to achieve the same results as a normal 65°C wash cycle. □ To avoid wasting detergent, use the product in appropriate quantities based on the manufacturer's recommendations, the hardness of the water, the soil level and the quantity of crockery to be washed. Even if they are biodegradable, detergents contain substances which may alter the balance of nature.

* Only available in selected models. 3 • The appliance should not be operated by people (including children) with reduced physical, sensory or mental capacities, or by inexperienced people who are not familiar with the product, unless supervision or instructions on how to use it are provided by someone who assumes responsibility for their safety. □ An adult must supervise children at all times to prevent them from playing with the appliance. □ The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use. □ The appliance must be used by adults only to wash domestic crockery in accordance with the instructions in this manual. □ The appliance must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the machine exposed to rain and storms.

□ Do not touch the appliance when barefoot. □ When unplugging the appliance always pull the plug from the mains socket. Do not pull on the cable. □ The water supply tap must be shut off and the plug should be removed from the electrical socket before cleaning or maintaining the appliance. □ If the appliance breaks down, do not under any circumstances touch the internal parts in an attempt to perform the repair work yourself. □ Do not lean or sit on the open door of the appliance: this may cause the appliance to overturn. □ The door should not be left open as it may create a dangerous obstacle. □ Keep detergent and rinse aid out of reach of children. □ The packaging material should not be used as a toy for children. Installation and Assistance EN If the appliance must be moved at any time, keep it in an upright position; if absolutely necessary, it may be tilted onto its back.

The hose should not be bent or compressed. Connecting the water outlet hose Connect the outlet hose (without bending it) to a drain duct with a minimum diameter of 4 cm. The outlet hose must be at a height ranging from 40 to 80 cm from the floor / surface where the dishwasher rests (A). positioning and levelling 1. Remove the appliance from all packaging and check that it has not been damaged during transportation.

If it has been damaged, contact the retailer and do not proceed any further with the installation process. 2. Arrange the dishwasher so that its sides or back panel are in contact with the adjacent cabinets or the wall. This appliance can also be recessed under a single worktop* (see the Assembly Instruction sheet.)

3.

Position the dishwasher on a level sturdy floor. If the floor is uneven, the front feet of the appliance should be adjusted until it reaches a horizontal position. If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating. 4*. To adjust the height of the rear foot, turn the red hexagonal bushing on the lower central part at the front of the dishwasher using a hexagonal spanner with an opening of 8 mm. Turn the spanner in a clockwise direction to increase the height and in an anticlockwise direction to decrease it (see Building-in Instruction Before connecting the water outlet hose to the sink drain, remove the plastic plug (B). Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance. Some models are also equipped with the supplementary safety device New Acqua Stop*, which guarantees anti-flooding protection even in the event of a supply hose rupture. sheet attached to the documentation.) Connecting the water and electricity supplies Connection to the water and electricity supplies should only be performed by a qualified technician.

The dishwasher should not stand on the water hoses or electricity supply cable. The appliance must be connected to the water supply network using new hoses.



[You're reading an excerpt. Click here to read official HOTPOINT LFF 8M121 CX DE/SK user guide](http://yourpdfguides.com/dref/5437504)
<http://yourpdfguides.com/dref/5437504>

Do not use old piping. The water inlet and outlet hoses and the electricity supply cable may be positioned towards the right or the left in order to achieve the best possible installation. **wARNING: HAZARDOUS VOLTAGE!** Under no circumstances should the water inlet hose be cut, as it contains live electrical parts. Electrical connection Before inserting the plug into the electrical socket, make sure that: • The socket is earthed and complies with current regulations. □ the socket can withstand the maximum load of the appliance, which is indicated on the data plate located on the inside of the door (see Description of the appliance); • The power supply voltage falls within the values indicated on the data plate on the inside of the door. □ The socket is compatible with the plug of the appliance. If this is not the case, ask an authorised technician to replace the plug (see Assistance); do not use extension cables or multiple sockets. Once the appliance has been installed, the power supply cable and the electrical socket should be easily accessible.

The cable should not be bent or compressed. If the power supply cable is damaged, it must be replaced by the manufacturer or its Technical Assistance Service in order to prevent all potential hazards (see Assistance.) Connecting the water inlet hose • To a suitable cold water connection point: before attaching the hose, run the water until it is perfectly clear so that any impurities that may be present in the water do not clog the appliance; after performing this operation, screw the inlet hose tightly onto a tap with a ¾ gas threaded connection. □ To a suitable hot water connection point: your dishwasher may be supplied with hot water from the mains supply (if you have a central heating system with radiators) provided that it does not exceed a temperature of 60°C. Screw the hose to the tap as described for connection to a cold water supply.

If the inlet hose is not long enough, contact a specialist store or an authorised technician (see Assistance.) The water pressure must be within the values indicated in the Technical Data table (see adjacent information.) * Only available in selected models. 4 Anti-condensation strip* After installing the dishwasher, open the door and stick the adhesive transparent strip under the wooden shelf in order to protect it from any condensation which may form. The machine has a buzzer/set of tones (depending on the dishwasher model) to inform the user that a command has been implemented: power on, cycle end etc. The symbols/indicator lights/LEDs on the control panel/ display may vary in colour and may have a flashing or fixed light (depending on the dishwasher model). The display* provides useful information concerning the type of wash cycle, wash cycle phase, remaining time, temperature etc. EN Advice regarding the first wash cycle After the installation, remove the stoppers from the racks and the retaining elastic elements from the upper rack, if any. Immediately before the first washing, completely fill the salt dispenser with water and add only then approximately 1 kg of salt (see chapter entitled Rinse aid and refined salt). The water may overflow: this is normal and is not a cause for concern. select the water hardness value (see chapter entitled Rinse aid and refined salt). After the salt has been poured into the machine, the LOW SALT indicator light* switches off. If the salt container is not filled, the water softener and the heating element may be damaged. can be used in a vertical position when arranging tea/ dessert saucers or in a lower position to load bowls and food containers. 7 EN Tip-up compartments with adjustable position The side tip-up compartments can be positioned at three different heights to optimize the arrangement of crockery inside the rack. Wine glasses can be placed safely in the tip-up compartments by inserting the stem of each glass into the corresponding slots.

The upper rack can be adjusted for height based on requirements: high position to place bulky crockery in the lower rack and low position to make the most of the tip-up compartments/sectors by creating more space upwards. Adjusting the height of the upper rack In order to make it easier to arrange the crockery, the upper rack may be moved to a higher or lower position. The height of the upper rack should be adjusted WHEN THE RACK IS EMPTY. NEVER raise or lower the rack on one side only. Cutlery tray* Some dishwasher models are fitted with a sliding tray which can be used to hold serving utensils or small cups.

For optimum washing performance avoid positioning bulky crockery directly below the tray. The cutlery tray can be removed (see Figure). If the rack is equipped with a Lift-Up device* (see figure), lift it up by holding its sides. To restore the lower position, press the levers (A) at the sides of the rack and follow the rack down. Their decorations are not resistant.

□ Parts in synthetic material which do not withstand high temperatures. The colours of glass decorations and aluminium/silver pieces can change and fade during the washing process. Crystal objects) can become opaque after a number of wash cycles too. Tips: • Only use glasses and porcelain guaranteed by the manufacturer as dishwasher safe. • Use a delicate detergent suitable for crockery.

□ Collect glasses and cutlery from the dishwasher as soon as the wash cycle is over. Before loading the tray, make sure the supports are properly coupled to the upper rack (see Figure). Press the ON/OFF button: The ON/OFF indicator light and the display light up. 3. Open the door and pour in a suitable amount of detergent Measuring out the detergent A good wash result also depends on the correct amount of detergent being used.

Exceeding the stated amount does not result in a more effective wash and increases environmental pollution. Based on how soiled the items are, the amount can be adjusted to individual cases using powder or liquid detergent. In the case of normally soiled items, use approximately either 35 gr (powder detergent) or 35 ml (liquid detergent). if tablets are used , one tablet will be enough. If the crockery is only lightly soiled or if it has been rinsed with water before being placed in the dishwasher, reduce the amount of detergent used accordingly. For good washing results also follow the instructions shown on the detergent box.

For further questions please ask the detergent producers' Advice Offices. To open the detergent dispenser use the opening device "A". Load the racks (see Loading the racks) and shut the door. 5.

Select the wash cycle in accordance with the type of crockery and its soil level (see Table of wash cycles) by pressing the wash-cycle selection buttons. Start the cycle by pressing the Start/Pause button: The wash indicator light comes on and the time left to the end of the cycle appears on the display. 8. At the end of the cycle, the display shows END. Switch off the appliance by pressing the ON/OFF button, shut off the water tap and unplug the appliance from the electricity socket.



[You're reading an excerpt. Click here to read official HOTPOINT LFF 8M121 CX DE/SK user guide](http://yourpdfguides.com/dref/5437504)
<http://yourpdfguides.com/dref/5437504>

Carefully introduce the rinse aid as far as the maximum reference notch of the filling space - avoid spilling it. If this happens, clean the spill immediately with a dry cloth. 3. Press the lid down until you hear a click to close it. NEVER pour the rinse aid directly into the appliance tub. Measuring out the refined salt Rinse-aid dispenser setting If you are not completely satisfied with the drying results, you can adjust the quantity of rinse aid. Switch on the dishwasher using the ON/OFF button, wait a few seconds and switch it off using the ON/OFF button.

Press the Start/Pause button 3 times; switch on the machine using the ON/OFF button and access the adjustment menu - the rinse-aid indicator light is lit (set to factory level). Select the level of rinse aid supply using the ECO cycle button (0 to 4 max.) Press the ON/OFF button to save the setting. If the rinse aid level is set to ZERO, no rinse aid will be supplied. The LOW RINSE AID indicator light will not illuminate if you run out of rinse aid. □ If there are streaks on the crockery, set the adjustment device to a lower number (1-2.) • If there are drops of water or limescale marks, set the adjustment device to a higher number (3-4.) Setting the water hardness Every dishwasher is equipped with a water softener which, by using refined salt specially designed for this type of appliance, supplies water without limescale which is then used to wash the crockery. This dishwasher offers a setting which helps to reduce pollution and optimises washing performance in accordance with the water hardness level in your area. This information can be obtained from the organisation which supplies your household In order to obtain the best possible results from a wash cycle, make sure that the salt dispenser is never empty.

Refined salt removes limescale from the water, thus avoiding the formation of deposits on crockery. The salt dispenser is located in the lower part of the dishwasher (see Description) and should be filled: • When the green float* cannot be seen by simply looking at the cap of the salt dispenser; • When the LOW RINSE AID indicator light on the panel/display is illuminated *; 1. Remove the lower rack and unscrew the cap (anticlockwise). 2. The first time you do this: fill the water tank right up to its edge.

3. Position the funnel* (see figure) and fill the salt dispenser up to the edge (approximately 1 kg). It is normal for a little water to leak out. 4. Remove the funnel* and wipe any salt residues away from the opening; rinse the cap under running water and then screw it on, the head facing downwards so as to let the water flow out of the four slots (star-shaped arrangement) in the lower part of the cap (cap with green float*).

It is advisable to perform this procedure every time you add salt to the dispenser. Make sure the cap is screwed on tightly so that no detergent can get into the container during the wash cycle (this could damage the water softener beyond repair). When necessary, measure out the salt before a wash cycle so that any saline solution which has leaked out of the salt dispenser is removed. * Only available in selected models. 12 Care and maintenance Shutting off the water and electricity supplies • Turn off the water tap after every wash cycle to avoid leaks. □ Always unplug the appliance when cleaning it and when performing maintenance work. □ The external surfaces of the machine and the control panel can be cleaned using a non-abrasive cloth which has been dampened with water. do not use solvents or abrasive products. □ Any marks on the inside of the appliance may be removed using a cloth dampened with water and a little vinegar. Cleaning the filters The filter assembly consists of three filters which remove food residues from the washing water and then recirculate the water.

They should be cleaned if you wish to achieve the best results in every wash. clean the filters regularly. The dishwasher should not be used without filters or if the filter is loose. □ After several washes, check the filter assembly and if necessary clean it thoroughly under running water, using a non-metallic brush and following the instructions below: 1. Turn the cylindrical filter C in an anti-clockwise direction and pull it out (fig. Remove the cup filter B by exerting a slight pressure on the side flaps (fig. Inspect the trap and remove any food residues. EN Cleaning the dishwasher • Always keep the door of the appliance ajar in order to avoid moisture from forming and being trapped inside the machine. □ Clean the seals around the door and detergent dispensers regularly using a damp sponge. This will avoid food becoming trapped in the seals, which is the main cause behind the formation of unpleasant odours.

Preventing unpleasant odours Food residue may become encrusted onto the sprayer arms and block the holes used to spray the water. It is therefore recommended that you check the arms from time to time and clean them with a small non-metallic brush. The two sprayer arms may both be removed. To remove the upper sprayer arm, turn the plastic locking ring in an anti-clockwise direction. The upper sprayer arm should be replaced so that the side with the greater number of holes is facing upwards.

Cleaning the sprayer arms The lower sprayer arm can be removed by pressing on the side tabs and pulling it upwards. After cleaning the filters, re-place the filter assembly and fix it in position correctly; this is essential for maintaining the efficient operation of the dishwasher. Leaving the machine unused for extended periods If the water hoses are new or have not been used for an extended period of time, let the water run to make sure it is clear and free of impurities before performing the necessary connections. If this precaution is not taken, the water inlet could become blocked and damage the dishwasher.

Clean the water inlet filter at the tap outlet regularly.

- Turn off the water tap. - Unscrew the end of the water inlet hose, remove the filter and clean it carefully under running water. - Re-place the filter and screw the water hose back into position. Cleaning the water inlet filter* • Disconnect the appliance from the electricity supply and shut off the water tap. □ Leave the door of the appliance ajar. □ When you return, run a wash cycle when the dishwasher is empty. * Only available in selected models. 13 Troubleshooting EN Whenever the appliance fails to work, check for a solution from the following list before calling for Assistance. Problem: The dishwasher does not start or cannot be controlled. Possible causes / Solutions: • Switch off the appliance by pressing the ON/OFF button, switch it back on after approximately one minute and reset the cycle.

• The appliance has not been plugged in properly. □ The dishwasher door has not been shut properly. • The lock was released. Strongly push the door until a "clacking" noise is heard. The dishwasher makes excessive noise.



[You're reading an excerpt. Click here to read official HOTPOINT LFF 8M121 CX DE/SK user guide](http://yourpdfguides.com/dref/5437504)
<http://yourpdfguides.com/dref/5437504>

The dishes and glasses are covered in a white film or limescale deposits. The dishes and glasses are streaked or have a bluish tinge. The crockery has not been dried properly. □ The dishes are rattling against each other or against the sprayer arms. □ An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers (see Start-up and use).

□ The level of refined salt is low or the dosage setting is not suited to the hardness of the water (see Rinse aid and salt). □ The lid on the salt dispenser is not closed properly. □ The rinse aid has been used up or the dosage is too low. Has been used up or the dosage is too low (see Rinse aid dispenser setting is not suitable. is made from non-stick material or plastic.

The dishes are not clean. The racks are overloaded (see Loading the racks). The crockery has not been arranged properly. The sprayer arms cannot rotate freely. The wash cycle is too gentle (see Wash cycles).

An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers (see Start-Up and Use). The lid on the rinse aid compartment has not been shut correctly. The filter is dirty or blocked (see Care and maintenance). The refined salt level is low (see Rinse aid and salt). Switch off the appliance by pressing the ON/OFF button. Shut off the water tap to eliminate the risk of flooding and remove the plug from the electrical socket. Make sure the water inlet filter has not become blocked by impurities (see "Care and maintenance" chapter). There is no water in the mains supply. the water inlet hose is bent (see Installation). Turn on the tap and the appliance will start after a few minutes.

The appliance lock has been activated because no action was taken when the beeps sounded. Switch off the appliance using the ON/OFF button, turn on the tap and switch the appliance back on after a few seconds by pressing the same button. Re-program the appliance and restart the wash cycle. The dishwasher does not take any water in - Tap shut-off alarm (indicator light ON/OFF flashing; H2O and tap symbol displayed; F 6 appears after a few seconds). □ • • • Clogged filter alarm The "filter" symbol on the display will light up. □ Make sure the wash cycle has ended, open the dishwasher door and clean the cup filter and stainless-steel filter (see "Care and maintenance" chapter). The "blocked filter" symbol will go off when the following cycle starts. Schalterblende*** Optionstaste Multifunktionsstabs Taste und Kontrollleuchte On-Off/Reset Schalterblende Tasten Startzeitvorwahl Tasten Programmwahl Display Taste und Kontrollleuchten Start/Pause Optionstaste Extratrocken Optionstaste Zone Wash Tasten Programmwahl Optionstaste Kurzzeit Display Salznachfüllanzeige Kontrollleuchte Waschen und Trocknen Klarspülnachfüllanzeige Restzeit-Anzeige Kontrollleuchte Filtersiebe verstopft Kontrollleuchte Wasserhahn abgedreht Programm-Anzeigeleuchten Programm-Anzeigeleuchten Kontrollleuchte Startzeitvorwahl Anzeigeleuchten Zone Wash Kontrollleuchte extra trocken Short Time option indicator light Multi-Functional Tablets indicator light (Tabs) *** Nur bei komplett integrierten Modellen * Nur bei einigen Modellen. Dette apparatet er prosjektet for husholdningsbruk eller lignende, for eksempel: - kjøkken som brukes av personalet i butikker, kontorer og andre arbeidsmiljøer; - feriekolonier; - for kunder på hoteller, moteller og andre overnattingssteder; - bed and breakfast. Vri med urviseren for å øke høyden og mot urviseren for å minke den.

(se vedlagte ark med anvisninger for innbygging) Vann- og strømtilkoblinger Tilpasningen av det elektriske og det hydrauliske anlegget for installasjonen må bare utføres av kyndig personale. @ @ @ @ @ @ @ @ KO-vaskeprogrammet er standardprogrammet som energimerkingen henviser til. Denne syklusen er egnet for normalt skittent servise, og er det mest effektive programmet for denne typen servise når de gjelder forbruk av energi og vann. Merknad for testlaboratoriene: Opplysninger om betingelsene for EN-sammenligningstesten kan fås ved å sende en forespørsel til e-postadresse:

ASSISTENZA_EN_LVS@indesitcompany. Det anbefales ikke for programmer som ikke er beregnet for vasketabletter.

Funksjon for ekstra tørking Trykk på tasten for EKSTRA TØRKNING for å få enda bedre tørking av serviset. 41 Bruksanvisning DISKMASKIN SE Svenska, 42 Innehållsförteckning Informationsblad, 43 Föreskrifter, råd och service, 44-45 Säkerhet i allmänhet Kassering Spara energi och respektera miljön Service Installation, 46-47 Placering och nivellering Anslutningar av vatten och el Tekniska data Föreskrifter för den första diskningen Beskrivning av utrustningen, 48 LFF 8M121 Översiktsvy Manöverpanel Fyll korgarna, 49-50 Nedre korg Bestickkorg Övre korg Bestickbricka Reglering av övre korg Start och användning, 51 Starta diskmaskinen Påfyllning av diskmedel Program, 52 Programtabell Specialprogram och tillval, 53 Sköljmedel och härdningssalt, 54 Påfyllning av sköljmedel Påfyllning av härdningssalt Underhåll och skötsel, 55 Avstängning av vatten och el Rengöring av diskmaskinen Undvik dålig lukt Rengöring av spolarmarna Rengöring av vatteninläppsfiltret Rengöring av filtren När du reser bort under längre perioder Fel och åtgärder, 56 Informationsblad Informationsblad Varumärke Modell Kapacitet/Antal standardkuvert (1) Energieffektivitetsklass på en skala mellan A + + + (låg förbrukning) till D (hög förbrukning) Energiförbrukning per år i kWh (2) Energiförbrukning av standard programmet i kWh Strömförbrukning i avstängt läge i W Strömförbrukning vid på-läge i W Vattenförbrukningen per år i liter (3) Tork effekt på en skala från G (låg effekt) till A (hög effekt) Programtid för standard program i minuter Varaktighet vid på-läge i minuter Buller i dB (A) re 1 pW Inbyggd modell SE HOTPOINT ARISTON LFF 8M121 14 A++ 265. Se till att lock, handtag, kastruller och brickor inte hindrar spolarmarnas rotation. Programmets tidslängd 03:10' 02:00' - 03:10' Vattenförbrukning (l/program) 9,0 14,0 - 15,5 Energiförbrukning (kWh/program) 0,93 1,50 - 1,80 Program Eko* Auto Intensiv Torkning Tillval Senarelagd start Tabs - Extra Dry Senarelagd start - Tabs - Extra Dry - Zone wash - Short Time Senarelagd start - Tabs - Extra Dry - Zone wash - Short Time Senarelagd start - Tabs - Extra Dry Ja Ja Auto normal Ja 01:30' - 02:30' 14,5 - 16,0 1,20 - 1,35 Auto Fast Duo Wash Nej Ja Ja 00:40' - 01:20' 02:00' 01:40' 13,0 - 14,5 18,0 11,0 1,15 - 1,25 1,30 1,10 Ömtålig Express Blötläggning Nej Nej Senarelagd start - Tabs Senarelagd start 00:30' 00:12' 9,0 4,5 0,50 0,01 Anvisningar för programval och tvättmedelsdosering 1.



[You're reading an excerpt. Click here to read official HOTPOINT LFF 8M121 CX DE/SK user guide](http://yourpdfguides.com/dref/5437504)
<http://yourpdfguides.com/dref/5437504>

Utan denna förebyggande åtgärd finns det risk för att vatteninloppet täpps till och skadar diskmaskinen.

Tilvalgsfunktionen Forsinket start* (se Start og brug) er beregnet til at planlægge opvasken netop for at spare på energien. For at justere højden på de bageste ben, skal man dreje på den sekskantede, røde bøsning nederst på opvaskemaskinens front midt på ved hjælp af en 8 mm sekskantsnøgle. Drej højre om for at øge højden, og drej venstre om for at mindske højden. Betjeningspanel*** Tast for tilvalgsfunktionen Multitabletter (Tabs) Tast og kontrollampe On-Off/Reset Taster for Programvalg Display Betjeningspanel Tast og kontrollampe for Start/pause Tast for tilvalgsfunktion Ekstra tørring Tast for tilvalgsfunktion Zone Wash Taster for Programvalg Taster for Forsinket start Tast for tilvalgsfunktion Short Time Display Kontrollampe for saltmangel Kontrollampe for vask og tørring Kontrollampe for manglende afspændingsmiddel Indikator for resterende tid Kontrollampe for tilstoppede filtre Kontrollampe for lukket hane Kontrollampe for programmer Kontrollampe for programmer Kontrollampe for Forsinket start Kontrollampe for Zone Wash Kontrollampe for Ekstra tørring Short Time-kontrollampe Kontrollampe for Multitabletter (Tabs) *** Kun på indbygningsmaskiner * Findes kun på nogle modeller. Det anbefales at have meget snavset service i den nederste kurv, da vandstrålerne i dette område er mere kraftige og giver mulighed for bedre opvask. Varighed af programmer 03:10' 02:00' - 03:10' Vandforbrug (l/cyklus) 9,0 14,0 - 15,5 Energiforbrug (KWh/cyklus) 0,93 1,50 - 1,80 Program Eco* Auto intensiv Tørring Tilvalgsfunktioner Forsinket start Tabs - Extra Dry Forsinket start - Tabs - Extra Dry Zone wash - Short Time Forsinket start - Tabs - Extra Dry - Zone wash - Short Time Forsinket start - Tabs Forsinket start Tabs - Extra Dry - Short Time Forsinket start Tabs - Extra Dry Ja Ja Auto normal Auto Fast Duo wash Ja Nej Ja Ja 01:30' - 02:30' 00:40' - 01:20' 02:00' 01:40' 14,5 - 16,0 13,0 - 14,5 18,0 11,0 1,20 - 1,35 1,15- 1,25 1,30 1,10 Skåne Express Iblødsætning Nej Nej Forsinket start - Tabs Forsinket start 00:30' 00:12' 9,0 4,5 0,50 0,01 Anvisninger for valg af programmer og dosering af opvaskemiddel 1. ECO-vaskecyklussen er standardprogrammet, som oplysningerne på energimærkatet henviser til; denne cyklus er beregnet til opvask af normalt snavset service, og det er det mest effektive program hvad angår energi- og vandforbrug for denne type opvask. Hvis der vælges en tilvalgsfunktion, der ikke passer med en anden tilvalgsfunktion, der tidligere har været indstillet, vil kontrollampen for den nye funktion blinke 3 gange, og slukke, mens kontrollampen for den tidligere valgte tilvalgsfunktion forbliver tændt. 68 Vedligeholdelse Frakobling af vand og el Rengør filtrene DA • Luk for vandhanen efter hver opvask for at undgå risiko for vandspild. Sluk for maskinen på ON/OFF tasten, åbn for vandhanen og tryk på samme tast efter nogle sekunder.

Nopea Duo wash Kuivaus Lisä-toiminnot Viivästetty käynnistys – Tabs – Erittäin kuiva Viivästetty käynnistys – Tabs – Erittäin kuiva – Zone wash - Short Time Viivästetty käynnistys – Tabs – Erittäin kuiva – Zone wash - Short Time Viivästetty käynnistys – Tabs Viivästetty käynnistys – Tabs – Erittäin kuiva - Short Time Viivästetty käynnistys – Tabs – Erittäin kuiva Kyllä Kyllä Kyllä Ei Kyllä Kyllä 01:30' - 02:30' 00:40' - 01:20' 02:00' 01:40' 14,5 - 16,0 13,0 - 14,5 18,0 11,0 1,20 - 1,35 1,15- 1,25 1,30 1,10 Hellä Pikapesu Liotus Ei Ei Viivästetty käynnistys - Tabs Viivästetty käynnistys 00:30' 00:12' 9,0 4,5 0,50 0,01 Ohjeita ohjelman valintaan ja pesuaineen annostelu 1. .



[You're reading an excerpt. Click here to read official HOTPOINT LFF 8M121 CX DE/SK user guide](http://yourpdfguides.com/dref/5437504)
<http://yourpdfguides.com/dref/5437504>