



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LFFA 8H141 XEX60HZ. You'll find the answers to all your questions on the HOTPOINT LFFA 8H141 XEX60HZ in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT LFFA 8H141 XEX60HZ
User guide HOTPOINT LFFA 8H141 XEX60HZ
Operating instructions HOTPOINT LFFA 8H141 XEX60HZ
Instructions for use HOTPOINT LFFA 8H141 XEX60HZ
Instruction manual HOTPOINT LFFA 8H141 XEX60HZ

Operating instructions

DISHWASHER

EN FR AR
English, 1 Français, 13 العربية, 25

LFFA+ 8H141

Contents

Installation, 2-3

Positioning and levelling
Connecting the water and electricity supplies
Advice regarding the first wash cycle
Technical data
Ecodesign Regulation

Description of the appliance, 4

Overall view
Control panel

Loading the racks, 5

Lower rack
Cutlery basket
Upper rack

Start-up and use, 6-7

Sanitising the dishwasher
Measuring out the detergent
Wash options

Wash cycles, 8

Table of wash cycles

Rinse aid and refined salt, 9

Measuring out the rinse aid
Measuring out the refined salt

Care and maintenance, 10

Shutting off the water and electricity supplies
Cleaning the dishwasher
Preventing unpleasant odours
Cleaning the sprayer arms
Cleaning the water inlet filter
Cleaning the filters
Leaving the machine unused for extended periods

Precautions, advice and Assistance, 11

General safety
Disposal
Saving energy and respecting the environment
Assistance

Troubleshooting, 12

 ARISTON

1



[You're reading an excerpt. Click here to read official HOTPOINT LFFA 8H141 XEX60HZ user guide](http://yourpdfguides.com/dref/5761088)
<http://yourpdfguides.com/dref/5761088>

Manual abstract:

Connecting the water inlet hose • To a suitable cold water connection point: before attaching the hose, run the water until it is perfectly clear so that any impurities that may be present in the water do not clog the appliance; after performing this operation, screw the inlet hose tightly onto a tap with a ¾ gas threaded connection. □ To a suitable hot water connection point: your dishwasher may be supplied with hot water from the mains supply (if you have a central heating system with radiators) provided that it does not exceed a temperature of 60°C. Screw the hose to the tap as described for connection to a cold water supply. If the inlet hose is not long enough, contact a specialist store or an authorised technician (see Assistance). The water pressure must be within the values indicated in the Technical data table (see adjacent information). The hose should not be bent or compressed. connecting the water outlet hose Positioning and levelling 1. Remove the appliance from all packaging and check that it has not been damaged during transportation. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 2.

Check the dishwasher by placing it so that its sides or back panel are in contact with the adjacent cabinets or even with the wall. This appliance can also be recessed under a single worktop* (see the Assembly instruction sheet). 3. Position the dishwasher on a level and sturdy floor. If the floor is uneven, the front feet of the appliance may be adjusted until it reaches a horizontal position.

If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating. Connect the outlet hose (without bending it) to a drain duct with a minimum diameter of 4 cm. The outlet hose must be at a height ranging from 40 to 80 cm from the floor / surface where the dishwasher rests (A). Before connecting the water outlet hose to the sink drain, remove the plastic plug (B). Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance.

Some models are also equipped with the supplementary safety device New Acqua Stop *, which guarantees anti-flooding protection even in the event of a supply hose rupture. Connecting the water and electricity supplies Connection to the water and electricity supplies should only be performed by a qualified technician. The dishwasher should not stand on top of the water hoses or the electricity supply cable. The appliance must be connected to the water supply network using new hoses. Do not use old hoses. The water inlet and outlet hoses and the electricity supply cable may be positioned towards the right or the left in order to achieve the best possible installation. WARNING: HAZARDOUS VOLTAGE! Under no circumstance should the water inlet hose be cut as it contains live electrical parts. * Only available in selected models. 2 Electrical connection Before inserting the plug into the electrical socket, make sure that: The socket is earthed and complies with current regulations. □ The socket can withstand the maximum load of the appliance, which is indicated on the data plate located on the inside of the door (see chapter entitled Description of the appliance).

□ The power supply voltage falls within the values indicated on the data plate on the inside of the door. □ The socket is compatible with the plug of the appliance. If this is not the case, ask an authorised technician to replace the plug (see Assistance); do not use extension cables or multiple sockets. Once the appliance has been installed, the power supply cable and the electrical socket should be easily accessible. The cable should not be bent or compressed. If the power supply cable is damaged, it must be replaced by the manufacturer or its Technical Assistance Service in order to prevent all potential hazards. (See Assistance) The Company shall not be held responsible for any incidents that occur if these regulations are not observed. Anti-condensation strip* After installing the dishwasher, open the door and stick the adhesive transparent strip under the wooden shelf in order to protect it from any condensation which may form. EN Advice regarding the first wash cycle After the appliance has been installed, immediately before running the first wash cycle, completely fill the salt dispenser with water and add only then approximately 1 kg of salt (see chapter entitled Rinse aid and refined salt). The water may overflow: this is normal and is not a cause for concern.

select the water hardness value (see chapter entitled Rinse aid and refined salt). - After the salt has been poured into the machine, the LOW SALT indicator light* switches off. If the salt container is not filled, the water softener and the heating element may be damaged as a result. 10 bar) 7,25 – 145 psi See appliance data plate Total absorbed See appliance data plate power Fuse See appliance data plate This dishwasher conforms to the following European Community Directives: -2006/95/EC (Low Voltage) -2004/108/EC (Electromagnetic Compatibility) -2009/125/EC (Comm. reg.

1016/2010) (Ecodesign) -97/17/EC (Labelling) -2002/96/EC Waste Electrical and Electronic Equipment (WEEE) ECODESIGN REGULATION ECO wash cycle is the standard cycle to which the energy label data refers; this cycle can be used to wash crockery with a normal soil level and is the most efficient in terms of energy and water consumption for this type of crockery. To reduce consumption even further, only run the dishwasher when it is full. reg. ** Data is obtained by recording values when the appliance is operational and loaded with user crockery. Upper rack Upper sprayer arm Tip-up compartments Rack height adjuster Lower rack Lower sprayer arm Cutlery basket Washing filter Salt dispenser Detergent and rinse aid dispensers Data plate Control Panel*** Control panel Low salt indicator light ON/OFF indicator light Half load button and indicator light Time remaining light-up display Select wash cycle button Wash cycle indicator lights Good Night option button and indicator light End indicator light Drying indicator light Washing indicator light ON/OFF/Reset button Low rinse aid indicator light Delayed start button and indicator light Multi-functional tablets button and indicator light Start/Pause button and indicator light ***Only in completely built-in models.

* Only available in selected models. The number and type of wash cycles and options may vary depending on the dishwasher model. 4 Loading the racks Before loading the racks, remove all food residue from crockery and empty liquids from glasses and cups. After loading the appliance, make sure that the sprayer arms can rotate freely. Upper rack Load this rack with delicate and lightweight crockery: glasses, cups, saucers and shallow salad bowls. EN Lower rack and cutlery basket The lower rack can hold pans, lids, plates, salad bowls, cutlery, etc.



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[LFFA 8H141 XEX60HZ user guide](#)

<http://yourpdfguides.com/dref/5761088>

Large plates and lids should ideally be placed at the sides of the rack. Adjustable position tip-up compartments The tip-up compartments can be positioned at different heights, to optimise the arrangement of crockery throughout the rack. Wine glasses can be placed safely in the tip-up compartments, by inserting the stem of each glass into the corresponding slots. Some dishwasher models are fitted with a sliding tray* which can be used to hold serving utensils or small cups.

For optimum washing performance, avoid positioning bulky crockery directly below the tray. The type of cutlery basket may vary (modular or non-modular) according to the dishwasher model. The non-modular basket must only be positioned at the front of the lower rack. Several dishwasher models are fitted with tip-up sections*, which can be used in a vertical position when arranging plates or in a horizontal position when arranging saucepans, salad bowls and frying pans. Adjusting the height of the upper rack In order to make it easier to arrange the crockery, the upper rack may be moved to a higher or lower level. The height of the upper rack should ideally be adjusted WHEN THE RACK IS EMPTY. NEVER raise or lower the rack on one side only. Open the left and right guide rail stops and pull out the rack; position it higher or lower as required, slide it along the guide rails until the front wheels are in place and close the stops (see figure). If the rack is fitted with Dual Space handles * (see figure), pull out the upper rack until it reaches its stop point, grip the handles at the sides of the rack and move it upwards or downwards, then slowly let it fall back into place. Both are fitted with grilles over the top, for improved cutlery arrangement.

Knives and other utensils with sharp edges must be placed in the cutlery basket with the points facing downwards, or they must be positioned horizontally in the tip-up compartments on the upper rack. We recommend the use of crockery which is dishwasher safe. Items that should not be washed in the dishwasher • Wooden items, objects with wooden or horn handles or glued-on parts. • Items made from aluminium , copper , brass , pewter or tin. □ Items made from plastic material which is not heat-resistant.

Silver that is not antique may, however, be washed in the dishwasher using a delicate wash cycle, provided that it does not come into contact with other metals. * Only available in selected models. The number and position may vary. Press the ON/OFF button: you will hear a short beep; all the indicator lights and the display will light up for a few seconds. Load the racks (see Loading the racks) and shut the door.

5. Select the wash cycle in accordance with the type of crockery and its soil level (see Table of wash cycles) by pressing the P button. Start the cycle by pressing the Start/Pause button: a long beep signals the start of the wash cycle, the washing cycle indicator light switches on and the time remaining until the end of the cycle is displayed. 8. Two short beeps and one long one indicate the end of the wash cycle; the wash cycle indicator light flashes and the END indicator light switches on (fixed light). Switch off the appliance by pressing the ON/OFF button, shut off the water valve and unplug the appliance from the electricity socket. 9. Wait for a few minutes before removing the crockery, in order to avoid burns. Unload the racks, beginning with the lower level.

Measuring out the detergent A good wash result also depends on the correct amount of detergent being used; exceeding the stated amount does not result in a more effective wash and increases environmental pollution.

Only use detergent which has been specifically designed for dishwashers. dO NOT USE washing up liquid. Using excessive detergent may result in foam residue remaining in the machine after the cycle has ended. To achieve the best results from each washing and drying cycle, powder detergent, rinse aid liquid and salt should be used. Pour iuminate. Use the same button to select the time at which you wish the wash cycle to begin (after a period of 1 to 24 hours). 2. Confirm your selection using the Start/Pause button; the countdown will begin. The selected delay period indicator light flashes and the Start/Pause button stops flashing (the light becomes fixed instead). 3.

When the set time has elapsed, a long beep sounds, the DELAYED START indicator light switches off and the wash cycle begins. To deselect the DELAYED START option, press the DELAYED START button repeatedly until the text OFF appears. The Delayed Start function cannot be set once the wash has been started. Good Night option This option reduces the amount of noise made by the machine and lengthens the wash cycles. It is a useful option because it enables users to benefit from the night-time energy rate.

After selecting the wash cycle, press the Good Night option button; the illumination of the corresponding indicator light followed by a short beep indicates its selection. To deselect the option, press the same button again. The Good Night options are not compatible with the HALF LOAD option. table of options Auto

Super Wash Auto Normal Daily A 60 Soak Eco Speed 25' Crystal Baby wash A Delayed Start Yes Yes Yes Yes Yes Yes Yes Yes B Half Load Yes Yes Yes Yes Yes No Yes No C Tabs Yes Yes Yes No Yes Yes Yes No D Good Night No Yes No No Yes No No No * Only available in selected models. 7 Wash cycles EN For available OPTIONS please refer to the Table of options on the Start-up and use page.

If the crockery is only lightly soiled or if it has been rinsed with water before being placed in the dishwasher, reduce the amount of detergent used accordingly. The number and type of wash cycles and options may vary depending on the dishwasher model. Wash cycle selection instructions Wash cycle Detergent (A) = compartment A (B) = compartment B Powder Liquid Tablets Wash cycles which include drying Options Wash cycle duration (tolerance $\pm 10\%$) Hrs. @@@@Economic and fast wash to be used for lightly soiled dishes. @@@@The crockery should only be loaded on the upper rack. @@@@ do not use table salt or industrial salt , or washing up liquid. Follow the instructions given on the packaging. @@Follow the instructions given on the packaging. @@@@ 2. @@If this happens, clean the spill immediately F with a dry cloth.

g 3. Screw the lid back on. NEVER pour the rinse aid directly into the appliance tub. @@@@** for 1 wash cycle per day. ($^{\circ}\text{dH}$ = hardness measured in German degrees - $^{\circ}\text{f}$ = hardness measured in French degrees - mmol/l = millimoles per litre) Measuring out the refined salt In order to achieve the best possible results using a wash cycle, make sure that the dispenser is never empty. Refined salt removes limescale from the water, thus avoiding the formation of deposits on crockery. The salt dispenser is located in the lower part of the dishwasher (see Description) and should be filled: • When the green float* cannot be seen by simply looking at the cap of the salt dispenser.



[You're reading an excerpt. Click here to read official HOTPOINT LFFA 8H141 XEX60HZ user guide](http://yourpdfguides.com/dref/5761088)
<http://yourpdfguides.com/dref/5761088>

□ When the LOW SALT* indicator light on the control panel is illuminated; 1. Remove the lower rack and unscrew the container cap (anticlockwise). 2. The first time you do this: fill the water tank right up to its edge. 3. Position the funnel* (see figure) and fill the salt container right up to its edge (this should hold approximately 1 kg); it is not unusual for a little water to leak out. 4. Remove the funnel* and wipe any salt residue away from the opening; rinse the cap under running water and then screw it on, the head facing downwards so as to let the water flow out of the four cracks which are arranged in a star shape on the lower part of the cap.

(the container cap with the green float*) It is advisable to perform this procedure every time you add salt to the container. Make sure the cap is screwed on tightly, so that no detergent can get into the container during the wash cycle (this could damage the water softener beyond repair). When necessary, measure out the salt before a wash cycle so that any saline solution which has leaked out of the salt dispenser is removed. Adjusting the amount of rinse aid If you are not completely satisfied with the drying results, you may adjust the quantity of rinse aid used. Use a screwdriver to turn the dosage adjuster (F) to one of the 6 pre-set positions (the default position is set to 4): • If there are streaks on the crockery, set the adjustment device to a lower number (1-3).

□ If drops of water remain on the crockery or if there are limescale marks present after the cycle has finished, set the adjuster to a higher number (4-6). Setting the water hardness Every dishwasher is equipped with a water softener which, by using refined salt designed especially for this type of appliance, supplies water without limescale which is then used to wash the crockery. This dishwasher offers a setting which helps to reduce pollution and optimises washing performance in accordance with the water hardness level in your area. This information can be obtained from the organisation which supplies your household with water. - Switch on the appliance by pressing the ON/OFF button. - Press the P button and hold for a few seconds; two short beeps will sound and the wash cycle indicator light corresponding to the set degree of hardness will flash slowly on the control panel (the water softening system is set to number 3). - Press the P button repeatedly until the desired hardness level has been reached (1-2-3-4-5* see Water hardness table). * Only available in selected models. 9 Care and maintenance EN Shutting off the water and electricity supplies • Turn off the water tap after every wash cycle to avoid leaks. □ Always unplug the appliance when cleaning it and when performing maintenance work.

Cleaning the dishwasher • The external surfaces of the machine and the control panel may be cleaned using a non-abrasive cloth which has been dampened with water. do not use solvents or abrasive products. □ Any marks on the inside of the appliance may be removed using a cloth dampened with water and a little vinegar. Clean the water inlet filter at the tap outlet regularly. - Turn off the water tap. - Unscrew the end of the water inlet hose, remove the filter and clean it carefully under running water. - Replace the filter and screw the water hose back into position. Cleaning the filters The filter assembly consists of three filters which remove food residues from the washing water and then recirculate the water. They should be cleaned if you wish to achieve the best results in every wash. clean the filters regularly.

The dishwasher should not be used without filters, or if the filter is loose. □ After several washes, check the filter assembly and if necessary clean it thoroughly under running water, using a non-metallic brush and following the instructions below: 1. Turn the cylindrical filter C in an anti-clockwise direction and pull it out (fig. Remove the cup filter B by exerting a slight pressure on . Inspect the trap and remove any food residue.

Preventing unpleasant odours • Always keep the door of the appliance ajar in order to avoid moisture from forming and being trapped inside the machine. □ Clean the seals around the door and detergent dispensers regularly using a damp sponge. This will avoid food becoming trapped in the seals, which is the main cause behind the formation of unpleasant odours. Cleaning the sprayer arms Food residue may become encrusted onto the sprayer arms and block the holes used to spray the water. It is therefore recommended that the arms are checked from time to time and cleaned with a small non-metallic brush.

The two sprayer arms may both be removed. To remove the upper sprayer arm, rotate the locking ring in an anticlockwise direction. The upper sprayer arm should be replaced with the holes facing upwards. 1 2 The lower sprayer arm can be removed by pressing on the side tabs and pulling it upwards. 3 4 Cleaning the water inlet filter* If the water hoses are new or have not been used for an extended period of time, let the water run to make sure it is clear and free of impurities before performing the necessary connections. If this precaution is not taken, the water inlet could become blocked and damage the dishwasher. After cleaning the filters, replace the filter assembly and fix it in position correctly; this is essential for maintaining the efficient operation of the dishwasher. Leaving the machine unused for extended periods • Disconnect the appliance from the electricity supply and shut off the water tap. □ Leave the door of the appliance ajar. □ When you return, run a wash cycle when the dishwasher is empty.

* Only available in selected models. 10 Precautions, advice and Assistance This appliance was designed and manufactured in compliance with current international safety standards. The following information has been provided for safety reasons and should therefore be read carefully. □ Select a wash cycle which is suited to the type of crockery and to the soil level of the crockery using the Table of wash cycles: - For dishes with a normal soil level, use the Eco wash cycle, which guarantees low energy and water consumption levels. - If the load is smaller than usual activate the Half load option* (see Start-up and use). □ If your electricity supply contract gives details of electricity saving time bands, run wash cycles during the periods when a lower tariff is applied. The Delayed start* button (see Start-up and use) helps you organise the wash cycles accordingly. EN General safety • This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. □ Children should be supervised to ensure that they do not play with the appliance. □ The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use.



[You're reading an excerpt. Click here to read official HOTPOINT LFFA 8H141 XEX60HZ user guide](http://yourpdfguides.com/dref/5761088)
<http://yourpdfguides.com/dref/5761088>

□ The appliance must be used by adults only, to wash domestic crockery in accordance with the instructions in this manual. □ The appliance must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the machine exposed to rain and storms. □ Do not touch the appliance when barefoot. □ When unplugging the appliance always pull the plug from the mains socket, do not pull on the cable.

□ The water supply tap must be shut off and the plug should be removed from the electrical socket before cleaning the appliance or carrying out any maintenance work. □ If the appliance breaks down, do not under any circumstances touch the internal parts in an attempt to perform the repair work yourself. • Never touch the heating element. □ Do not lean or sit on the open door of the appliance: this may cause the appliance to overturn. □ The door should not be left open as it may create a dangerous obstacle.

□ Keep detergent and rinse aid out of reach of children. □ The packaging material should not be used as a toy. Phosphate-free and chlorine-free detergents containing enzymes • We strongly recommend that you use detergents that do not contain phosphates or chlorine, as these products are harmful to the environment. □ Enzymes provide a particularly effective action at temperatures around 50°C, and as a result detergents containing enzymes can be used in conjunction with lowtemperature wash cycles in order to achieve the same results as a normal 65°C wash cycle. □ To avoid wasting detergent, use the product in appropriate quantities based on the manufacturer's recommendations, the hardness of the water and the soil level and quantity of crockery to be washed. Even if they are biodegradable, detergents contain substances which may alter the balance of nature. Assistance Before contacting Assistance: • Check whether the problem can be resolved using the Troubleshooting guide (see Troubleshooting). □ Restart the programme to check whether the problem has ceased to exist. □ If the problem persists, contact the Authorised Technical Assistance Service. Never use the services of unauthorised technicians.

@@@ For further information relating to the correct disposal of household appliances, owners may contact the relevant public authority or the local appliance dealer. Please have the following information to hand: • The type of malfunction. This information can be found on the appliance data plate (see Description of the appliance). Saving energy and respecting the environment Saving water and energy • Only begin a wash cycle when the dishwasher is full. While waiting for the dishwasher to be filled, prevent unpleasant odours using the Soak cycle (see Wash cycles). * Only available in selected models. 11 Troubleshooting EN Whenever the appliance fails to work, check for a solution from the following list before calling for Assistance. Problem: The dishwasher does not start or cannot be controlled Possible causes / Solutions: • Switch off the appliance by pressing the ON/OFF button, switch it back on after approximately one minute and reset the program. • The appliance has not been plugged in properly. □ The dishwasher door has not been shut properly. • The lock was released. Strongly push the door until a "clacking" noise is heard. The filter is clogged up with food residues. The door won't close No water drains out from the dishwasher. The dishwasher makes excessive noise.

□ The dishes are rattling against each other or against the sprayer arms. □ An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers (see Start-up and use). □ The level of the refined salt is low or the dosage setting is not suited to the hardness of the water (see Rinse aid and salt). □ The lid on the salt dispenser is not closed properly. □ The rinse aid has been used up or the dosage is too low.

• The rinse aid dosage is too high. □ ••••• A wash cycle without a drying program has been selected. The rinse aid has been used up or the dosage is too low (see Rinse aid and salt). The rinse aid dispenser setting is not suitable. The crockery is made from non-stick material or plastic. The dishes and glasses are covered in a white film or limescale deposits. The dishes and glasses are streaked or have a bluish tinge. The crockery has not been dried properly. The dishes are not clean. The racks are overloaded (see Loading the racks).

The crockery has not been arranged well. The sprayer arms cannot move freely. The wash cycle is too gentle (see Wash cycles). An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers (see Start-up and use). □ The lid on the rinse aid compartment has not been shut correctly. • The filter is dirty or blocked (see Care and maintenance). □ The refined salt level is low (see Rinse aid and salt). There is no water in the mains supply. the water inlet hose is bent (see Installation). Turn on the tap and the appliance will start after a few minutes. The appliance lock has been activated because no action was taken when the beeps sounded. Switch off the appliance using the ON/OFF button, turn on the tap and switch the appliance back on after 20 seconds by pressing the same button. Re-program the appliance and restart the wash cycle. □ • (The ON/OFF indicator light flashes and • the display shows A 6). □ The dishwasher does not take any water in - Tap shut-off alarm Water inlet hose alarm / Water inlet • Switch off the appliance by pressing the ON/OFF button.

Shut off the water tap to filter blocked eliminate the risk of flooding and remove the plug from the electrical socket. (the ON/OFF indicator light flashes and Make sure the water inlet filter has not become blocked by impurities (see "Care the display shows A 7). .



[You're reading an excerpt. Click here to read official HOTPOINT LFFA 8H141 XEX60HZ user guide](http://yourpdfguides.com/dref/5761088)
<http://yourpdfguides.com/dref/5761088>