



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LFT 114/HA.R. You'll find the answers to all your questions on the HOTPOINT LFT 114/HA.R in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT LFT 114/HA.R
User guide HOTPOINT LFT 114/HA.R
Operating instructions HOTPOINT LFT 114/HA.R
Instructions for use HOTPOINT LFT 114/HA.R
Instruction manual HOTPOINT LFT 114/HA.R

Istruzioni per l'uso

LAVASTOVIGLIE

IT	EN	FR
Italiano, 1	English, 13	Français, 25
DE	NL	ES
Deutsch, 37	Nederlands, 49	Español, 61
PL		
Polski, 73		

LFT 114

Sommario

Installazione, 2-3

Posizionamento e livellamento
Collegamenti idraulici ed elettrici
Avvertenze per il primo lavaggio
Dati tecnici

Descrizione dell'apparecchio, 4

Vista d'insieme
Pannello comandi

Caricare i cestelli, 5

Cestello inferiore
Cestello delle posate
Cestello superiore

Avvio e utilizzo, 6

Avviare la lavastoviglie
Caricare il detersivo
Opzioni di lavaggio

Programmi, 7

Tabella dei programmi

Brillantante e sale rigenerante, 8

Caricare il brillantante
Caricare il sale rigenerante

Manutenzione e cura, 9

Escludere acqua e corrente elettrica
Pulire la lavastoviglie
Evitare i cattivi odori
Pulire gli iniettori
Pulizia filtro entrata acqua
Pulire i filtri
Se ci si assenta per lunghi periodi

Precauzioni e consigli, 10

Sicurezza generale
Smaltimento
Risparmiare e rispettare l'ambiente

Anomalie e rimedi, 11

Assistenza, 12

Assistenza Attiva 7 giorni su 7



[You're reading an excerpt. Click here to read official HOTPOINT LFT 114/HA.R user guide](http://yourpdfguides.com/dref/4488030)
<http://yourpdfguides.com/dref/4488030>

Manual abstract:

⚠ To a suitable hot water connection point: your dishwasher may be supplied with hot water from the mains supply (if you have a central heating system with radiators) provided that it does not exceed a temperature of 60°C. Screw the hose to the tap as described for connection to a cold water supply. If the inlet hose is not long enough, contact a specialist store or an authorised technician (see Assistance). The water pressure must be within the values indicated in the Technical data table (see adjacent information). The hose should not be bent or compressed. positioning and levelling 1. Remove the appliance from all packaging and check that it has not been damaged during transportation. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 2. Check the dishwasher by placing it so that its sides or back panel are in contact with the adjacent cabinets or even with the wall. This appliance can also be recessed under a single worktop* (see the Assembly instruction sheet). 3. Position the dishwasher on a level and sturdy floor. If the floor is uneven, the front feet of the appliance may be adjusted until it reaches a horizontal position. If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating.

Connecting the water and electricity supplies Connection to the water and electricity supplies should only be performed by a qualified technician. The dishwasher should not stand on top of the water hoses or the electricity supply cable. The appliance must be connected to the water supply network using new hoses. Do not use old hoses. The water inlet (A) and outlet (B) hoses and the electricity supply cable may be positioned towards the right or the left in order to achieve the best possible installation (see figure).

⚠⚠⚠⚠ **wARNING: HAZARDOUS VOLTAGE!** ⚠⚠ * 14 Only available in selected models. ⚠⚠ Alternatively, rest it over a sink or tub; the free end of the hose should not remain immersed in water. A Anti-condensation strip* After installing the dishwasher, open the door and stick the adhesive transparent strip under the wooden shelf in order to protect it from any condensation which may form. eN (see figure). The special plastic elbow* makes it easier to find the best layout: fix the elbow to the wall securely in order to prevent the outlet hose from moving and spilling the dirty water. The part of the hose marked with the letter A should be between 40 and 100 cm above the ground Advice regarding the first wash cycle After the appliance has been installed, immediately before running the first wash cycle, completely fill the salt dispenser with water and add only then approximately 1 kg of salt (see chapter entitled Rinse aid and refined salt). The water may overflow: this is normal and is not a cause for concern. select the water hardness value (see chapter entitled Rinse aid and refined salt). - After the salt has been poured into the machine, the LOW SALT indicator light* switches off. If the salt container is not filled, the water softener and the heating element may be damaged as a result.

we advise against the use of hose extensions. Electrical connection Before inserting the plug into the electrical socket, make sure that: ⚠ The socket is earthed and complies with current regulations. ⚠ The socket can withstand the maximum load of the appliance, which is indicated on the data plate located on the inside of the door (see chapter entitled Description of the appliance). ⚠ The power supply voltage falls within the values indicated on the data plate on the inside of the door. ⚠ The socket is compatible with the plug of the appliance. If this is not the case, ask an authorised technician to replace the plug (see Assistance); do not use extension cables or multiple sockets. Once the appliance has been installed, the power supply cable and the electrical socket should be easily accessible. The cable should not be bent or compressed. ⚠⚠⚠⚠⚠⚠⚠⚠ * Only available in selected models. ⚠⚠⚠⚠⚠⚠⚠⚠ Never lift or lower the rack on one side only.

⚠⚠⚠⚠⚠⚠ As seen in the Loading examples. Plates and large covers should be placed at the sides of the rack, ensuring that they do not block the rotation of the upper sprayer arm. Some dishwasher models are fitted with tip-up sections *, which can be used in a vertical position when arranging plates or in a horizontal position when arranging pans and salad bowls. The type of cutlery basket may vary according to the dishwasher model: it may be modular, non-modular or a sliding version. The non-modular basket must only be positioned at the front of the lower rack.

The modular basket may be separated into two parts, a solution which is recommended when performing a half load wash (only in models offering this option), is available in a sliding version (positioned at any point on the lower rack by sliding it between the fixed or tip-up inserts. - Both versions are fitted with a collapsible sliding system which means the cutlery can be arranged in the best possible way. Knives and other utensils with sharp edges must be placed in the cutlery basket with the points facing downwards, or they must be positioned horizontally in the tipup compartments on the upper rack. Cutlery basket Loading examples for the upper rack Loading examples for the lower rack Items which should not be washed in the dishwasher Cutlery basket positioning examples ⚠ Wooden items, objects with wooden or horn handles or glued-on parts. ⚠ Items made from aluminium , copper , brass , pewter or tin. ⚠ Items made from plastic material which is not heat-resistant. Silver which is not antique may, however, be washed in the dishwasher using a delicate wash cycle, provided that it does not come into contact with other metals. We recommend the use of crockery which is dishwasher safe. Load this rack with delicate and lightweight crockery: glasses, tea and coffee cups, saucers, small salad bowls, saucepans and small saucepans which are not too soiled, using the Loading examples as a guide. ⚠ Mugs and cups: place these on the tip-up compartments**. ⚠ Long sharp knives and serving utensils: place these on the tip-up compartments**. upper rack * Only available in selected models. ** The number and position may vary. Open the door and press the ON/OFF button: you will hear a short beep and the ON/OFF and wash cycle indicator lights switch on for a few seconds. Load the racks (see chapter entitled Loading the racks).

5. Select the wash cycle in accordance with the type of crockery and its soil level (see Table of wash cycles), by pressing the P button; the indicator light corresponding to the selected wash cycle will switch on. 7. Start the wash cycle by shutting the door: after a few seconds have passed, a long beep signals the start of the wash cycle. 8. Two short beeps and one long one indicate the end of the wash cycle and the indicator light corresponding to the wash cycle flashes slowly.



[You're reading an excerpt. Click here to read official HOTPOINT LFT 114/HA.R user guide](http://yourpdfguides.com/dref/4488030)
<http://yourpdfguides.com/dref/4488030>

Open the door, switch off the appliance by pressing the ON/OFF button, shut off the water tap and unplug the appliance from the electricity socket. 9. Wait for a few minutes before removing the crockery, in order to avoid burns. Unload the racks, beginning with the lower level.

The order in which the different wash programmes are displayed will change according to the frequency with which each cycle is used. @@@@ □ □ □ □ DO NOT USE washing up liquid. @@@@ 3. @@@@ 3. @@@@ Remove the lower rack and unscrew the container cap (anticlockwise). 2. The first time you do this: fill the water tank right up to its edge. 3. @@ 4. @@@@ 20 * Only available in selected models.

@@ eN - Turn off the water tap. @@ - Replace the filter and screw the water hose back into position. @@@@ do not use solvents or abrasive products. @@@@ clean the filters regularly. The dishwasher should not be used without filters, or if the filter is loose. After several washes, check the filter assembly and if necessary clean it thoroughly under running water, using a non-metallic brush and following the instructions below: 1. Turn the cylindrical filter C in an anti-clockwise direction and pull it out (fig. Remove the cup filter B by exerting a slight pressure on the side flaps (fig. Inspect the trap and remove any food residue. Always keep the door of the appliance ajar in order to avoid moisture from forming and being trapped inside the machine.

After Clean the seals around the door and detergent dispensers regularly using a damp sponge. This will avoid food becoming trapped in the seals, which is the main cause behind the formation of unpleasant odours. Preventing unpleasant odours Food residue may become encrusted onto the sprayer arms and block the holes used to spray the water. It is therefore recommended that the arms are checked from time to time and cleaned with a small non-metallic brush. The two sprayer arms may both be removed. To remove the upper sprayer arm, rotate the locking ring in an anti-clockwise direction. The upper sprayer arm should be replaced with the holes facing upwards. The lower sprayer arm can be removed by pressing on the side tabs and pulling it upwards. Cleaning the sprayer arms C 1 2 C d on all products to remind the owner of their obligations regarding separated waste collection. @ * Only available in selected models.

After The dishwasher door has not been shut properly. @@@@ Switch off the machine, using the ON/OFF button, turn on the tap and switch the machine back on after 20 seconds by pressing the same button. No water drains out from the dishwasher. The dishwasher makes excessive noise. The crockery has not been dried properly.

the dishes are not clean. No water enters the dishwasher/Shut off tap alarm. (several short beeps are emitted) (the 2 (Normal) and 3 (Soak) WASH CYCLES indicator lights flash). (the 1 (Intensive), the 2 (Normal) and the 3 (Soak) WASH CYCLES indicator lights flash). 23 Assistance EN Before contacting Assistance: After Check whether the problem can be resolved using the Troubleshooting guide (see Troubleshooting).

After Restart the programme to check whether the problem has ceased to exist. After If the problem persists, contact the Authorised Technical Assistance Service. Never use the services of unauthorised technicians. Please have the following information to hand: After The type of malfunction. This information can be found on the appliance data plate (see Description of the appliance). U dient door te geven: After het type storing; After het model van het apparaat (Mod. .



[You're reading an excerpt. Click here to read official HOTPOINT](#)

[LFT 114/HA.R user guide](#)

<http://yourpdfguides.com/dref/4488030>