



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LI 420.C/HA. You'll find the answers to all your questions on the HOTPOINT LI 420.C/HA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT LI 420.C/HA
User guide HOTPOINT LI 420.C/HA
Operating instructions HOTPOINT LI 420.C/HA
Instructions for use HOTPOINT LI 420.C/HA
Instruction manual HOTPOINT LI 420.C/HA

Istruzioni per l'uso

LAVASTOVIGLIE

IT Italiano, 1	EN English, 13	FR Français, 25
DE Deutsch, 37	ES Español, 49	PT Portugues, 61

LI 420

Sommario

Installazione, 2-3

Posizionamento e livellamento
Collegamenti idraulici ed elettrici
Dati tecnici

Descrizione dell'apparecchio, 4

Vista d'insieme
Pannello di controllo

Caricare i cestelli, 5

Cestello inferiore
Cestello delle posate
Cestello superiore

Avvio e utilizzo, 6

Avviare la lavastoviglie
Caricare il detersivo
Opzioni di lavaggio*

Programmi, 7

Tabella dei programmi

Brillantante e sale rigenerante, 8

Caricare il brillantante
Caricare il sale rigenerante

Manutenzione e cura, 9

Escludere acqua e corrente elettrica
Pulire la lavastoviglie
Evitare i cattivi odori
Pulire gli iniettori
Pulire i filtri

Se ci si assenta per lunghi periodi

Precauzioni e consigli, 10

Sicurezza generale
Simultaneo
Risparmiare e rispettare l'ambiente

Anomalie e rimedi, 11

Assistenza, 12

Assistenza Attiva 7 giorni su 7



[You're reading an excerpt. Click here to read official HOTPOINT LI 420.C/HA user guide](http://yourpdfguides.com/dref/4487910)

<http://yourpdfguides.com/dref/4487910>

Manual abstract:

To a suitable hot water connection point: your dishwasher may be provided with hot water from the mains supply (if you have a central heating system with radiators) provided that it does not exceed a temperature of 60°C. Screw the hose to the tap as described for connection to a cold water supply. • Positioning and levelling 1. Remove the appliance from all packaging and check that it has not been damaged during transportation. If it has been damaged, contact the retailer and do not proceed any further with the installation process. 2. Check the dishwasher by placing it so that its sides or back panel are in contact with the adjacent cabinets or even with the wall. This appliance can also be recessed under a single worktop* (see the Assembly instruction sheet). 3. Position the dishwasher on a level and sturdy floor.

If the floor is uneven, the front feet of the appliance may be adjusted until it reaches a horizontal position (the angle of inclination must not exceed 2 degrees).

If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating. 4. Adjust the height of the rear feet from the front of the appliance*: use a screwdriver to tighten or loosen the screws on the lower part of the dishwasher. If the inlet hose is not long enough, contact a specialist store or an authorised technician (see Assistance).

The water pressure must be within the values indicated in the Technical data table (see below). The hose should not be bent or compressed. Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance. It is very important to check the external hose regularly: if it is a bright red colour, it must be replaced by an authorised technician as soon as possible (see Assistance). Connecting the water and electricity supplies Connection to the water and electricity supplies should only be performed by a qualified technician.

@@@- Do not use old piping. @@ WARNING: HAZARDOUS VOLTAGE! @@ * Only available in selected models. 14 Connecting the water outlet hose Connect the outlet hose (without bending it) to a drain duct with a minimum diameter of 4 cm. Alternatively, rest it over a sink or tub; the free end of the hose should not remain immersed in water. The special plastic elbow* makes it easier to find the best layout: fix the elbow to the wall securely in order to prevent the outlet hose from moving and spilling the dirty water. The part of the hose marked with the letter A should be between 40 and 100 cm above the ground (see Advice regarding the first wash cycle After the appliance has been installed, immediately before running the first wash cycle, completely fill the salt dispenser with water and add approximately 2 kg of salt (see Rinse aid and refined salt). The water may overflow: this is normal and is not a cause for concern. It is also normal that the LOW SALT* indicator light continues to flash for a few cycles after the salt has been loaded. EN A Anti-condensation strip* After installing the dishwasher, open the door and stick the adhesive transparent strip under the wooden shelf in order to protect it from any condensation that may form. If this is not the case, ask an authorised technician to replace the plug (see Assistance); do not use extension cables or multiple sockets.

If the power supply cable is damaged, it must be replaced by the manufacturer or its Technical Assistance Service in order to prevent all potential hazards. (See Assistance) The cable should not be bent or compressed. The Company shall not be held responsible for any incidents that occur if these regulations are not observed. 16 Loading the racks Before loading the racks, remove all food residues from the crockery and empty liquids from glasses and cups. After loading the appliance, check that the sprayer arms can rotate freely. @@@@As seen in the Loading examples. @@@@ @@@@ @@@@ @@@@ □ Lightweight crockery: position these dishes so that they will not be moved by the jets of water. □ Mugs and cups: place these on the tip-up compartments**. □ Long sharp knives and serving utensils: place these on the tip-up compartments**. Items that should not be washed in the dishwasher ••••• Wooden items, objects with wooden or horn handles or glued-on parts.

items made from aluminium , copper , brass , pewter or tin. Items made from plastic that is not heat-resistant. Silver that is not antique may, however, be washed in the dishwasher using a delicate wash cycle, provided that it does not come into contact with other metals. Adjusting the height of the upper rack In order to make it easier to arrange the crockery, the upper rack may be moved to a higher or lower level. The height of the upper rack should ideally be adjusted WHEN THE RACK IS EMPTY.

Never lift or lower the rack on one side only. We recommend the use of crockery which is dishwasher safe. * Only available in selected models. ** The number and position may vary. Open the door and press the ON/OFF button: the indicator light will illuminate.

Load the racks (see Loading the racks). 5. Select the programme by pressing the WASH CYCLE SELECT button; the corresponding indicator light will illuminate. Start the wash cycle by shutting the door: the machine will emit a confirmation beep. 8. At the end of the cycle two short beeps will sound and the WASH CYCLE indicator light will flash. Open the door, switch off the appliance by pressing the ON/OFF button, shut off the water tap and unplug the appliance from the electricity socket. 9. Wait for a few minutes before removing the crockery, in order to avoid burns. Unload the racks, beginning with the lower level.

Loading the detergent A successful wash also depends on the correct amount of detergent being used, as recommended by the manufacturer. Exceeding the recommended amount does not result in a more effective wash and pollutes the environment. Only use detergent which has been specifically designed for dishwashers. DO NOT USE washing up liquid. @@@@ 3. @@@@ @@@@ @@@@ @@@@ * Only available in selected models.

@@@@ @@@@ @@@@ @@@@ @@@@ do not use table salt or industrial salt , or washing up liquid. @@@@ Green float: approximately every 30 wash cycles; 1. @@ 2. @@ 3.

Position the funnel* provided correctly (see figure) and fill the salt dispenser up to the edges (approximately 2 kg); iachine and the control panel may be cleaned using a nonabrasive cloth which has been dampened with water. do not use solvents or abrasive products. @@@@ @@@@ @@@@ @@@@ Use a small non-metallic brush to clean these parts. 3. @@@@ □ Leave the door of the appliance ajar.

□ When you return, run a wash cycle when the dishwasher is empty. @@The following information has been provided for safety reasons and should therefore be read carefully. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



[You're reading an excerpt. Click here to read official HOTPOINT LI 420.C/HA user guide](http://yourpdfguides.com/dref/4487910)
<http://yourpdfguides.com/dref/4487910>

General safety • The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use. □ The appliance must be used by adults only, to wash domestic crockery according to the instructions in this manual.

□ The appliance must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the machine exposed to rain and storms. □ Do not touch the appliance when barefoot. □ When unplugging the appliance always pull the plug from the mains socket, do not pull on the cable. □ The water supply tap must be shut off and the plug should be removed from the electrical socket before cleaning the appliance or carrying out any maintenance work. □ If the appliance breaks down, do not under any circumstances touch the internal parts in an attempt to carry out the repair work yourself. • Never touch the heating element. □ Do not lean or sit on the open door of the appliance: this may cause the appliance to overturn. @@ □ Keep detergent and rinse aid out of reach of children. @@@@ □ Select a wash cycle that is suited to the type of crockery and to the soil level of the crockery using the Wash cycle table: - for dishes with a normal soil level, use the Eco wash cycle, which guarantees low energy and water consumption levels.

- if the load is smaller than usual activate the Half load option (see Start-up and use). □ If your electricity supply contract gives details of electricity saving time bands, run wash cycles during the periods when a lower tariff is applied. The Delayed start button (see Start-up and use) helps you organise the wash cycles accordingly. Phosphate-free and chlorine-free detergents containing enzymes • We strongly recommend that you use detergents that do not contain phosphates or chlorine, as these products are harmful to the environment. □ Enzymes provide a particularly effective action at temperatures around 50°C, and as a result detergents containing enzymes can be used in conjunction with low-temperature wash cycles in order to achieve the same results as a normal 65°C wash cycle. □ To avoid wasting detergent, use the product in appropriate quantities based on the manufacturer's recommendations, the hardness of the water and the soil level and quantity of the crockery. □ To eliminate the risk of flooding, remove the plug from the electrical socket and contact Assistance. 23 Assistance EN Before calling for Assistance: • Check whether you can solve the problem on your own (see Troubleshooting); • Restart the programme to check whether the problem has been solved; • If this is not the case, contact an authorised Technical Assistance Centre on the telephone number provided on the guarantee certificate. Always request the assistance of authorised servicemen. Notify the operator of: • the type of problem. □ the appliance model (Mod.*

) □ the serial number (S/N). This information can be found on the data plate situated on the internal edge of the stainless steel door (see Description of the appliance). Die Dosie run gents pric ht nic h t der W ass erhärte (sieh e K larsp üle r un d R e g ene rie rsalz). .



[You're reading an excerpt. Click here to read official HOTPOINT LI 420.C/HA user guide](http://yourpdfguides.com/dref/4487910)
<http://yourpdfguides.com/dref/4487910>