



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LI 670 DUO. You'll find the answers to all your questions on the HOTPOINT LI 670 DUO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT LI 670 DUO
User guide HOTPOINT LI 670 DUO
Operating instructions HOTPOINT LI 670 DUO
Instructions for use HOTPOINT LI 670 DUO
Instruction manual HOTPOINT LI 670 DUO



[You're reading an excerpt. Click here to read official HOTPOINT LI 670 DUO user guide](http://yourpdfguides.com/dref/4688822)
<http://yourpdfguides.com/dref/4688822>

Manual abstract:

That the electricity system is in accordance with norms; 2. That the water inlet and outlet hoses are connected correctly; 3. That the dishwasher is level on the ground. @13) @This is where you will find the description of the controls and the internal parts. 3. How to load your dishes (p. 14) This page includes useful tips to help you load your dishwasher correctly and make the most of all the available space. 4. How to start your dishwasher (p. 15) After loading the dishes, you need to select the right wash cycle and measure out the correct dose of detergent and rinse aid.

Reading these pages will help you through all the wash phases. 8. Safety for you and your family (p. 20) Read this chapter carefully, as it will provide you with useful information on installation, use and maintenance safety. 18) Using the right salt and in the right quantity will help you maintain your dishwasher in top condition, to wash better and to avoid possible damage caused by limescale.

21) Once in a while, once a month, spend a little time on the filter assembly and the sprayer arms. This is where you can learn how. 6. Advice and suggestions to help you make savings as well (p. 21) Respect the few rules you will find here, and the result will be an enduring top-shape dishwasher.

This is where you will find small tips on how to wash your dishes better and to help make savings by selecting a wash cycle which best suits the type of load.

20) Before calling the technician, have a look here: a lot of problems can have an immediate solution. If you can't manage to solve it yourself, then call the Ariston helpline and any problem will be solved as quickly as possible. technical characteristics (p. 13) All your appliance's technical data, in accordance with norms and regulations as always. ariston is still with you after purchase (p. 22) Ariston supports its products by means of after-sales services and assistance, offering you special guarantees, professional assistance as well as quality spare parts and accessories. To find out more, call the Ariston Freefone Number. 12 ARISTON DISHWASHER - Instructions for installation and use Let's open up your dishwasher together D ISHWASHER How is it made? @ON-OFF Button Press this button to switch the appliance on. b .

@ e. Extra drying button Press this button for greater drying. p. @ m. @ s. Low salt indicator light This light warns you that it is time to add more salt. t. Low rinse aid indicator light This light warns you that it is time to add more rinse aid. Technical Characteristics T echnical characteristics Width Depth Height Capacity Mains water pressure Power voltage Total absorber power Fuse cm. (Labelling) 97/17/EC 2002/96/EC (Waste Electrical and Electronic Equipment) ARISTON DISHWASHER - Instructions for installation and use 13 D ISHWASHER How to load your dishes First of all.

Before placing the dishes in the racks, remove the largest scraps of food left over on your plates, you will thus avoid blocking the filter, which would reduce the efficacy of the wash. If the saucepans and frying pans are very dirty, allow them to soak before being washed. To make it easier to load your dishes, pull the racks out. Multisystem racks This dishwasher model is fitted with newer and more modern upper and lower racks and a cutlery basket. They are made to provide greater flexibility in loading dishes, making them more suitable to meet your specific needs.

What goes into the lower rack? We recommend you place the most difficult dishes to wash into the lower rack: saucepans, lids, soup dishes and plates, but also: mugs, cups and glasses (see photos for load examples). Serving dishes and large lids: place them on the sides of the rack. Saucepans, salad bowls: must always be placed upside down Very deep dishes: place them obliquely, thus allowing water to run down them and cleaning them better Glasses and cups: Position them as indicated in the figure. The cutlery basket may be split into two parts by pulling out the handle. When you only have little cutlery to wash, you can use just half the basket; save space for other crockery or place the other half of the basket in the upper rack instead (see figures A and B).

This basket is equipped with two removable grids: insert the cutlery one by one into the slots; knives and utensils with sharp blades or tips should be positioned with the sharp parts at the bottom. Position all cutlery items so that they don't touch. It is best if you place longer utensils horizontally at the front of the upper rack. What goes into the upper rack? Place delicate and lightweight dishes in the upper rack: glasses, tea cups and coffee cups, saucers but plates too - shallow salad bowls, slightly dirty frying pans and shallow pans. Position light weight dishes in such a way as to avoid their being moved by the spray of water. The appliance can also be equipped with one or two tip-up compartments onto which you can place mugs and cups, as well as long sharp knives and serving cutlery. After loading the dishes, remember to check that the blades on the sprayer arms can turn freely without hitting against any dishes. How to adjust the top rack. The upper rack can be set in high or low position to enable you to organise your dishes effortlessly. @@@@F A1 4 Open the rail stop flaps and pull the rack out completely.

Now close the rail stop flaps. Follow the sequence of actions illustrated in figure "F". It takes just one minute to learn how First of all. Your appliance is now on and awaiting instructions. @@@@ modifying a wash cycle in progress. But if you have chosen the wrong cycle, not to worry! @@@@ You are now free to re-set the correct wash cycle. You've left out a dish? Well, it happens to everyone. Interrupt the wash cycle by opening the appliance door with the utmost care, as usual, then insert the dish you had forgotten. When you shut the appliance door, the cycle will start up from where you interrupted it. finished? The end of the wash cycle is indicated by a double beep and the flashing of the wash cycle indicator light "M".

Open the dishwasher door, turn off by pressing button AA, unplug the appliance from the electricity socket to cut off the power supply; the power supply cable should consequently be easily accessible. Turn off the water tap. Wait a few minutes before unloading the dishes: they are very hot! If you wait a little while, they dry better thanks to the steam. empty the lower rack first. Make sure the wash cycle has ended before removing the dishes! do you want extra drying? Press button "E" before you start the selected wash cycle.

A long beep will tell you that you have selected extra drying and the wash cycle will last longer in order to provide you with drier dishes. You can cancel the wash cycle in progress, if it has only just started. There's been a power failure? Have you opened the dishwasher door? The wash cycle stops and then restarts when the electricity comes back on or when you shut the door.



[You're reading an excerpt. Click here to read official HOTPOINT LI](http://yourpdfguides.com/dref/4688822)

[670 DUO user guide](http://yourpdfguides.com/dref/4688822)

<http://yourpdfguides.com/dref/4688822>

everything is under control! If opening the door soon after the end of the programme, or during it, stand away from the Dishwasher, to avoid possible injury from hot steam. ARISTON DISHWASHER - Instructions for installation and use 15 D ISHWASHER The detergent Loading the detergent To open lid A, press button B.

The detergent should be poured into the two containers C and D up to the rim. Now you can close the lid: press it down until you hear it click. If you prefer to use the detergent in tablet form, then place one inside the container \hat{A} and close the lid. only use specific dishwasher detergents. Pour the detergent into the dispenser on the inside of the door. before the wash cycle starts! B D C Detergent and rinse aid Useful tips \hat{A} Use the right amount of detergent: if you use too much, you will not get cleaner dishes, but just more environmental pollution. it won't close! Check whether there is any detergent residue on the edges of the dispenser. It is due to this residue that the lid won't close. Get rid of it and you'll see that it closes. \hat{A} Keep your dishwasher detergent and rinse aid in a cool, dry place and away from children.

a The rinse aid. This product makes dishes sparkle more as it improves their drying. The rinse aid container is situated on the inside of the door: It should be filled up when the low rinse aid indicator light "T" flashes. f C Loading the rinse aid. To open the dispenser, turn cap C anticlockwise. Take care when you pour in the rinse aid to avoid it overflowing. You can adapt the amount of rinse aid used by the dishwasher: regulate the adjuster F which you will find under lid C. You can choose from six different positions. it is normally set to 4. Proper dosage of the rinse aid improves drying.

If drops of water remain on the dishes or spotting occurs, turn the dosage adjuster to a higher setting. If, on the other hand, the dishes have white streaks, then turn the dosage adjuster down to a lower setting. Warning Three-in-one dishwasher tablets are now available on the market, and combine detergent, salt and rinse aid all in one. If the water in your area is hard or very hard, we still recommend you pour extra salt into the relevant dispenser to prevent the formation of white streaks on your dishes or on the interior of the appliance. @@@@ 2.

@@@ Salt, rinse aid, the right amount of detergent and the correct wash cycle: this is the formula t towards the left or right to facilitate appropriate installation. levelling. @@ Make sure that it is not inclined more than 2 degrees. If the appliance is level, it will help ensure its correct operation. @@@@ cold water connection.

@@ Do not use a different hose. In the event of replacements, use original spare parts only. @@@@ hot water connection. @@@@ power supply wire. @@ The plug The dishwasher plug must be accessible even when the appliance is installed as a built-in unit so that maintenance can be done safely. drain hose connection. @@ avoid restricting or bending it. @@ The pipe should not be immersed in water. @@@@ electrical connection. @@ ARISTON DISHWASHER - Instructions for the mains power supply (unplug it! @@ 7.

@@ 8. @@ 9. @@ 10. @@@@ If you cannot resolve the problem, then call the service centre. 11. Once taken out of use, appliances must be made inoperable: cut the power supply wire and damage the door lock. 12. Disposal of old electrical appliances The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. 12. Your dishwasher was built in accordance with the strictest international safety regulations.

They protect you and your family. Read the instructions and information contained in this manual: they will provide you with useful hints as to installation, use and maintenance safety. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance. 20 ARISTON DISHWASHER - Instructions for installation and use Cleaning and special maintenance The filter assembly If you want consistent good results from your dishwasher, you need to clean the filter assembly.

The food particles are removed from the wash water, allowing it to be recirculated during the cycle, filtered perfectly. For this reason, it is a good idea to remove the larger food particles trapped inside the cup \hat{A} and the semi-circular filter A after each wash; pull the cup handle upwards to remove them. Just rinse them under running water. The entire filter assembly should be cleaned thoroughly once a month: cup C + semi-circular filter A + cylindrical filter B. rotate filter \hat{A} anticlockwise to remove it.

For cleaning, use a non metallic brush. Reassemble the filter parts (as shown in the figure) and reinsert the whole assembly into the dishwasher. position it into its housing and press downwards. The dishwasher is not to be used without filters. @@@@ cleaning the sprayer arms. @@@@ \hat{A} . C Keep your dishwasher in shape Respecting these few rules ensures you will always have a reliable work companion by your side. after every wash. When the wash cycle has ended, always remember to turn off the water supply tap and to leave the appliance door ajar. This way, moisture and bad odours will not be trapped inside.

unplug the appliance. Before carrying out any cleaning or maintenance on the dishwasher, always remove the plug from the electricity socket. When you go away for an extended period of time, we recommend you do the following: \hat{A} run a cycle with the dishwasher empty \hat{A} turn off the water inlet tap. \hat{A} leave the appliance door ajar This will help the seals last longer and prevent unpleasant odours from forming inside the appliance. moving the appliance. Should the appliance have to be moved, try to keep it in a vertical position. If absolutely necessary, it can be positioned on its back. the seals. One of the factors that cause unpleasant odours to form inside the dishwasher is food that remains trapped in the seals. @@@@ Use a cloth dampened with lukewarm soapy water only.

@@ Your dishwasher is not a waste disintegrator! @@ Empty out all glasses and cups. ARISTON DISHWASHER - Instructions for installation and use 21 D ISHWASHER Stay in touch THANK YOU for choosing an Ariston appliance. We are confident you have made a good choice and that your new appliance will give many years of excellent service. And we're there when you need us. This will confirm your entitlement to free spare parts for five years, and you could also be lucky enough to recover the cost of your purchase in our quarterly prize draw.

Simply complete and return the Registration Form supplied with the appliance documents, using the FREEPOST envelope supplied.



[You're reading an excerpt. Click here to read official HOTPOINT LI 670 DUO user guide](http://yourpdfguides.com/dref/4688822)
<http://yourpdfguides.com/dref/4688822>

or call the Registration Hotline on 0870 010 4305. Enjoy complete peace of mind. By registering now, you automatically qualify for a full year's guarantee on parts and labour PLUS free functional parts cover for a further 4 years, provided they are genuine Ariston spare parts fitted by an Ariston Service Engineer. Register your purchase now We're as close to you as your telephone For direct access to Genuine Ariston Spare Parts and Accessories, call 0870 558 5850 and speak to our skilled staff who can help you to identify and purchase the item you require.

For a Rapid Response to a problem with your appliance, call 0870 607 0805. We're open from Monday to Saturday (8am - 5.30pm weekdays, 9am - 5pm Saturday). We have our own department of highly trained Ariston service staff. For most calls, our Service Engineer can fix the problem on the first visit. 30pm weekdays, 9am - 5pm Saturday). These numbers can be found on the appliance and on the portion of the Registration Card which you retain. .



[You're reading an excerpt. Click here to read official HOTPOINT LI
670 DUO user guide](#)

<http://yourpdfguides.com/dref/4688822>