



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LL 43 S EU.C. You'll find the answers to all your questions on the HOTPOINT LL 43 S EU.C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HOTPOINT LL 43 S EU.C**  
**User guide HOTPOINT LL 43 S EU.C**  
**Operating instructions HOTPOINT LL 43 S EU.C**  
**Instructions for use HOTPOINT LL 43 S EU.C**  
**Instruction manual HOTPOINT LL 43 S EU.C**



[You're reading an excerpt. Click here to read official HOTPOINT LL 43 S EU.C user guide](http://yourpdfguides.com/dref/4689669)

<http://yourpdfguides.com/dref/4689669>

**Manual abstract:**

That the electricity system is in accordance with norms; 2. That the water inlet and outlet hoses are connected correctly; 3. That the dishwasher is level on the ground. 13) Learn to get to know the parts which make up your dishwasher, you will use it better for it. This is where you will find the description of the controls and the internal parts. 3. How to load your dishes (p. 14) This page includes useful tips to help you load your dishwasher correctly and make the most of all the available space. 4. How to start your dishwasher (p.

15) After loading the dishes, you need to select the right wash cycle and measure out the correct dose of detergent and rinse aid. Reading these pages will help you through all the wash phases. 8. Safety for you and your family (p. 11) This is where you can learn how.

6. Advice and suggestions to help you make savings as well (p. 12) This is where you will find small tips on how to wash your dishes better and to help make savings by selecting a wash cycle which best suits the type of load. 20) Before calling the technician, have a look here: a lot of problems can have an immediate solution. If you can't manage to solve it yourself, then call the Ariston helpline and any problem will be solved as quickly as possible.

technical characteristics (p. 13) All your appliance's technical data, in accordance with norms and regulations as always. Ariston is still with you after purchase (p. 22) Ariston supports its products by means of after-sales services and assistance, offering you special guarantees, professional assistance as well as quality spare parts and accessories. To find out more, call the Ariston Freefone Number. 12 ARISTON DISHWASHER - Instructions for installation and use How is it made? Learn to get to know the parts which make up your dishwasher, you will use it better for it. Detergent and rinse aid dispenser Let's open up your dishwasher together G F D 1509)50-4 E J H K I Control panel at your orders A. On-Off button Press this button to switch the appliance on. b. ON-OFF Indicator light This light informs you that the dishwasher is on.

d. Delayed start select button This button delays the start of the wash cycle you selected by 12, 9, 6 or 3 hours. e. Cycle indicator lights This light informs you which cycle you have selected or the one in progress. g. Cycle phase and delayed start indicator lights These indicator lights inform you which cycle phase is under way (pre-wash, wash, rinses, drying) and, if you have set a delayed start; they also indicate the amount of time left until the wash cycle starts. p. Cycle select button Each time this button is pressed, one of the cycle indicator lights E will come on in sequence. r. Start/Reset Button With Start, the wash cycle begins, whereas all the settings are cleared with Reset.

l. S. Low salt indicator light To tell you that it's time to add more salt. t. Low rinse aid indicator light This light warns you that it is time to add more rinse aid. 13) Start/Reset button Delayed start select button ON-OFF indicator light Low Rinse aid indicator light Cycle indicator lights Cycle Select button Cycle phase and delayed start indicator lights ON-OFF button Technical Characteristics Technical Characteristics Width Depth Height Capacity Main water pressure Power voltage Total absorber power Fuse cm. 97/17/CE (Labelling) 2002/96/EC (Waste Electrical and Electronic Equipment) ARISTON DISHWASHER - Instructions for installation and use 13 D 1509)50-4 How to load your dishes First of all.

Before placing the dishes in the racks, remove the largest scraps of food left over on your plates, you will thus avoid blocking the filter, which would reduce the efficacy of the wash. If the saucepans and frying pans are very dirty, allow them to soak before being washed. To make it easier to load your dishes, pull the racks out. What goes into the lower rack? We recommend you place the most difficult dishes to wash into the lower rack: saucepans, lids, soup dishes and plates (a load example is shown in the photo). Serving dishes and large lids: place them on the sides of the rack.

Saucepans, salad bowls: must always be placed upside down Very deep dishes: place them obliquely, thus allowing water to run down them and cleaning them better Glasses and cups: position them as indicated in the figure. Place the cutlery with the handles at the bottom; if the basket is the one with side inserts, then insert the tea spoons one by one into the slots (see figure A). Knives and other utensils with sharp point must be loaded in the basket with their point down or placed in a horizontal position in the upper basket equipped with one or two tip up compartments. Position all cutlery items so that they don't touch. It is best if you place longer utensils horizontally at the front of the upper rack. After loading the dishes, remember to check that the blades on the sprayer arms can turn freely without hitting against any dishes. What goes into the upper rack? Place delicate and lightweight dishes in the upper rack: glasses, tea cups and coffee cups, saucers - but plates too - shallow salad bowls, slightly dirty frying pans and shallow pans. Position light weight dishes in such a way as to avoid their being moved by the spray of water. After loading the dishes, remember to check that the blades on the sprayer arms can turn freely without hitting against any dishes. How to adjust the top rack.

The upper rack can be set in high or low position to enable you to organise your dishes effortlessly. Before washing, a few small steps can help you get a better wash and keep your dishwasher for longer. Remove the largest scraps of food left over on your plates, soak saucepans and frying pans with tough incrustations. After loading your dishes, make sure the blades on the sprayer arm turn well Loading examples for the upper rack 1 2 3 Fig. F 4 Loading examples for the lower rack Open the rail stop flaps and pull the rack out completely. Now place it in high or low position, then slide it along the guide rails until the front wheels also go in. Now close the rail stop flaps. Follow the sequence of actions illustrated in figure "F". a1 Fig. A 14 ARISTON DISHWASHER - Instructions for installation and use You have loaded your dishes and you now have to set the wash cycle.

It takes just one minute to learn how First of all. Turn on the water tap completely and press ON-OFF button "A". You will hear a short beep and indicator light "B" lights up. Each time you press the button, a beep will sound and indicator lights "E" will light up in sequence: choose the cycle you deem most suited to the type of dishes to be washed (take a look at page 17, where you will find the wash cycle table).



[You're reading an excerpt. Click here to read official HOTPOINT LL](http://yourpdfguides.com/dref/4689669)

[43 S EU.C user guide](http://yourpdfguides.com/dref/4689669)

<http://yourpdfguides.com/dref/4689669>

If the appliance door is shut, press the Start button "R" and you will hear a beep; the cycle will start up within a few seconds. the dishwasher informs you. Your dishwasher is fitted with indicator lights (G) which light up to indicate the cycle phase under way. Well, it happens to everyone. The cycle will start up from where you interrupted it. finished? Turn off the water tap. If you wait a little while, they dry better thanks to the steam. Starting the dishwasher D 1509)50-4 pre-wash, wash, rinses, drying. modifying a wash cycle in progress. But if you have chosen the wrong cycle, not to worry! You are now free to re-set the correct wash cycle. Make sure the wash cycle has ended before removing the dishes! You decide when it starts. Each time you press it, you will hear a short beep and the indicator light "G" corresponding to the selected delay will light up. Now you can select the desired wash cycle. Press the start button "R" and after you hear the beep, the countdown to the delayed start will begin. Once this time is up, the indicator light will stop flashing and the wash cycle will begin. If you have set a 12 hour delay, for example, once you have selected the wash cycle, the 12 hour indicator light will flash followed by the others in sequence until the set time delay is up.

A quick look at the indicator lights will keep you informed of the countdown progress at all times. Have you changed your mind? If you change your mind, you can set a shorter time delay: press button "D" to select it. You need not reset the wash cycle. If on the other hand you want to cancel the delay set and you want the cycle to start immediately, press button "D" repeatedly until the cycle starts and indicator light "G" corresponding to the cycle start phase comes on. Dual function of indicator lights "G" 1) flashing to indicate a delayed start: to remind you that you have set a delayed start; 2) on and not flashing beneath the cycle phase symbol: meaning the cycle has started and is in the phase indicated by the symbol. Would you like to see which settings you have made? At any time, when the cycle is under way, if you press button "P", the cycle in progress indicator light will light up for a few seconds. There's been a power failure? Have you opened the dishwasher door? The wash cycle stops and then restarts when the electricity comes back on or when you shut the door. everything is under control! If opening the door soon after the end of the programme, or during it, stand away from the Dishwasher, to avoid possible injury from hot steam. ARISTON DISHWASHER - Instructions for installation and use 15 D 1509)50-4 The detergent Loading the detergent To open lid A, press button B. The detergent should be poured into the two containers C and D up to the rim.

Now you can close the lid: press it down until you hear it click. If you prefer to use the detergent in tablet form, then place one inside the container and close the lid. Detergent and rinse aid Useful tips Use the right amount of detergent: if you use too much, you will not get cleaner dishes, but just more environmental pollution. only use specific dishwasher detergents. Pour the detergent into the dispenser on the inside of the door.

before the wash cycle starts! B D C Keep your dishwasher detergent and rinse aid in a cool, dry place and away from children. it won't close! Check whether there is any detergent which is intended for dishwasher use. The salt container is situated underneath the lower rack, fill it up as follows: 1. Pull out the lower rack completely, unscrew and remove the container cap 2. Is it the first time you load the salt? First fill the container up with water (you won't have to do this again next time) 3.

Put the dishwasher funnel on the hole and pour in approximately two kilos of salt. It is normal that some water comes out of the container. 4. Screw the cap back in place carefully. Water hardness varies according to where you live. If the water is too hard The dishwasher won't start 1 Is the water supply tap turned on? 1 Is the water supply tap connected to the hose properly? 1 Has the water in your home been cut off? 1 Is the pressure of the water supply sufficient? 1 Is the hose bent? 1 Is the filter on the water supply hose blocked? 1 Is the dishwasher door open? If you have a problem, read this Limescale deposits or a white film form on the dishes. Your dishwasher may not work or not function properly. Before calling the service centre, always check the points below. Then turn the appliance back on. water load solenoid valve malfunction alarm.

1 Is the lid on the salt container closed properly? 1 Is the rinse aid dosage correct? error messages. You have checked everything, but the dishwasher still doesn't work and the problem persists? The dishes are not clean. I Have you put the right amount of detergent into the dispenser? 1 Is the wash cycle suitable for the dishes you have placed inside the appliance? 1 Are the filter and microfilter clean? 1 Can the sprayer arms turn freely? Tap off alarm The dishwasher won't drain. 1 Is the drain hose bent? If you have forgotten to turn the water tap on, your appliance will remind you of this by sounding a few short beeps for a few minutes. Turn the tap on and your appliance will start up again after a few minutes. Were you to be absent when these beeps are sounded, the appliance will be blocked au- Call an authorised service centre near you and remember to mention: the type of malfunction the model mark (Mod ) and the serial number (S/N ) indicated on the rating plate located on the inner door, to one side. 1 Is the drain hose bent? Safety within your home 1. Dispose of the packaging material carefully (follow the instructions on how to divide your rubbish up provided by your local Council) After removing the packaging, check to make sure your appliance is intact.

if in doubt, contact a qualified professional. Your dishwasher must only be used by adults and for washing household dishes, according to the instructions included in this manual. Do not touch the appliance with wet hands or feet or barefoot. we discourage the use of extension leads and multiple plugs. If the electricity supply wire is not long enough, then have it replaced with one of the correct length and remember that it should be free of bends or dangerous kinks.

5. If the appliance is not operating properly or if maintenance operations are necessary, disconnect the dishwasher from the mains power supply (unplug it! Keep children away from the dishwasher when it is open and keep detergents out of their reach. 7. Your dishwasher is not to be installed outdoors, not even if the area is covered by a roof: it is extremely dangerous to leave it exposed to rain and thunderstorms.



[You're reading an excerpt. Click here to read official HOTPOINT LL 43 S EU.C user guide](http://yourpdfguides.com/dref/4689669)  
<http://yourpdfguides.com/dref/4689669>

Do not touch the heating element during or straight after a wash cycle. 9. Do not lean or sit on the door when it is open, as this could overturn the dishwasher. 10. If the appliance malfunctions, turn off the Your dishwasher was built in accordance with the strictest international safety regulations. They protect you and your family. Read the instructions and information contained in this manual: they will provide you with useful hints as to installation, use and maintenance safety. to avoid nasty surprises. Water inlet tap and disconnect the plug from the wall socket. Then try consulting the section entitled "I you have a problem, read this".

If you cannot resolve the problem, then call the service centre. 11. Once taken out of use, appliances must be made inoperable: cut the power supply wire and damage the door lock. 12. The door should not be left in the open position since this could present a tripping hazard. 13. Disposal of old electrical appliances The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. @@@@ Cleaning and special maintenance The filter assembly If you want consistent good results from your dishwasher, you need to clean the filter assembly. The food particles are removed from the wash water, allowing it to be recirculated during the cycle, filtered perfectly. For this reason, it is a good idea to remove the larger food particles trapped inside the cup and the semicircular filter A after each wash; pull the cup handle upwards to remove them.

Just rinse them under running water. The entire filter assembly should be cleaned thoroughly once a month: cup C + semi-circular filter A + cylindrical filter B. rotate filter anticlockwise to remove it. For cleaning, use a non metallic brush. position it into its housing and press downwards.

The dishwasher is not to be used without filters. 1 B 2 A Cleaning the sprayer arms. C Keep your dishwasher in shape Respecting these few have a reliable work rules ensures you companion by your will always side. after every wash. When the wash cycle has ended, always remember to turn off the water supply tap and to leave the appliance door ajar.

This way, moisture and bad odours will not be trapped inside. unplug the appliance. Before carrying out any cleaning or maintenance on the dishwasher, always remove the plug from the electricity socket. When you go away for an extended period of time, we recommend you do the following: run a cycle with the dishwasher empty turn off the water inlet tap. leave the appliance door ajar This will help the seals last longer and prevent unpleasant odours from forming inside the appliance. moving the appliance. Should the appliance have to be moved, try to keep it in a vertical position. If absolutely necessary, it can be positioned on its back. the seals. One of the factors that cause unpleasant odours to form inside the dishwasher is food that remains trapped in the seals.

Periodic cleaning using a damp sponge will prevent this from occurring. To clean the exterior and rubber parts of your appliance, do not use solvents or abrasive cleaning products. Use a cloth dampened with lukewarm soapy water only. If there are any stains on the surface of the appliance interior, use a cloth dampened with water and a little white vinegar, or a cleaning product specifically made for dishwashers. Your dishwasher is not a waste disintegrator! Do not worry about removing every single bit of food residue from your dishes, but do get rid of bones, peel and rind and any other left-overs before placing them in the racks. Empty out all glasses and cups. ARISTON DISHWASHER - Instructions for installation and use 21 D 1509)50-4 Stay in touch THANK YOU for choosing an Ariston appliance. We are confident you have made a good choice and that your new appliance will give many years of excellent service. And we're there when you need us. Register your purchase now This will confirm your entitlement to free spare parts for five years, and you could also be lucky enough to recover the cost of your purchase in our quarterly prize draw.

Simply complete and return the Registration Form supplied with the appliance documents, using the FREEPOST envelope supplied. or call the Registration Hotline on 0870 010 4305. Enjoy complete peace of mind. By registering now, you automatically qualify for a full year's guarantee on parts and labour PLUS free functional parts cover for a further 4 years, provided they are genuine Ariston spare parts fitted by an Ariston Service Engineer. We're as close to you as your telephone For direct access to Genuine Ariston Spare Parts and Accessories, call 0870 558 5850 and speak to our skilled staff who can help you to identify and purchase the item you require.

For a Rapid Response to a problem with your appliance, call 0870 607 0805. We're open from Monday to Saturday (8am - 5. 30pm weekdays , 9am - 5pm Saturday). We have our own department of highly trained Ariston service staff. For most calls, our Service Engineer can fix the problem on the first visit. 30pm weekdays , 9am - 5pm Saturday). These numbers can be found on the appliance and on the portion of the Registration Card which you retain. .



[You're reading an excerpt. Click here to read official HOTPOINT LL 43 S EU.C user guide](http://yourpdfguides.com/dref/4689669)