



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LSF 825 FR/HA. You'll find the answers to all your questions on the HOTPOINT LSF 825 FR/HA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HOTPOINT LSF 825 FR/HA**  
**User guide HOTPOINT LSF 825 FR/HA**  
**Operating instructions HOTPOINT LSF 825 FR/HA**  
**Instructions for use HOTPOINT LSF 825 FR/HA**  
**Instruction manual HOTPOINT LSF 825 FR/HA**

**Mode d'emploi**

LAVE-VAISSELLE

FR EN

Français, 1 English, 13

LSF 825

**Sommaire**

**Installation, 2-3**  
Mise en place et mise à niveau  
Raccordements eau et électricité  
Conseils pour le premier lavage  
Caractéristiques techniques

**Description de l'appareil, 4**  
Vue d'ensemble  
Tableau de bord

**Charger les paniers, 5**  
Panier inférieur  
Panier à couvercle  
Panier supérieur

**Mise en marche et utilisation, 6-7**  
Mettre en marche le lave-vaisselle  
Charger le produit de lavage  
Options de lavage

**Programmes, 8**  
Tableau des programmes

**Produit de rinçage et sel régénérant, 9**  
Charger le produit de rinçage  
Charger le sel régénérant

**Entretien et soin, 10**  
Coupeure de l'arrivée d'eau et de courant  
Nettoyer le lave-vaisselle  
Éviter les mauvaises odeurs  
Nettoyer les bras de lavage  
Nettoyage du filtre d'entrée d'eau  
Nettoyer les filtres  
En cas d'absence pendant de longues périodes

**Précautions, conseils et assistance technique, 11**  
Sécurité générale  
Mise au rebut  
Economies et respect de l'environnement  
Assistance

**Anomalies et remèdes, 12**

**Hotpoint**  
**ARISTON**

1



[You're reading an excerpt. Click here to read official HOTPOINT LSF 825 FR/HA user guide](http://yourpdfguides.com/dref/4488819)  
<http://yourpdfguides.com/dref/4488819>

**Manual abstract:**

□ To a suitable hot water connection point: your dishwasher may be supplied with hot water from the mains supply (if you have a central heating system with radiators) provided that it does not exceed a temperature of 60°C. Screw the hose to the tap as described for connection to a cold water supply. If the inlet hose is not long enough, contact a specialist store or an authorised technician (see Assistance). @@The hose should not be bent or compressed. positioning and levelling 1. @@@@ 2. @@This appliance can also be recessed under a single worktop\* (see the Assembly instruction sheet). 3. Position the dishwasher on a level and sturdy floor. If the floor is uneven, the front feet of the appliance may be adjusted until it reaches a horizontal position.

If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating. 4\*. Adjust the height of the rear foot from the front of the appliance\* on the central lower part of the dishwasher, turning a hexagonal spanner (red color) with an opening of 8 mm in a clockwise direction to increase the height or in an anticlockwise direction to decrease the height. Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance.

Some models are also equipped with the supplementary safety device New Acqua Stop\*, which guarantees antiflooding protection even in the event of a supply hose rupture.

Connecting the water and electricity supplies Connection to the water and electricity supplies should only be performed by a qualified technician. The dishwasher should not stand on top of the water hoses or the electricity supply cable. The appliance must be connected to the water supply network using new hoses. Do not use old hoses. The water inlet (A) and outlet (B) hoses and the electricity supply cable may be positioned towards the right or the left in order to achieve the best possible installation (see figure).

wARNING: HAZARDOUS VOLTAGE! Under no circumstance should the water inlet hose be cut as it contains live electrical parts. \* Only available in selected models. 14 Connecting the water outlet hose Connect the outlet hose (without bending it) to a drain duct with a minimum diameter of 4 cm.

Alternatively, rest it over a sink or tub; the free end of the hose should not remain immersed in water. The special plastic elbow\* makes it easier to find the best layout: fix the elbow to the wall securely in order to prevent the outlet hose from moving and spilling the dirty water. The part of the hose marked with the letter A should be between 40 and 100 cm above the ground (see figure). Anti-condensation strip\* After installing the dishwasher, open the door and stick the adhesive transparent strip under the wooden shelf in order to protect it from any condensation which may form. EN A After the appliance has been installed, immediately before running the first wash cycle, completely fill the salt dispenser with water and add only then approximately 1 kg of salt (see chapter entitled Rinse aid and refined salt). The water may overflow: this is normal and is not a cause for concern. select the water hardness value (see chapter entitled Rinse aid and refined salt).

- After the salt has been poured into the machine, the LOW SALT indicator light\* switches off. If the salt container is not filled, the water softener and the heating element may be damaged as a result. Advice regarding the first wash cycle We advise against the use of hose extensions. Electrical connection Technical data Before inserting the plug into the electrical socket, make sure that: □ The socket is earthed and complies with current regulations. □ The socket can withstand the maximum load of the appliance, which is indicated on the data plate located on the inside of the door (see chapter entitled Description of the appliance). □ The power supply voltage falls within the values indicated on the data plate on the inside of the door. □ The socket is compatible with the plug of the appliance. If this is not the case, ask an authorised technician to replace the plug (see Assistance); do not use extension cables or multiple sockets. Once the appliance has been installed, the power supply cable and the electrical socket should be easily accessible. The cable should not be bent or compressed.

If the power supply cable is damaged, it must be replaced by the manufacturer or its Technical Assistance Service in order to prevent all potential hazards. (See Assistance) The Company shall not be held responsible for any incidents that occur if these regulations are not observed. 10 bar) 7,25 psi – 145 psi See appliance data plate Total absorbed See appliance data plate power Fuse See appliance data plate This dishwasher conforms to the following European Community Directives: -2006/95/EEC dated 16/01/2007 (Low Voltage) and subsequent modifications -89/336/EEC dated 03/05/89 (Electromagnetic Compatibility) and subsequent modifications -97/17/EC (Labelling) -2002/96/ CE Waste Electrical and Electronic Equipment (WEEE) \* Only available in selected models. Upper rack Upper sprayer arm Tip-up compartments Rack height adjuster Lower rack Lower sprayer arm Cutlery basket Washing filter Salt dispenser Detergent and rinse aid dispensers Data plate Control Panel\*\*\* Control panel Select wash cycle button ON/OFF/RESET button Display Start/Pause button and indicator light Half load button Delayed start button Multi-functional Tablets button Display Washing indicator light Low Rinse aid indicator light Wash cycle number light-up indicator Delayed start indicator light Low Salt indicator light Multi-functional tablets indicator light Half load indicator light Drying indicator light Time remaining light-up display \*\*\*Only in completely built-in models. \* Only available in selected models.

The number and type of wash cycles and options may vary depending on the dishwasher model. 16 Loading the racks Before loading the racks, remove all food residues from the crockery and empty liquids from glasses and cups. Arrange the crockery so that it is held in place firmly and does not tip over. After loading the appliance, check that the sprayer arms can rotate freely. Tilt A Tilt B Tilt C EN Lower rack The lower rack can hold pans, lids, plates, salad bowls, cutlery, etc.

As seen in the Loading examples. Plates and large covers should be placed at the sides of the rack, ensuring that they do not block the rotation of the upper sprayer arm. Some dishwasher models are fitted with tip-up sections\*, which can be used in a vertical position when arranging plates or in a horizontal position when arranging pans and salad bowls. -Lift the tip-up compartment, slide it gently and position it in the desired tilt angle. @@@@Never lift or lower the rack on one side only. @@@@ Items made from aluminium, copper, brass, pewter or tin.



[You're reading an excerpt. Click here to read official HOTPOINT LSF](#)

[825 FR/HA user guide](#)

<http://yourpdfguides.com/dref/4488819>

□ Items made from plastic material which is not heat-resistant. Silver which is not antique may, however, be washed in the dishwasher using a delicate wash cycle, provided that it does not come into contact with other metals. We recommend the use of crockery which is dishwasher safe. \*Only available in selected models.

\*\* The number and position may vary. Press the ON/OFF button: all the indicator lights on the control panel will light up for a few seconds. Load the racks (see Loading the racks) and shut the door. 5. Select the wash cycle in accordance with the type of crockery and its soil level (see Table of wash cycles) by pressing the P button. Start the cycle by pressing the Start/Pause button (fixed light). A long beep signals the start of the wash cycle; the wash cycle indicator light is illuminated and the time remaining until the end of the cycle is displayed. 8. Two short beeps and one long one indicate the end of the wash cycle; the Start/Pause button switches off and the word END appears on the display. Switch off the appliance by pressing the ON/OFF button, shut off the water valve and unplug the appliance from the electricity socket.

9. Wait for a few minutes before removing the crockery, in order to avoid burns. Unload the racks, beginning with the lower level. Accidental interruptions If the door is opened during the wash cycle, or if there is a power cut, the cycle stops. It starts again from the point at which it was interrupted once the door has been shut or once the electricity supply is restored.

Measuring out the detergent A good wash result also depends on the correct down will begin. The selected delay period indicator light is displayed and the Start/Pause button stops flashing (the light becomes fixed instead). 3. When the set time has elapsed, a long beep sounds, the DELAYED START indicator light switches off and the wash cycle begins. To deselect the DLEAYED START option, press the DELAYED START button repeatedly until the text OFF appears.

The Delayed Start function cannot be set once the wash has been started. Delayed start The MULTI-FUNCTIONAL TABLETS option remains set for subsequent wash cycles if it is not deselected. The use of tablets is only recommended for models which offer the MULTI-FUNCTIONAL TABLETS option. This option is not recommended for use with wash cycles which do not specify the use of multi-functional tablets (see Table of options). This option is incompatible with the following wash cycle: Soak. 19 Wash cycles EN If the crockery is only lightly soiled or if it has been rinsed with water before being placed in the dishwasher, reduce the amount of detergent used accordingly. The number and type of wash cycles and options may vary depending on the dishwasher model. For available OPTIONS please refer to the Table of options on the Start-up and use page. Pre-wash for dishes while awaiting completion of the load with the dishes from the next meal. Environmentally-friendly wash cycle with low energy consumption levels, suitable for pans and dishes.

Economic and fast wash to be used for lightly s. @@@@The lower sprayer arm can be removed by pulling it upwards. @@ - Turn off the water tap. @@ - Replace the filter and screw the water hose back into position. @@@@ clean the filters regularly. @@@@Inspect the trap and remove any food residue. @@If the water hoses are new or have not been used for an extended period of time, let the water run to make sure it is clear and free of impurities before performing the necessary connections. If this precaution is not taken, the water inlet could become blocked and damage the dishwasher. Cleaning the water inlet filter\* Leaving the machine unused for extended periods □ Disconnect the appliance from the electricity supply and shut off the water tap. □ Leave the door of the appliance ajar.

□ When you return, run a wash cycle when the dishwasher is empty. 22 \* Only available in selected models. Precautions, advice and Assistance This appliance was designed and manufactured in compliance with current international safety standards. The following information has been provided for safety reasons and should therefore be read carefully. Saving energy and respecting the environment Saving water and energy □ Only begin a wash cycle when the dishwasher is full.

While waiting for the dishwasher to be filled, prevent unpleasant odours using the Soak cycle (see Wash cycles). □ Select a wash cycle which is suited to the type of crockery and to the soil level of the crockery using the Table of wash cycles: - For dishes with a normal soil level, use the Eco wash cycle, which guarantees low energy and water consumption levels. - If the load is smaller than usual activate the Half load option\* (see Start-up and use). □ If your electricity supply contract gives details of electricity saving time bands, run wash cycles during the periods when a lower tariff is applied. The Delayed start\* button (see Start-up and use) helps you organise the wash cycles accordingly.

EN General safety □ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. □ Children should be supervised to ensure that they do not play with the appliance. □ The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use. □ The appliance must be used by adults only, to wash domestic crockery in accordance with the instructions in this manual. □ The appliance must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the machine exposed to rain and storms. □ Do not touch the appliance when barefoot. □ When unplugging the appliance always pull the plug from the mains socket, do not pull on the cable. @@@@ Never touch the heating element. @@@@ □ Keep detergent and rinse aid out of reach of children.

□ The packaging material should not be used as a toy. Phosphate-free and chlorine-free detergents containing enzymes □ We strongly recommend that you use detergents that do not contain phosphates or chlorine, as these products are harmful to the environment. □ Enzymes provide a particularly effective action at temperatures around 50°C, and as a result detergents containing enzymes can be used in conjunction with lowtemperature wash cycles in order to achieve the same results as a normal 65°C wash cycle. □ To avoid wasting detergent, use the product in appropriate quantities based on the manufacturer's recommendations, the hardness of the water and the soil level and quantity of crockery to be washed. Even if they are biodegradable, detergents contain substances which may alter the balance of nature. @@@@For further information relating to the correct disposal of household appliances, owners may contact the relevant public authority or the local appliance dealer.



[You're reading an excerpt. Click here to read official HOTPOINT LSF 825 FR/HA user guide](http://yourpdfguides.com/dref/4488819)  
<http://yourpdfguides.com/dref/4488819>

Assistance □ Check whether the problem can be resolved using the Troubleshooting guide (see Troubleshooting). □ Restart the programme to check whether the problem has ceased to exist. □ If the problem persists, contact the Authorised Technical Assistance Service. Never use the services of unauthorised technicians.

Before contacting Assistance: Please have the following information to hand: □ The type of malfunction. This information can be found on the appliance data plate (see Description of the appliance). 00 Whenever the appliance fails to work, check for a solution from the following list before calling for Assistance.

malfunction: The dishwasher does not start. Possible causes / Solutions: • The plug has not been inserted into the electrical socket properly, or there is no power in the house.

□ An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers (see Start-up and use). □ The level of the refined salt is low or the dosage setting is not suited to the hardness of the water (see Rinse aid and salt). The dishes and glasses are covered in a white film or lime scale deposits. The dishes and glasses are streaked or have a bluish tinge. The crockery has not been dried properly.

□ A wash cycle without a drying programme has been selected. The dishes are not clean. •••••••• The dishwasher does not take any water in/Tap shut-off alarm. (several short beeps are emitted) (The display shows A:6). □ •••••• The racks are overloaded (see Loading the racks). The crockery has not been arranged well. the sprayer arm cannot move freely. The wash cycle is too gentle (see Wash cycles). An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers (see Start-up and use). The lid on the rinse aid compartment has not been shut correctly.

The filter is dirty or blocked (see Care and maintenance). The refined salt level is low (see Rinse aid and salt). There is no water in the mains supply. the water inlet hose is bent (see Installation). Turn on the tap and the appliance will start after a few minutes. The appliance lock has been activated because no action was taken when the beeps sounded. Switch off the machine using the ON/OFF button, turn on the tap and switch the machine back on after 20 seconds by pressing the same button. Re-programme the machine and restart the wash cycle. Switch off the appliance by pressing the ON/OFF button and switch it back on after one minute. If the alarm continues, shut off the water tap to eliminate the risk of flooding, remove the plug from the electrical socket and contact Assistance.

Switch off the appliance by pressing the ON/OFF button. Shut off the water tap to eliminate the risk of flooding and remove the plug from the electrical socket. Make sure the water inlet filter has not become blocked by various impurities. .



[You're reading an excerpt. Click here to read official HOTPOINT LSF 825 FR/HA user guide](http://yourpdfguides.com/dref/4488819)  
<http://yourpdfguides.com/dref/4488819>