

Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for HOTPOINT LSFA 935 EU/HA. You'll find the answers to all your questions on the HOTPOINT LSFA 935 EU/HA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HOTPOINT LSFA 935 EU/HA
User guide HOTPOINT LSFA 935 EU/HA
Operating instructions HOTPOINT LSFA 935 EU/HA
Instructions for use HOTPOINT LSFA 935 EU/HA
Instruction manual HOTPOINT LSFA 935 EU/HA

Istruzioni per l'uso

LAVASTOVIGLIE



LSFA+ 935

Sommario

Installazione, 2-3

Posizionamento e livellamento
Collegamenti idraulici ed elettrici
Avvertenze per il primo lavaggio
Dati tecnici
Ecodesign Regulation

Descrizione dell'apparecchio, 4

Vista d'insieme
Pannello comandi

Caricare i cestelli, 5

Cestello inferiore
Cestello delle posate
Cestello superiore

Avvio e utilizzo, 6-7

Avviare la lavastoviglie
Cancare il detersivo
Opzioni di lavaggio

Programmi, 8

Tabella dei programmi

Brillantante e sale rigenerante, 9

Caricare il brillantante
Caricare il sale rigenerante

Manutenzione e cura, 10

Escludere acqua e corrente elettrica
Pulire la lavastoviglie
Evitare i cattivi odori
Pulire gli inverteri
Pulizia filtro entrata acqua
Pulire i filtri

Se ci si assenta per lunghi periodi

Precauzioni, consigli e Assistenza, 11

Sicurezza generale
Smaltimento
Risparmiare e rispettare l'ambiente
Prima di contattare l'Assistenza Tecnica

Anomalie e rimedi, 12



KZ.02.0301



[You're reading an excerpt. Click here to read official HOTPOINT LSFA 935 EU/HA user guide](http://yourpdfguides.com/dref/5005417)
<http://yourpdfguides.com/dref/5005417>

Manual abstract:

Connecting the water inlet hose To a suitable cold water connection point: before attaching the hose, run the water until it is perfectly clear so that any impurities that may be present in the water do not clog the appliance; after performing this operation, screw the inlet hose tightly onto a tap with a 3/4 gas threaded connection. To a suitable hot water connection point: your dishwasher may be supplied with hot water from the mains supply (if you have a central heating system with radiators) provided that it does not exceed a temperature of 60°C. Screw the hose to the tap as described for connection to a cold water supply. The hose should not be bent or compressed. positioning and levelling 1. 2. Check the dishwasher by placing it so that its sides or back panel are in contact with the adjacent cabinets or even with the wall. This appliance can also be recessed under a single worktop* (see the Assembly instruction sheet). 3. Position the dishwasher on a level and sturdy floor.

If the floor is uneven, the front feet of the appliance may be adjusted until it reaches a horizontal position. If the appliance is levelled correctly, it will be more stable and much less likely to move or cause vibrations and noise while it is operating. Connecting the water outlet hose Connect the outlet hose (without bending it) to a drain duct with a minimum diameter of 4 cm. The outlet hose must be at a height ranging from 40 to 80 cm from the floor / surface where the dishwasher rests (A). Before connecting the water outlet hose to the sink drain, remove the plastic plug (B).

Anti-flooding protection To ensure floods do not occur, the dishwasher: - is provided with a special system which blocks the water supply in the event of anomalies or leaks from inside the appliance. Some models are also equipped with the supplementary safety device New Acqua Stop*, which guarantees antiflooding protection even in the event of a supply hose rupture. Connecting the water and electricity supplies Connection to the water and electricity supplies should only be performed by a qualified technician. The dishwasher should not stand on top of the water hoses or the electricity supply cable. The appliance must be connected to the water supply network using new hoses.

Do not use old hoses. The water inlet and outlet hoses and the electricity supply cable may be positioned towards the right or the left in order to achieve the best possible installation. 14 WARNING: HAZARDOUS VOLTAGE! Under no circumstance should the water inlet hose be cut as it contains live electrical parts. * Only available in selected models. Electrical connection Before inserting the plug into the electrical socket, make sure that: The socket is earthed and complies with current regulations. The socket can withstand the maximum load of the appliance, which is indicated on the data plate located on the inside of the door (see chapter entitled Description of the appliance). The power supply voltage falls within the values indicated on the data plate on the inside of the door. The socket is compatible with the plug of the appliance. If this is not the case, ask an authorised technician to replace the plug (see Assistance); do not use extension cables or multiple sockets. Once the appliance has been installed, the power supply cable and the electrical socket should be easily accessible.

The cable should not be bent or compressed. If the power supply cable is damaged, it must be replaced by the manufacturer or its Technical Assistance Service in order to prevent all potential hazards. (See Assistance) The Company shall not be held responsible for any incidents that occur if these regulations are not observed. Anti-condensation strip* After installing the dishwasher, open the door and stick the adhesive transparent strip under the wooden shelf in order to protect it from any condensation which may form. EN Advice regarding the first wash cycle After the appliance has been installed, immediately before running the first wash cycle, completely fill the salt dispenser with water and add only then approximately 1 kg of salt (see chapter entitled Rinse aid and refined salt). The water may overflow: this is normal and is not a cause for concern. select the water hardness value (see chapter entitled Rinse aid and refined salt). After the salt has been poured into the machine, the LOW SALT indicator light* switches off. If the salt container is not filled, the water softener and the heating element may be damaged as a result. 10 bar 7,25 psi 145 psi See appliance data plate Total absorbed See appliance data plate power Fuse See appliance data plate This dishwasher conforms to the following European Community Directives: -2006/95/EC (Low Voltage) -2004/108/EC (Electromagnetic Compatibility) -2005/32/EC (Comm.

reg. 1275/2008) (Ecodesign) -97/17/EC (Labelling) -2002/96/ CE Waste Electrical and Electronic Equipment (WEEE) ECODESIGN REGULATION ECO wash cycle is the standard cycle to which the energy label data refers; this cycle can be used to wash crockery with a normal soil level and is the most efficient in terms of energy and water consumption for this type of crockery. To reduce consumption even further, only run the dishwasher when it is full. reg. ** Data is obtained by recording values when the appliance is operational and loaded with user crockery.

Upper rack Upper sprayer arm Tip-up compartments Rack height adjuster Lower rack Lower sprayer arm Cutlery basket Washing filter Salt dispenser Detergent and rinse aid dispensers Data plate Control Panel*** Control panel Select wash cycle button ON/OFF/RESET button Display Start/Pause button and indicator light Half load button Delayed start button Multi-functional Tablets button Display Washing indicator light Low Rinse aid indicator light Wash cycle number light-up indicator Drying indicator light Time remaining light-up display Delayed start indicator light Low Salt indicator light Multi-functional tablets indicator light Half load indicator light ***Only in completely built-in models. * Only available in selected models. The number and type of wash cycles and options may vary depending on the dishwasher model. 16 Loading the racks Before loading the racks, remove all food residues from the crockery and empty liquids from glasses and cups. Arrange the crockery so that it is held in place firmly and does not tip over.

After loading the appliance, check that the sprayer arms can rotate freely. Tilt A Tilt B Tilt C EN Lower rack The lower rack can hold pans, lids, plates, salad bowls, cutlery, etc. As seen in the Loading examples. Plates and large covers should be placed at the sides of the rack, ensuring that they do not block the rotation of the upper sprayer arm. Some dishwasher models are fitted with tip-up sections*, which can be used in a vertical position when arranging plates or in a horizontal position when arranging pans and salad bowls.



[You're reading an excerpt. Click here to read official HOTPOINT LSF A 935 EU/HA user guide](http://yourpdfguides.com/dref/5005417)
<http://yourpdfguides.com/dref/5005417>

-Lift the tip-up compartment, slide it gently and position it in the desired tilt angle. Adjusting the height of the upper rack In order to make it easier to arrange the crockery, the upper rack may be moved to a higher or lower level. The height of the upper rack should ideally be adjusted WHEN THE RACK IS EMPTY. Never lift or lower the rack on one side only. Open the left and right guide rail stops and pull out the rack; position it higher or lower as required, slide it along the guide rails until the front wheels are in place and close the stops (see figure).

If the rack is fitted with **âDual Spaceâ handles*** (see figure), pull out the upper rack until it reaches its stop point, grip the handles at the sides of the rack and move it upwards or downwards, then slowly let it fall back into place. Cutlery basket The type of cutlery basket may vary according to the dishwasher model: The cutlery basket should be positioned at the front of the lower rack, by sliding it between the fixed inserts, or on the upper rack when the half load option has been selected (in models featuring this option). - It has a collapsible sliding system which means the cutlery can be arranged in the best possible way. Knives and other utensils with sharp edges must be placed in the cutlery basket with the points facing downwards, or they must be positioned horizontally in the tip-up compartments on the upper rack. @@@@We recommend the use of crockery which is dishwasher safe. @@
*Only available in selected models. ** The number and position may vary. @@Load the racks (see Loading the racks) and shut the door. 5. @@Start the cycle by pressing the Start/Pause button (fixed light).

@@ 8. @@Switch off the appliance by pressing the ON/OFF button, shut off the water valve and unplug the appliance from the electricity socket. 9. Wait for a few minutes before removing the crockery, in order to avoid burns. Unload the racks, beginning with the lower level.

EN Measuring out the detergent A good wash results in the lengthening of the wash cycle. Delayed start The start of the wash cycle may be delayed for a period of time between 1 and 24 hours. 1. After selecting the desired wash cycle and any other options, press the DELAYED START button: the corresponding indicator light will illuminate. Use the same button to select the time at which you wish the wash cycle to begin (after a period of 1 to 24 hours).

2. Confirm your selection using the Start/Pause button; the countdown will begin. The selected delay period indicator light is displayed and the Start/Pause button stops flashing (the light becomes fixed instead). 3. When the set time has elapsed, a long beep sounds, the DELAYED START indicator light switches off and the wash cycle begins. To deselect the DLEAYED START option, press the DELAYED START button repeatedly until the text OFF appears. The Delayed Start function cannot be set once the wash has been started. The MULTI-FUNCTIONAL TABLETS option remains set for subsequent wash cycles if it is not deselected. The use of tablets is only recommended for models which offer the MULTI-FUNCTIONAL TABLETS option. This option is not recommended for use with wash cycles which do not specify the use of multi-functional tablets (see Table of options).

This option is incompatible with the following wash cycle: Soak. 19 Wash cycles If the crockery is only lightly soiled or if it has been rinsed with water before being placed in the dishwasher, reduce the amount of detergent used accordingly. EN Shutting off the water and electricity supplies â Turn off the water tap after every wash cycle to avoid leaks. â Always unplug the appliance when cleaning it and when performing maintenance work. Clean the water inlet filter at the tap outlet regularly. - Turn off the water tap. - Unscrew the end of the water inlet hose, remove the filter and clean it carefully under running water. - Replace the filter and screw the water hose back into position. Cleaning the dishwasher â The external surfaces of the machine and the control panel may be cleaned using a non-abrasive cloth which has been dampened with water. do not use solvents or abrasive products. â Any marks on the inside of the appliance may be removed using a cloth dampened with water and a little vinegar.

Cleaning the filters The filter assembly consists of three filters which remove food residues from the washing water and then recirculate the water. They should be cleaned if you wish to achieve the best results in every wash. clean the filters regularly. The dishwasher should not be used without filters, or if the filter is loose. â After several washes, check the filter assembly and if necessary clean it thoroughly under running water, using a non-metallic brush and following the instructions below: 1.

@@@ Inspect the trap and remove any food residue. @@@@The two sprayer arms may both be removed. @@@@The lower sprayer arm can be removed by pulling it upwards. @@@@If this precaution is not taken, the water inlet could become blocked and damage the dishwasher. Leaving the machine unused for extended periods â Disconnect the appliance from the electricity supply and shut off the water tap.

â Leave the door of the appliance ajar. â When you return, run a wash cycle when the dishwasher is empty. * Only available in selected models. 22 Precautions and advice This appliance was designed and manufactured in compliance with current international safety standards. The following information has been provided for safety reasons and should therefore be read carefully. Saving energy and respecting the environment Saving water and energy â Only begin a wash cycle when the dishwasher is full. While waiting for the dishwasher to be filled, prevent unpleasant odours using the Soak cycle (see Wash cycles). â Select a wash cycle which is suited to the type of crockery and to the soil level of the crockery using the Table of wash cycles: - For dishes with a normal soil level, use the Eco wash cycle, which guarantees low energy and water consumption levels. - If the load is smaller than usual activate the Half load option* (see Start-up and use). â If your electricity supply contract gives details of electricity saving time bands, run wash cycles during the periods when a lower tariff is applied.

The Delayed start* button (see Startup and use) helps you organise the wash cycles accordingly. EN General safety â This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. â Children should be supervised to ensure that they do not play with the appliance. â The appliance was designed for domestic use inside the home and is not intended for commercial or industrial use.



[You're reading an excerpt. Click here to read official HOTPOINT LSFA 935 EU/HA user guide](http://yourpdfguides.com/dref/5005417)
<http://yourpdfguides.com/dref/5005417>

⚠ The appliance must be used by adults only, to wash domestic crockery in accordance with the instructions in this manual. ⚠ The appliance must not be installed outdoors, even in covered areas. It is extremely dangerous to leave the machine exposed to rain and storms. ⚠ Do not touch the appliance when barefoot. ⚠ When unplugging the appliance always pull the plug from the mains socket, do not pull on the cable. ⚠ The water supply tap must be shut off and the plug should be removed from the electrical socket before cleaning the appliance or carrying out any maintenance work.

⚠ If the appliance breaks down, do not under any circumstances touch the internal parts in an attempt to perform the repair work yourself. ⚠ Never touch the heating element. ⚠ Do not lean or sit on the open door of the appliance: this may cause the appliance to overturn. ⚠ The door should not be left open as it may create a dangerous obstacle. ⚠ Keep detergent and rinse aid out of reach of children.

⚠ The packaging material should not be used as a toy. Phosphate-free and chlorine-free detergents containing enzymes ⚠ We strongly recommend that you use detergents that do not contain phosphates or chlorine, as these products are harmful to the environment. ⚠ Enzymes provide a particularly effective action at temperatures around 50°C, and as a result detergents containing enzymes can be used in conjunction with low-temperature wash cycles in order to achieve the same results as a normal 65°C wash cycle. ⚠ To avoid wasting detergent, use the product in appropriate quantities based on the manufacturer's recommendations, the hardness of the water and the soil level and quantity of crockery to be washed. ⚠ The crossed-out dustbin is marked on all products to remind the owner of their obligations regarding separated waste collection.

For further information relating to the correct disposal of household appliances, owners may contact the relevant public authority or the local appliance dealer. Assistance Before contacting Assistance: ⚠ Check whether the problem can be resolved using the Troubleshooting guide (see Troubleshooting).

⚠ Restart the programme to check whether the problem has ceased to exist. ⚠ Never use the services of unauthorised technicians. ⚠ * Only available in selected models. ⚠ Problem: The dishwasher does not start or cannot be controlled EN Possible causes / Solutions: ⚠ Switch off the appliance by pressing the ON/OFF button, switch it back on after approximately one minute and reset the program. ⚠ The appliance has not been plugged in properly. ⚠ The dishwasher door has not been shut properly. ⚠ The lock was released. Strongly push the door until a ⚠ clacking noise is heard.

The filter is clogged up with food residues. The door won't close No water drains out from the dishwasher. The dishwasher makes excessive noise. ⚠

The dishes are rattling against each other or against the sprayer arms. ⚠ An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers (see Start-up and use). ⚠ The level of the refined salt is low or the dosage setting is not suited to the hardness of the water (see Rinse aid and salt). ⚠ The lid on the salt dispenser is not closed properly. ⚠ The rinse aid has been used up or the dosage is too low. ⚠ The rinse aid dosage is too high. ⚠ ⚠ ⚠ ⚠ ⚠ ⚠ ⚠ ⚠ ⚠ A wash cycle without a drying program has been selected.

The rinse aid has been used up or the dosage is too low (see Rinse aid and salt). The rinse aid dispenser setting is not suitable. The crockery is made from non-stick material or plastic. The dishes and glasses are covered in a white film or limescale deposits. The dishes and glasses are streaked or have a bluish tinge.

The crockery has not been dried properly. The dishes are not clean. The racks are overloaded (see Loading the racks). The crockery has not been arranged well. The sprayer arms cannot move freely.

The wash cycle is too gentle (see Wash cycles). An excessive amount of foam has been produced: the detergent has not been measured out correctly or it is not suitable for use in dishwashers (see Start-up and use). ⚠ The lid on the rinse aid compartment has not been shut correctly. ⚠ The filter is dirty or blocked (see Care and maintenance). ⚠ The refined salt level is low (see Rinse aid and salt). There is no water in the mains supply. the water inlet hose is bent (see Installation). Turn on the tap and the appliance will start after a few minutes. The appliance lock has been activated because no action was taken when the beeps* sounded. Switch off the appliance using the ON/OFF button, turn on the tap and switch the appliance back on after 20 seconds by pressing the same button.

Re-program the appliance and restart the wash cycle. The dishwasher does not take any water in - Tap shut-off alarm ⚠ ⚠ ⚠ (the display shows A 6). Water inlet hose alarm / Water inlet ⚠ Switch off the appliance by pressing the ON/OFF button. Shut off the water tap to filter blocked eliminate the risk of flooding and remove the plug from the electrical socket. (the display shows A 7). Make sure the water inlet filter has not become blocked by impurities (see ⚠ Care and maintenance chapter). .



[You're reading an excerpt. Click here to read official HOTPOINT LSFA 935 EU/HA user guide](http://yourpdfguides.com/dref/5005417)
<http://yourpdfguides.com/dref/5005417>